



# Dell Inspiron M5110 Keyboard Replacement

The instructions in this guide will detail how to remove the keyboard of a Dell Inspiron M5110.

Written By: Cody Flynn



## INTRODUCTION

This guide will walk the reader through the steps necessary to remove the keyboard on a Dell Inspiron M5110. This is necessary when the keyboard stops functioning to its full ability, as well as when the reader desires to replace the keyboard.

### TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

## Step 1 — Battery




- Shut down the computer and turn it upside down.

## Step 2



- Slide both of the battery release latches on the bottom of the device in towards the center of the computer.

## Step 3

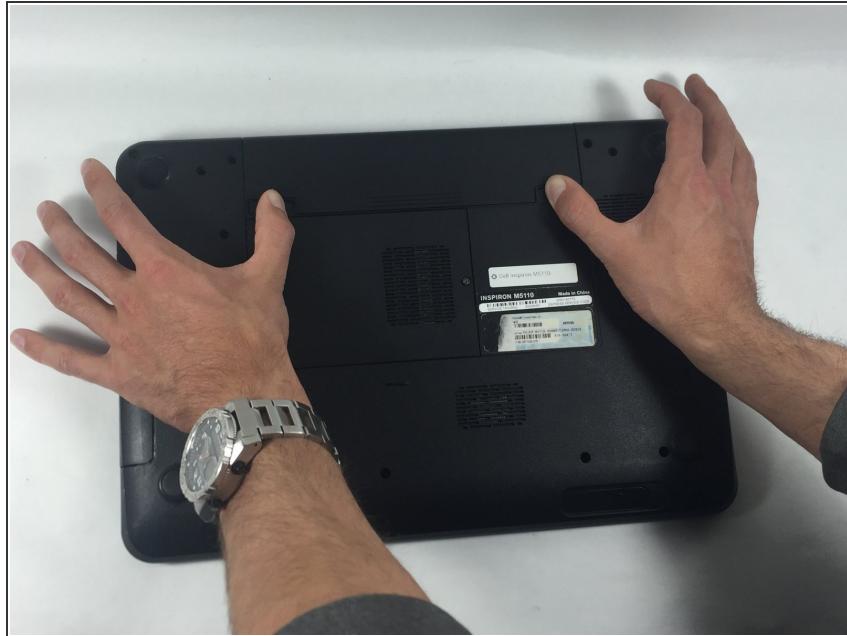


- Slide and lift the battery up and out from the device.

## Step 4 — Keyboard




- Open the computer and push the screen back as far as possible.

## Step 5

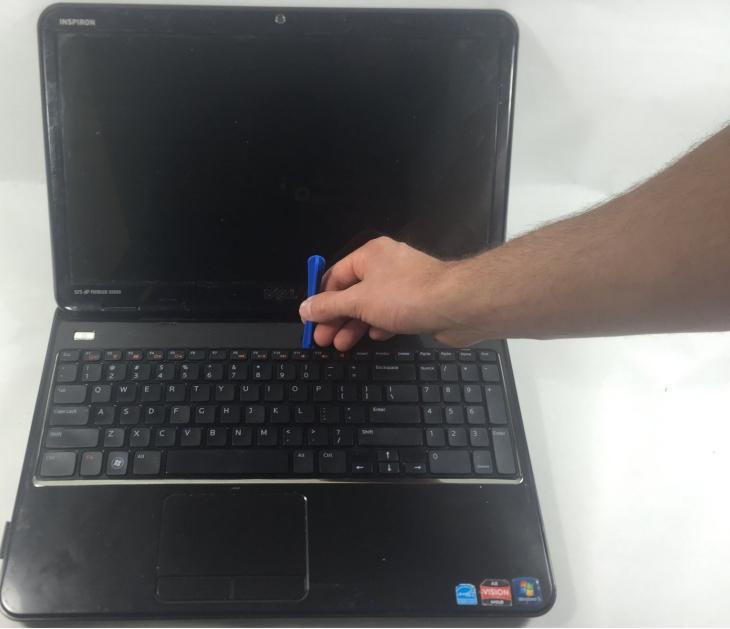

- Slide a plastic opening tool into the slots on the top of the keyboard.

## Step 6

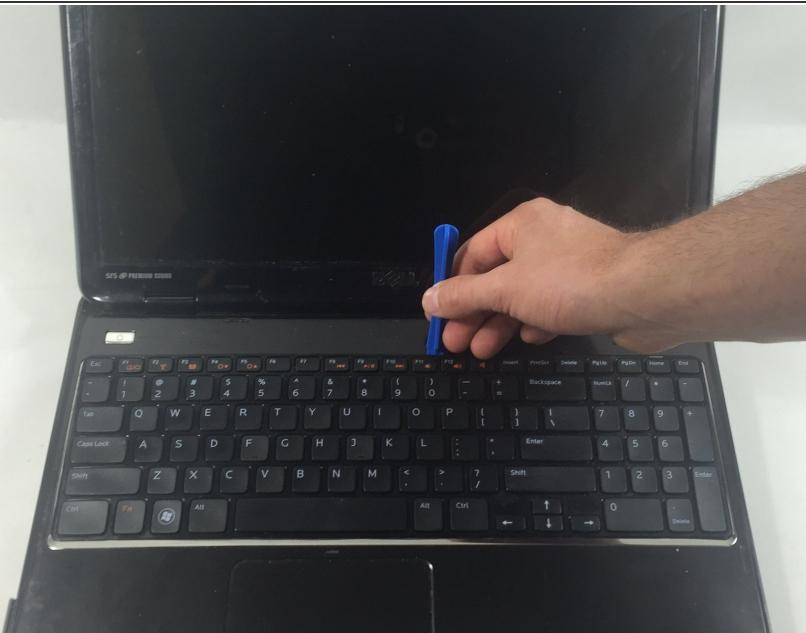

- Pry the keyboard away from the device using the plastic opening tool.

## Step 7




- Lift and slide the keyboard towards the screen to remove the tabs on the keyboard from the slots on the palmrest.

## Step 8



- Flip the keyboard over and place it on the front of the device making sure not to pull out the keyboard cable.

## Step 9

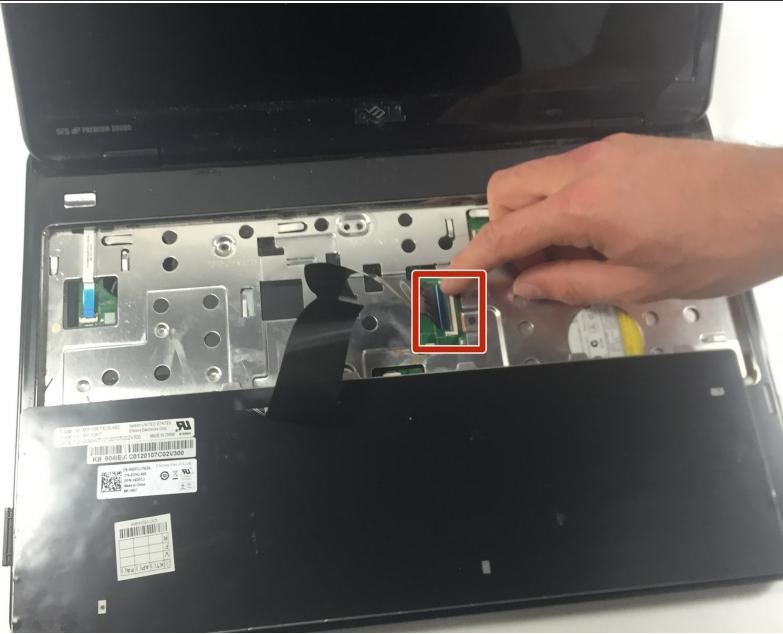

- Lift up the connector latch and remove the keyboard cable. The keyboard is now free from the device.

To reassemble your device, follow these instructions in reverse order.