




Dell Inspiron N4050 Teardown

Dell Inspiron N4050 Teardown


Written By: Marcos Mora

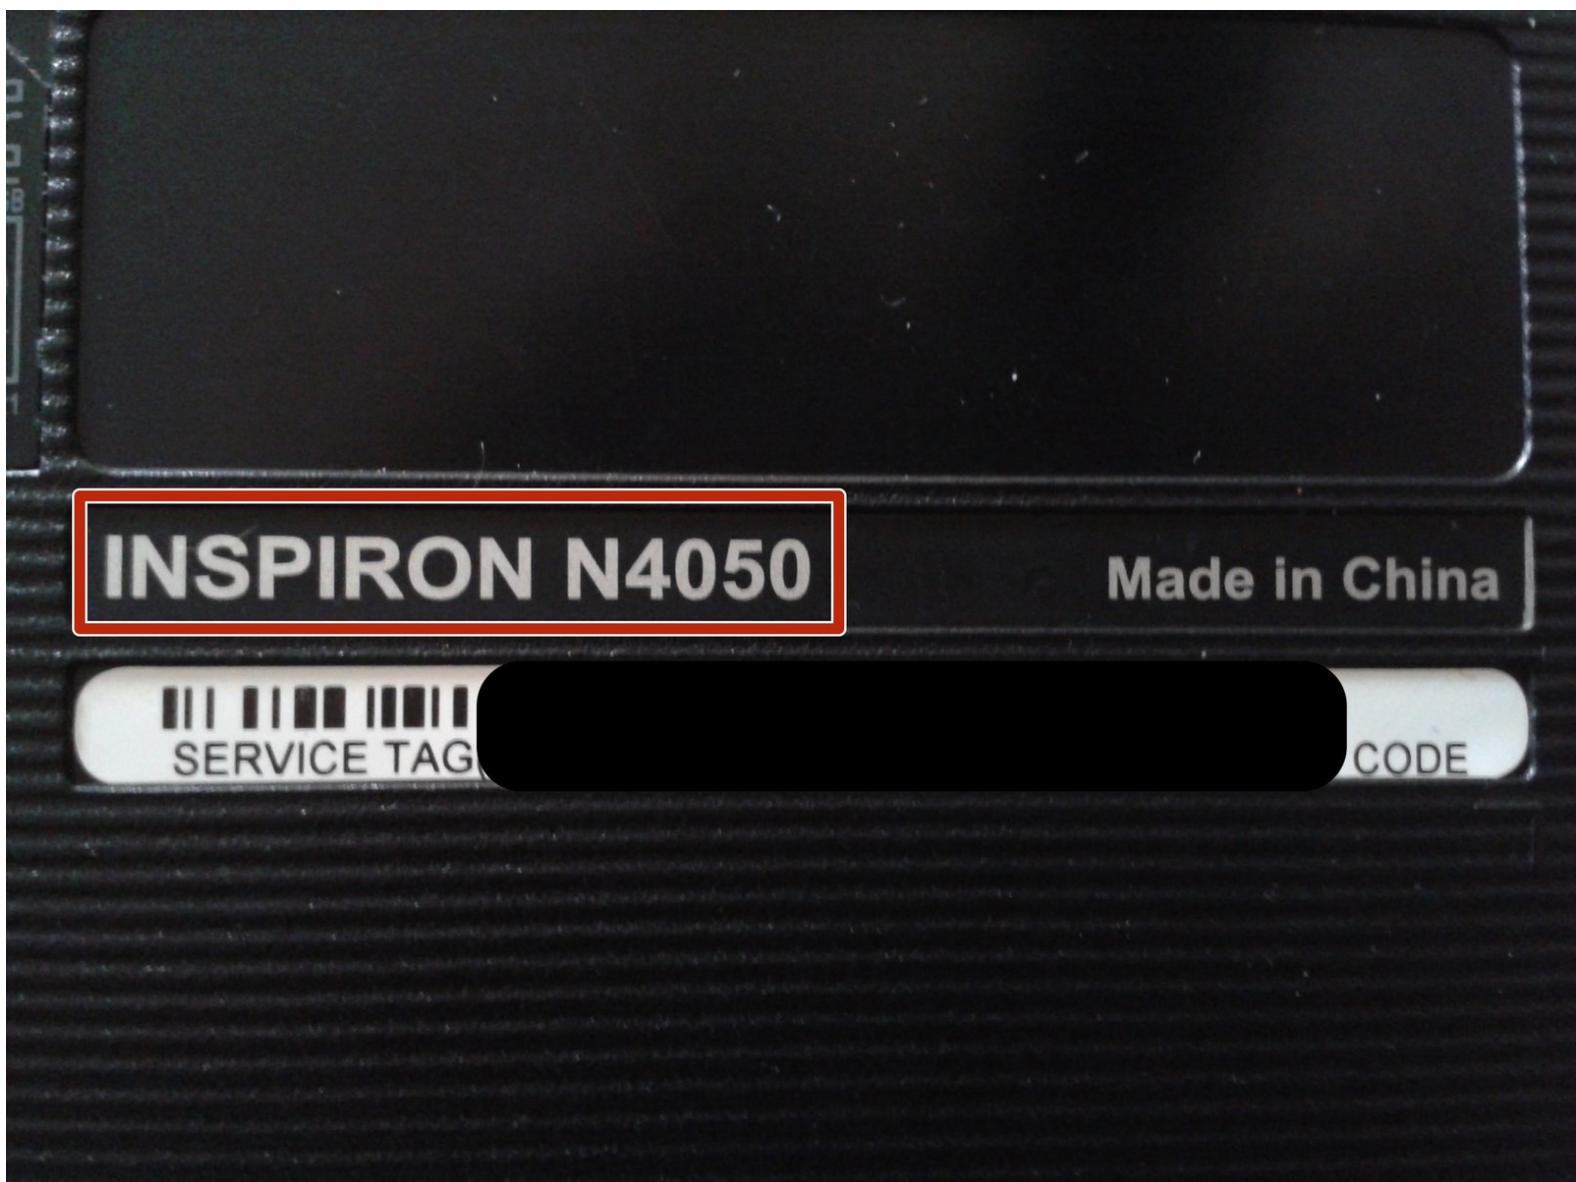

INTRODUCTION

Here I show you how to disassemble a Dell Inspiron N4050 Laptop

Step 1 — Removing the battery part 1

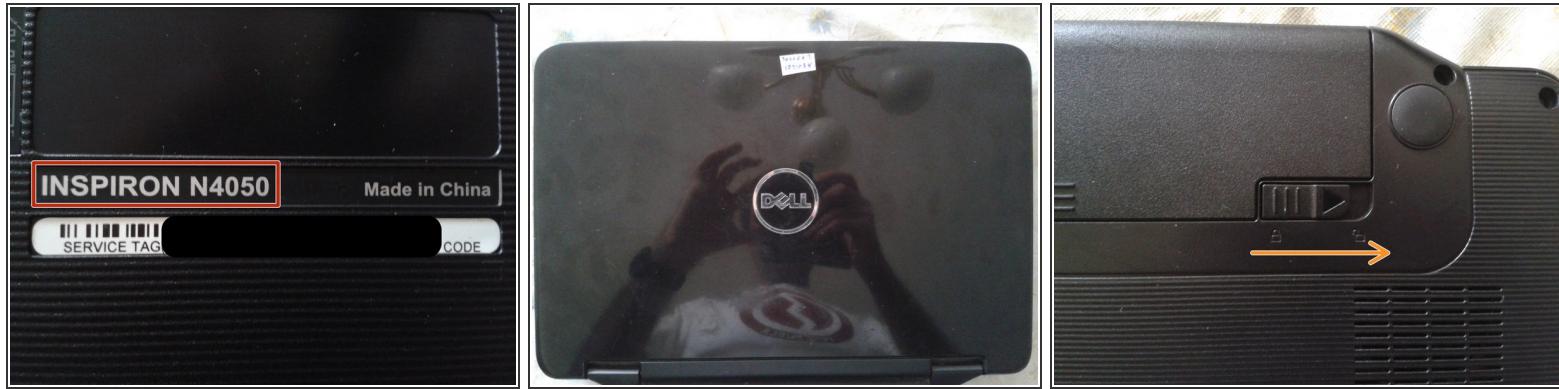

- Check your laptop model
- Turn it over to work on the bottom of the laptop
- Open the first latch for the battery

Step 2 — Remove the battery part 2



- Open the second latch in the direction that the arrow is pointing. This requires more effort than the first one.
- The battery will come out a little. Finish removing it gently.

Step 3 — Remove the bottom screws





- Remove the 8 screws.
- Use a Phillips 0 screwdriver.

Step 4 — Removing the keyboard part 1



- Turn the laptop with the keyboard facing up.
- Use a flat-blade screwdriver to separate the keyboard from the computer case.
- Tilt the keyboard as shown in the image. Do not remove it completely because it is connected to a cable.

Step 5 — Remove the cable that connects the keyboard to the motherboard

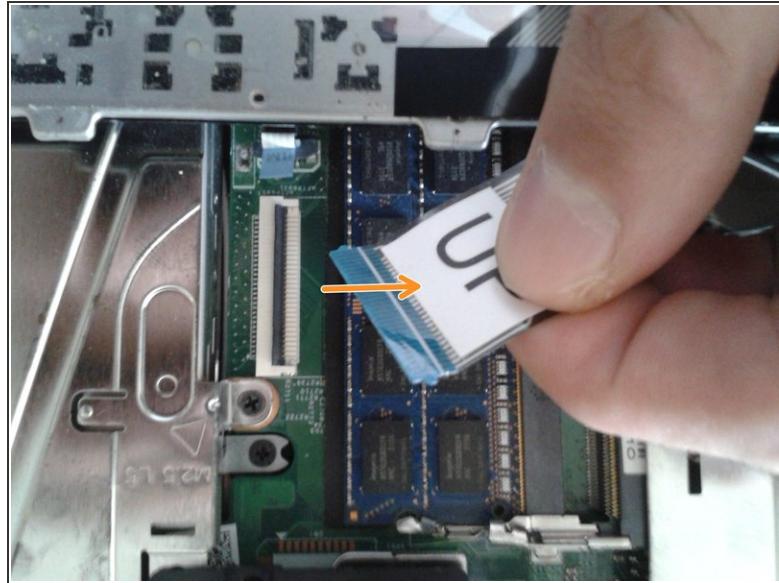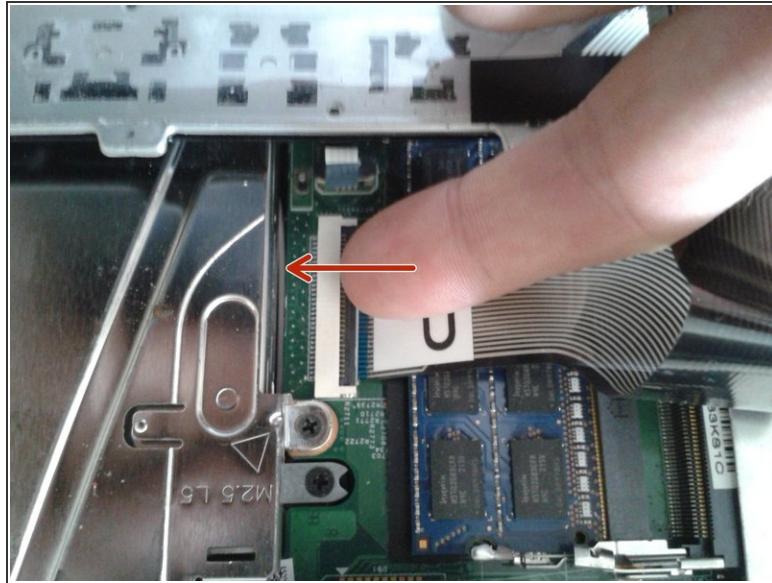


- Remove the clip that holds the cable to the motherboard.
- Remove the cable.

Step 6 — Remove the RAM




- Remove the memory cards by moving the retaining clips in the direction that the arrows are pointing.

Step 7 — Remove the screws

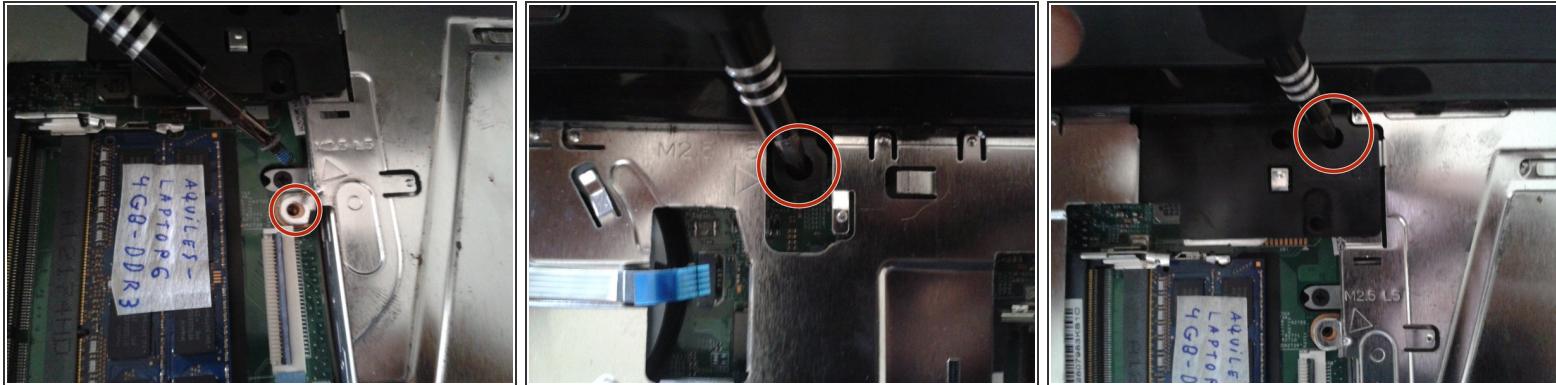

- Remove the 3 screws.

Step 8 — Remove the small cables

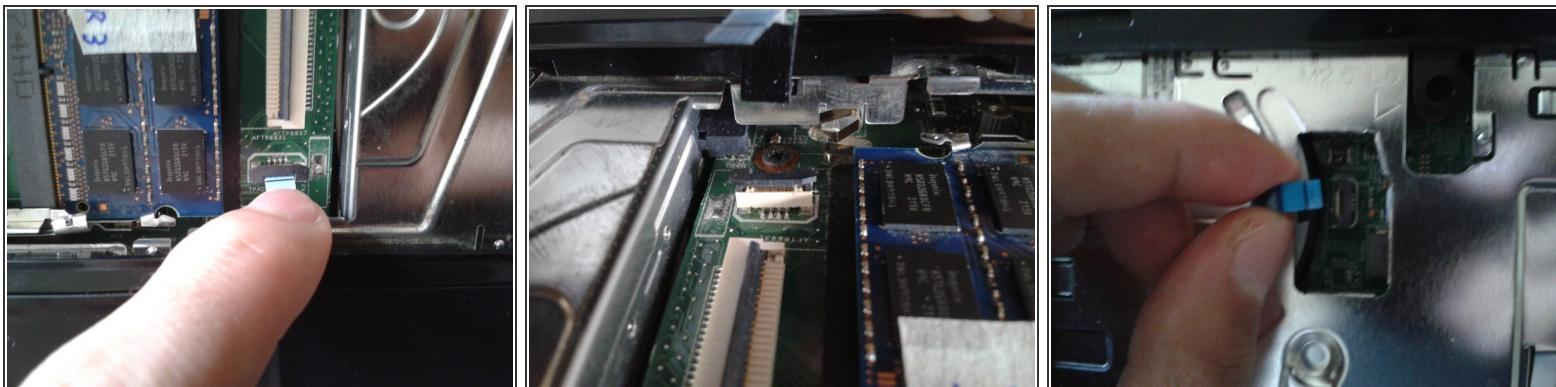


- Remove the 2 small cables.

Step 9



- Use a plastic tool to separate the top of the laptop.

Step 10 — Internal parts of the laptop

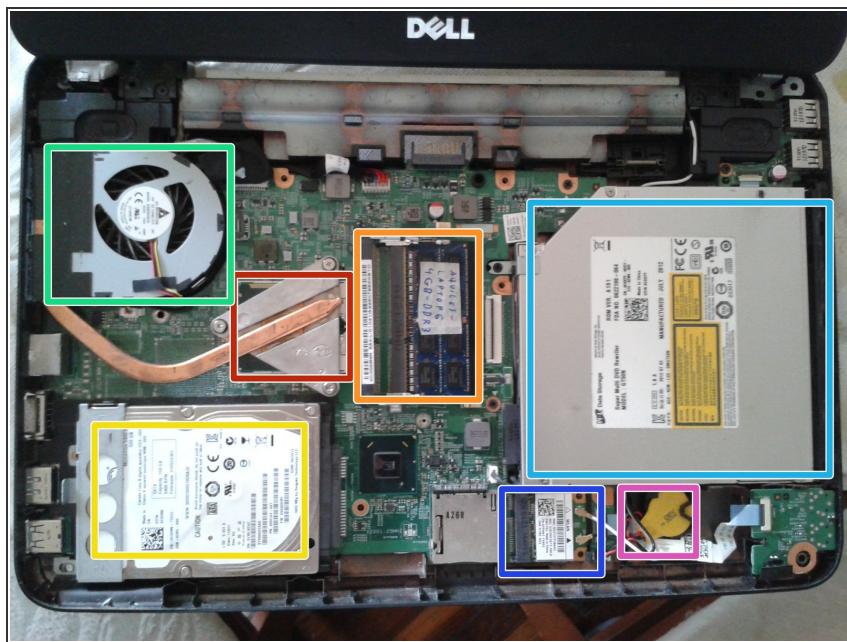

- CPU
- DDR3 RAM memory, 2 slots available
- SATA hard disc
- Heatsink
- DVD unit
- Wireless network card
- Battery for the internal clock

To reassemble your device, follow these instructions in reverse order.