



Dell Inspiron N4110 RAM Replacement

This guide will assist users in locating and replacing the RAM for the Dell Inspiron N4110 Laptop.

Written By: Olivia



INTRODUCTION

This replacement guide will not take much time. It requires replacement or upgraded RAM.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery



! Make sure the laptop is off and unplugged before starting this step.

- Locate the battery on the underside of the laptop.
- Push the two battery clips following the direction of the arrows.

Step 2



- Push upward from the base of the battery.

Step 3



- Pull battery away from computer until it is fully removed.

Step 4 — RAM




- Locate and unscrew the one 2.5x5 mm screw on the cover.
- (i)* The screw does not detach from the cover. Make sure the screw is fully unscrewed before attempting to remove the cover.

Step 5




- Remove RAM cover from the laptop.

Step 6

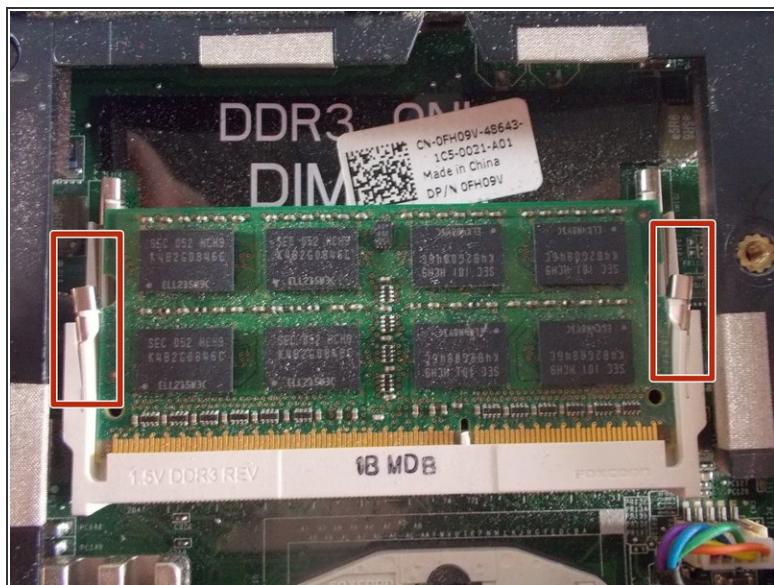

- Use your fingers to separate the two metal clips from the RAM.
- The RAM will lift up when properly separated. Do not force the RAM out of the clips.

Step 7

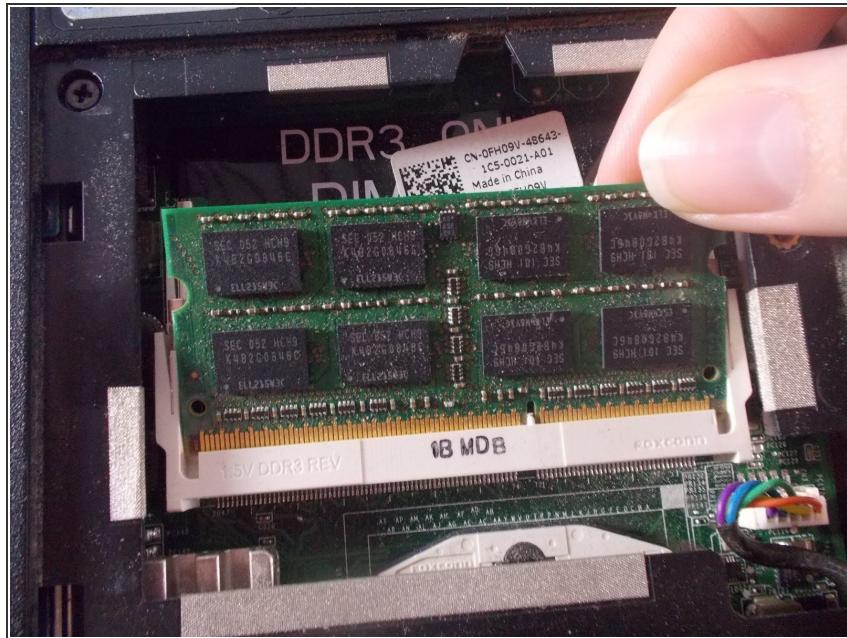

- Remove the RAM from the computer.
- ⚠** Be careful as to not touch the metal on the bottom of the RAM. This can cause damage.
- ℹ** The RAM should be placed on a non-conductive surface.

To reassemble your device, follow these instructions in reverse order.