



Dell Inspiron N4110 Screen Replacement

This guide will assist user in replacing the screen of a Dell Inspiron N4110 laptop.

Written By: Abigail Keith



INTRODUCTION

Is your laptop screen cracked or broken? This guide will help you to replace the screen in several easy steps.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery



⚠ Make sure the laptop is off and unplugged before starting this step.

- Locate the battery on the underside of the laptop.
- Push the two battery clips following the direction of the arrows.

Step 2



- Push upward from the base of the battery.

Step 3



- Pull battery away from computer until it is fully removed.



Step 4 — Screen



- Use your hands to remove the plastic cover from around the screen.


(i) This can seem difficult, but it can be done.

Step 5

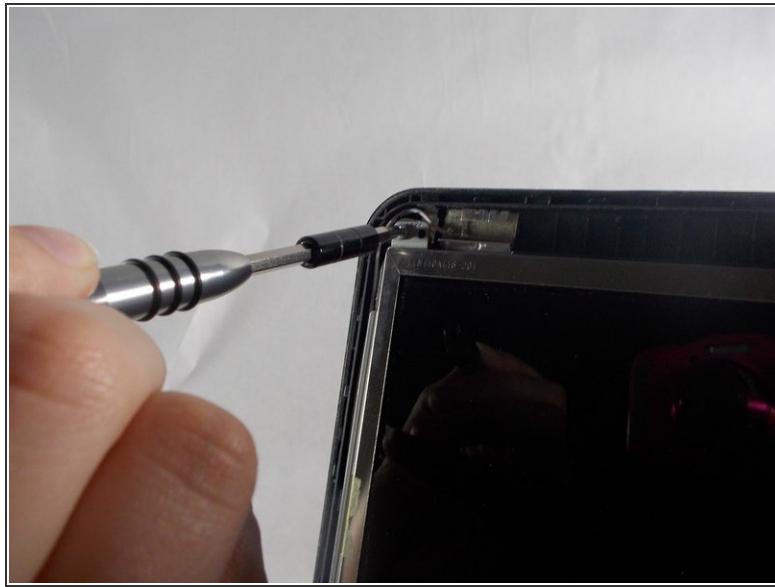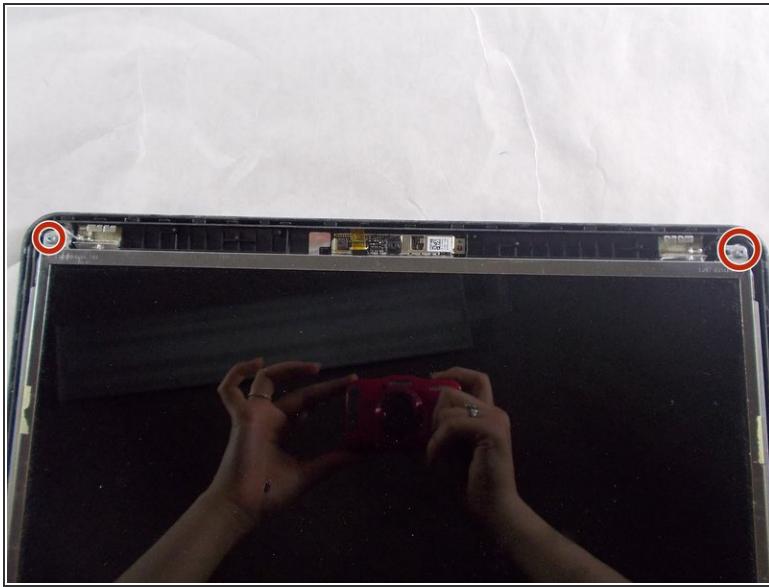

- Unscrew the two 2.5x4 mm screws from the top of the screen.

Step 6

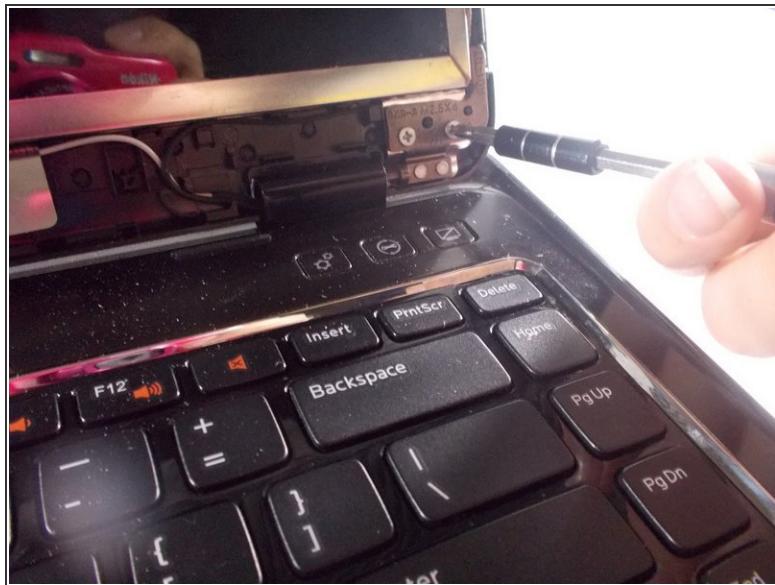

- Loosen the four 2.5x4 mm screws from the base of the screen.
- This will allow the screen to lift from inside the top of the case.

Step 7



- Unscrew the four 2x3 mm screws from the two sides on both the top and bottom.

Step 8



- Use tweezers to peel the webcam away from the top of the laptop.

(i) The webcam is only held in place by a webcam, this is easy to pull away from the screen.

Step 9



- Lift the adhesive flap from the cord that connects the computer to the screen.
- You can then disconnect the cord from the screen.

Step 10



- The screen can now be fully removed from the computer.

To reassemble your device, follow these instructions in reverse order.