




Dell Inspiron N5010 Battery Replacement

How to replace the battery on the Dell Inspiron N5010.

Written By: Terrence15

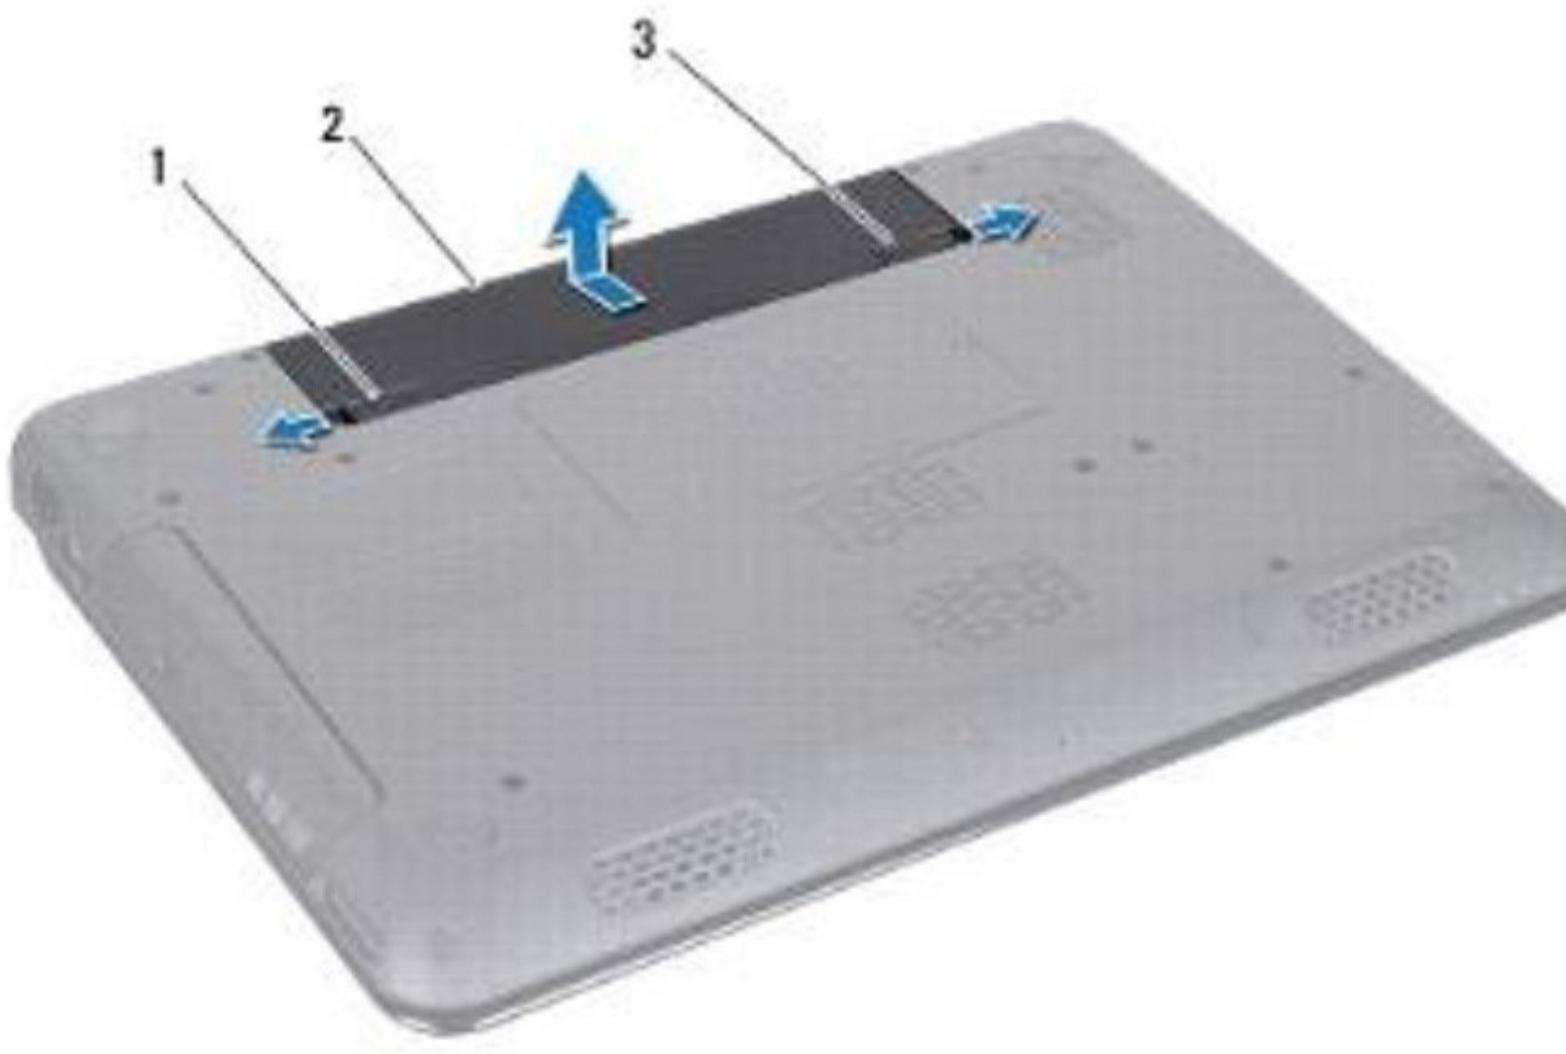

INTRODUCTION


In this guide, we will be showing you how to remove and replace the Battery.



PARTS:

- [Dell Inspiron N3010, N4010, N5010 Replacement Laptop Battery \(1\)](#)

Step 1 — Turn Over the Computer

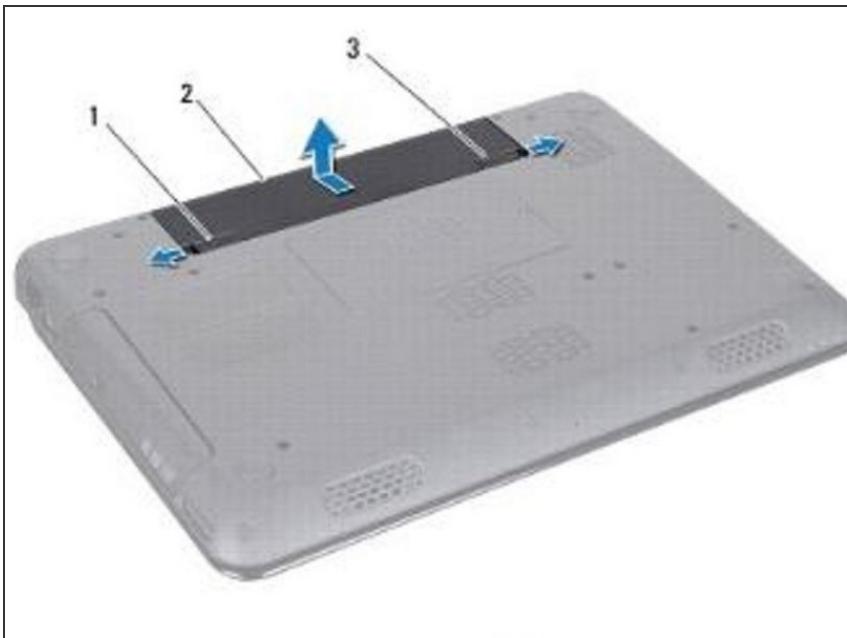


⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).

⚠️ **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Shut down the computer and turn it over.

Step 2 — Sliding the Battery Latch

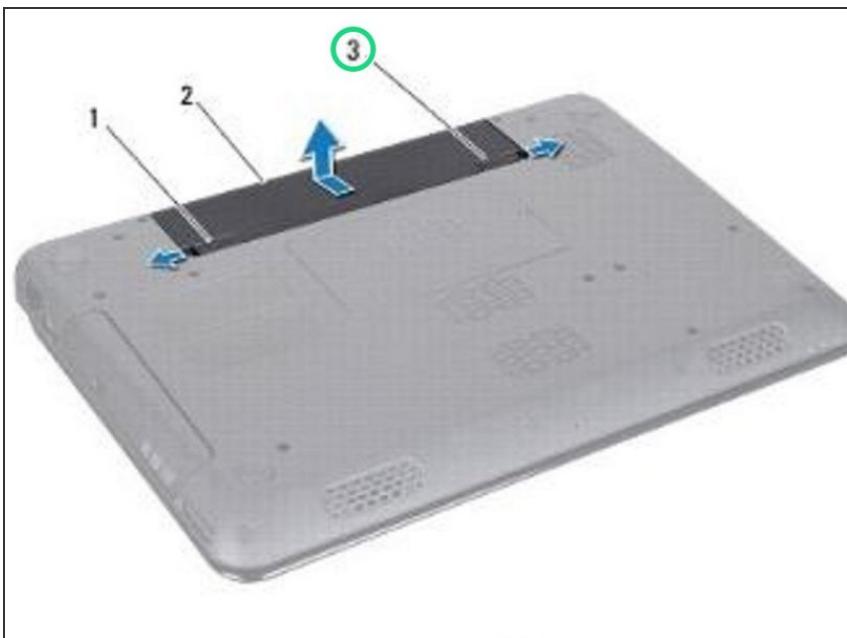


- Slide the battery lock latch to the unlock position.

Step 3 — Sliding the Battery Latch

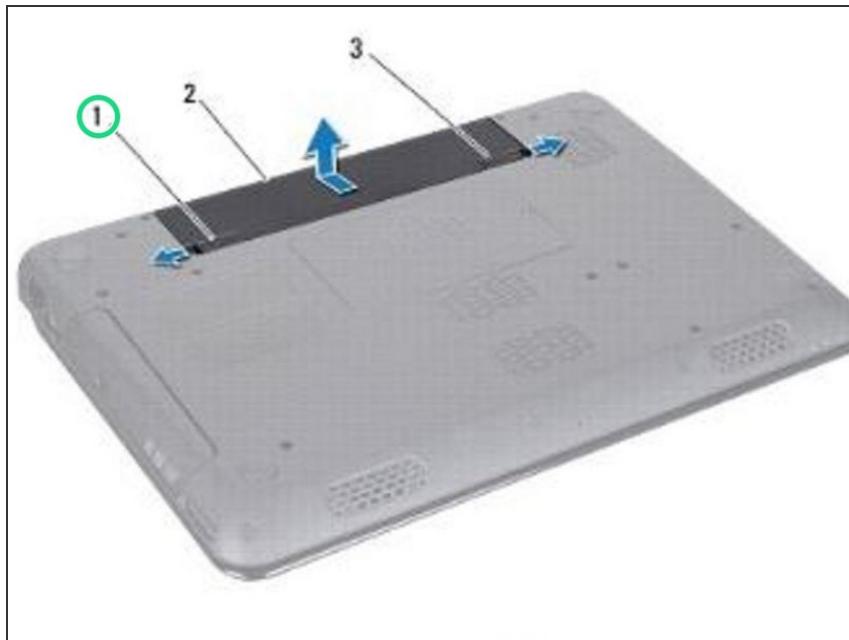


- Slide the battery release latch to the side.

Step 4 — Lifting the Battery

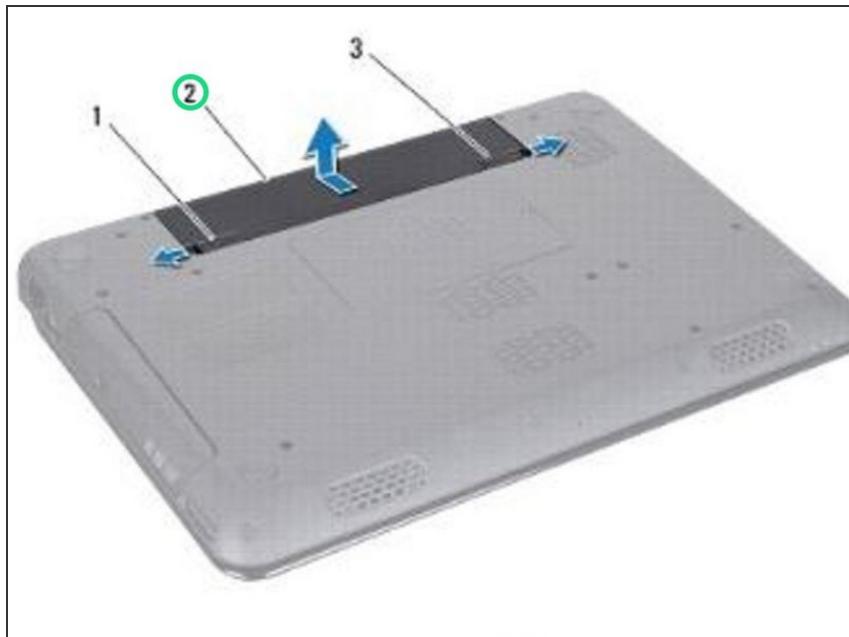


- Slide and lift the battery out of the battery bay.

Step 5 — Align the Tabs

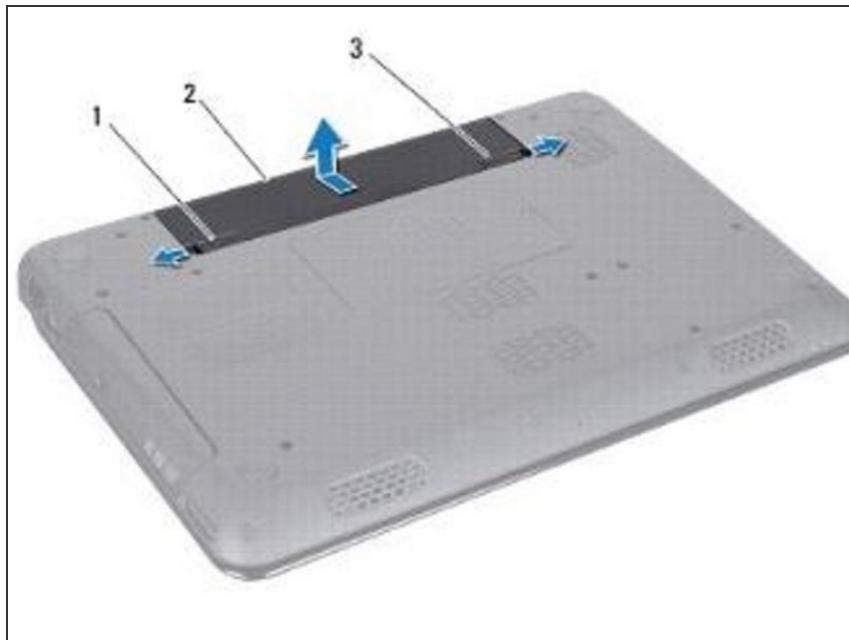


- Align the tabs on the **NEW** battery with the slots on the battery bay.

Step 6 — Sliding the Battery

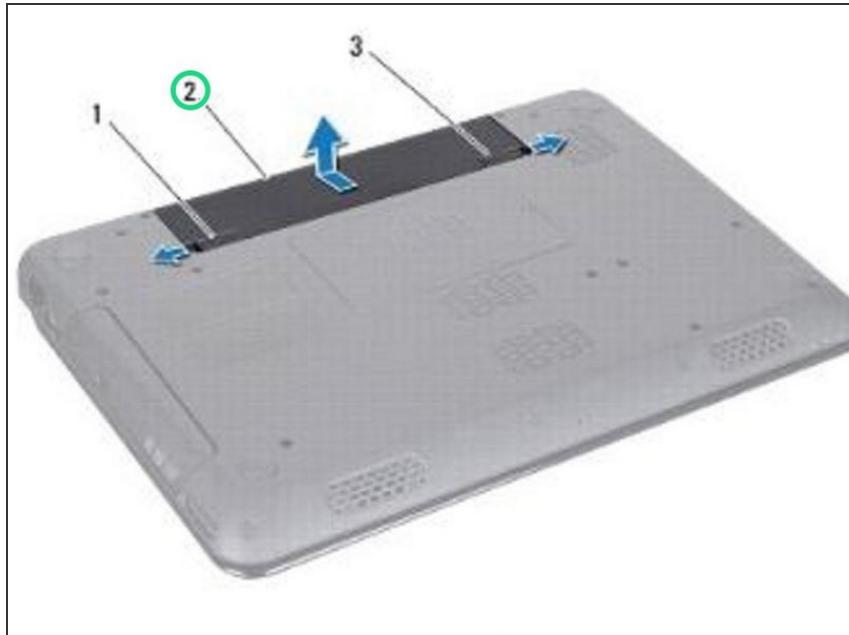

- Slide the battery into the battery bay until it clicks into place.

Step 7 — Sliding the Lock Latch

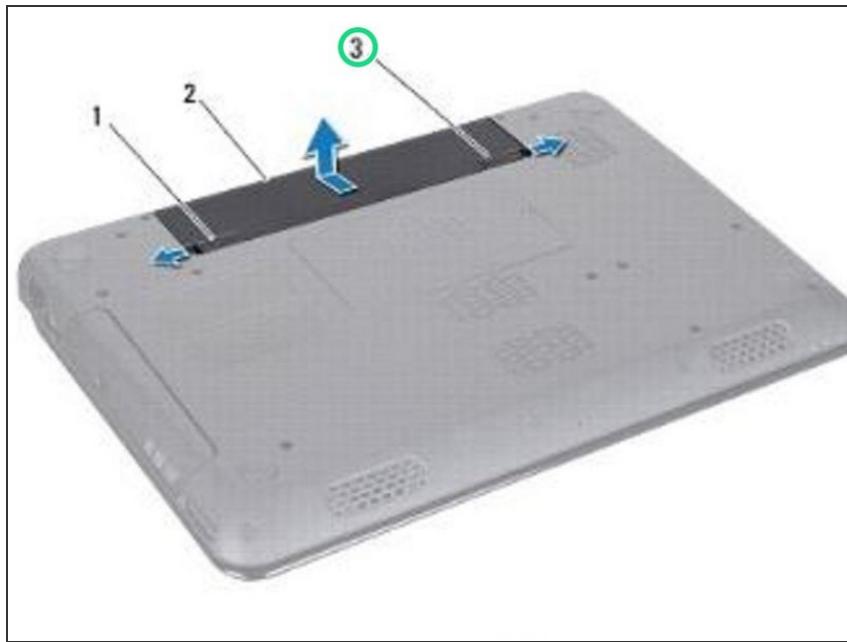

- Slide the battery lock latch to the lock position.