




Dell Inspiron N5010 Display Assembly Replacement

Written By: Terrence15

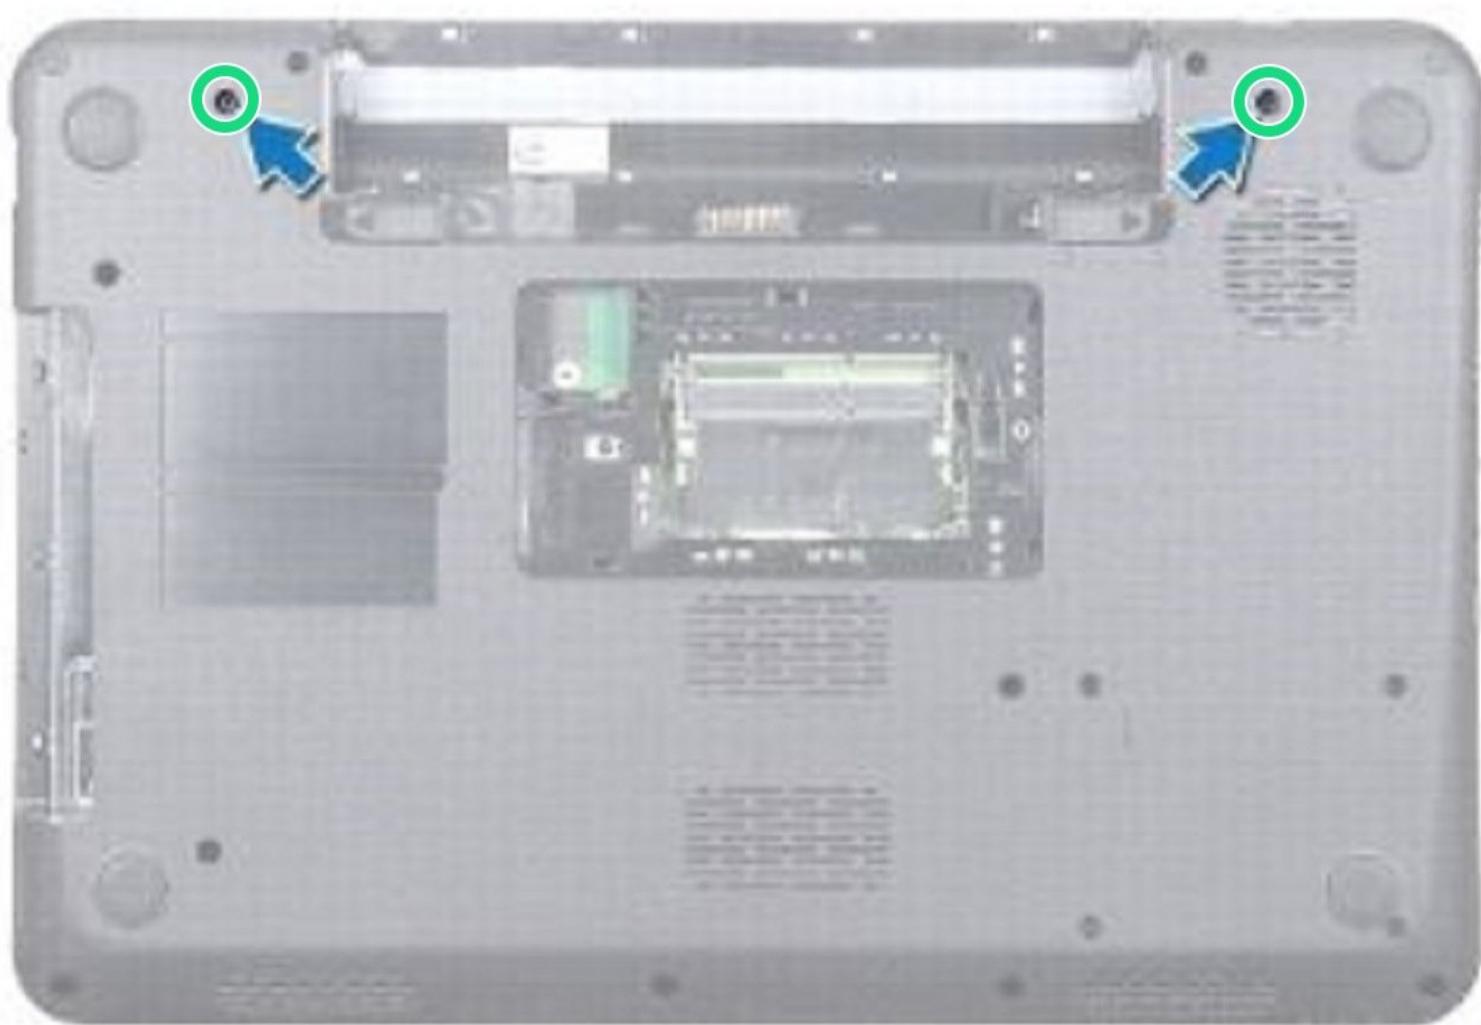

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Display Assembly.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Remove the Screws



⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).

⚠️ **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).

- Turn the computer over and remove the two screws.

Step 2 — Disconnect the Antenna Cables



- Disconnect the Mini-Card antenna cables from the Mini-Card.

Step 3 — Disconnect the Display Cable



- Disconnect the display cable from the connector on the system board and remove it from the routing guide.

Step 4 — Remove the Screws



- Remove the four screws (two on each side) that secure the display assembly to the computer base.

Step 5 — Removing the Display Assembly



- Lift and remove the display assembly out of the computer base.

Step 6 — Placing the Display Assembly



- Place the **NEW** display assembly in position and replace the four screws (two on each side) that secure the display assembly to the computer base.

Step 7 — Routing the Display Cable




- Route the display cable into the routing guide and connect the cable to the connector on the system board.

Step 8 — Connect the Antenna Cables



- Connect the Mini-Card antenna cables to the connectors on the Mini-Card.

Step 9 — Replace the Screws

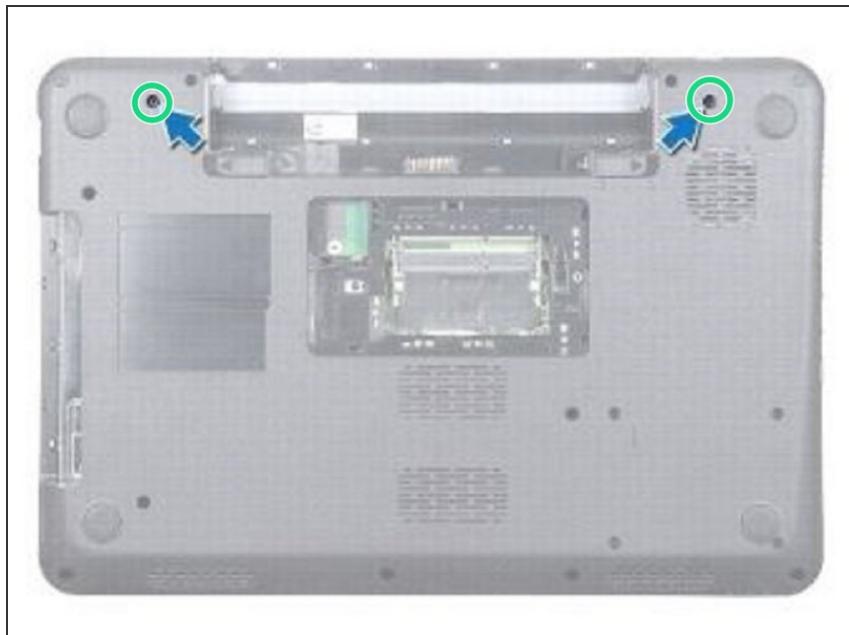

- Turn the computer over and replace the two screws at the bottom of the computer.