




# Dell Inspiron N5030 Display Assembly Replacement

Written By: Terrence15

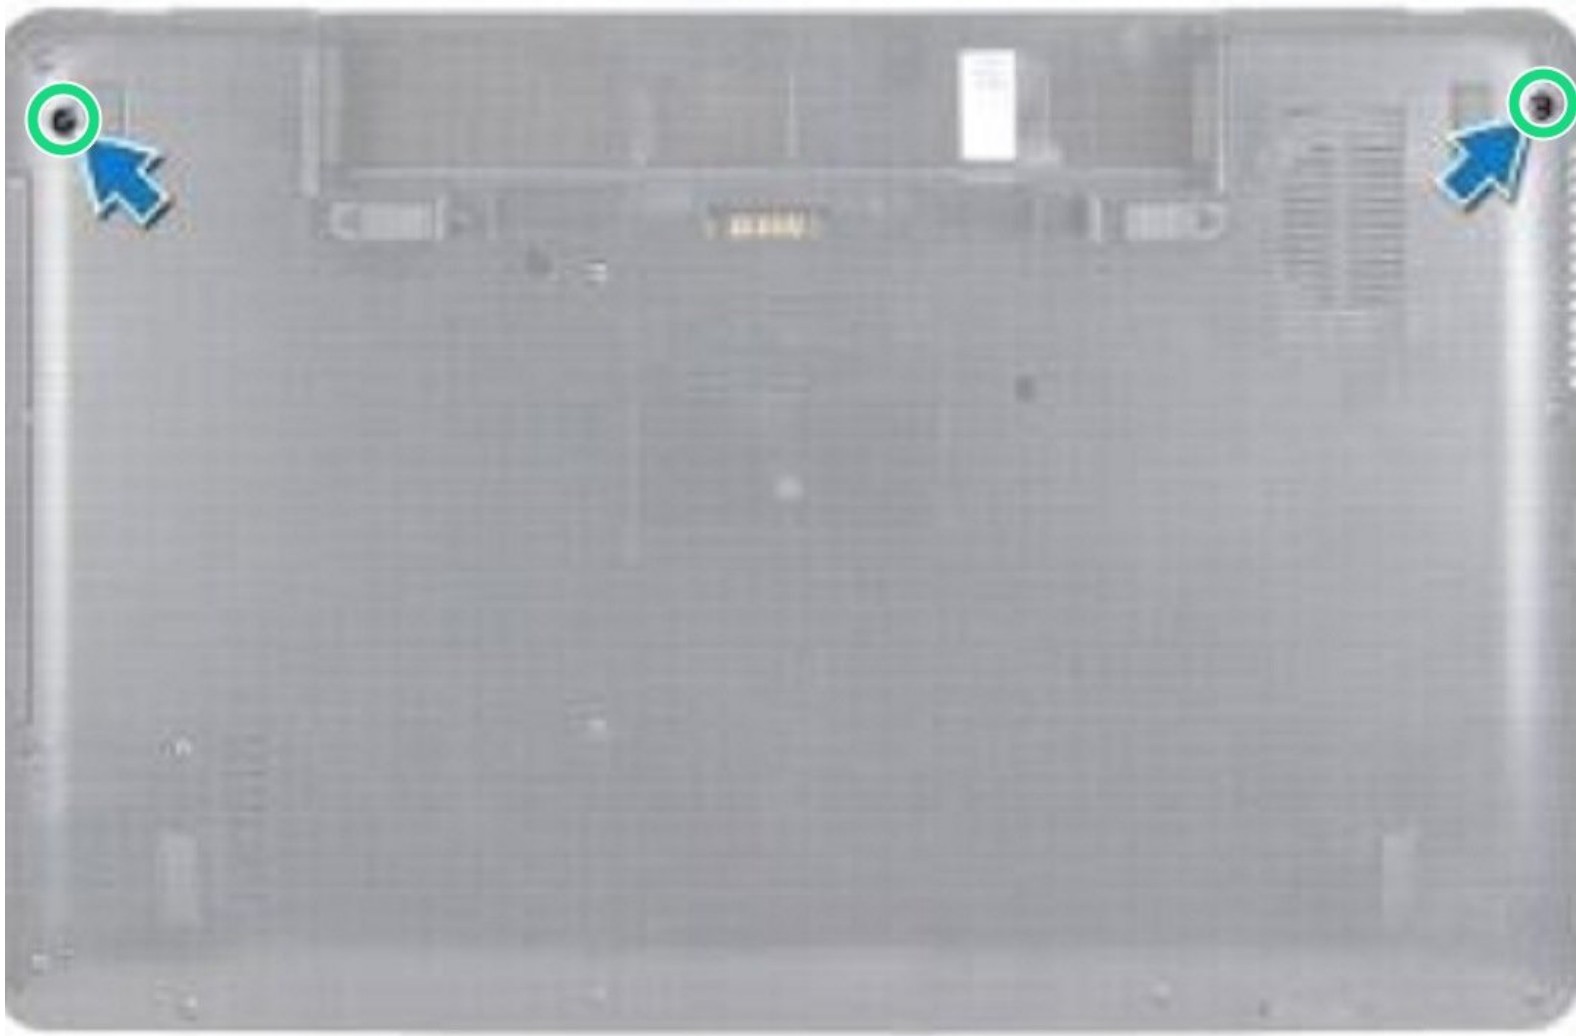

---

## INTRODUCTION


In this guide, we will be showing you how to remove and replace the Display Assembly.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Remove the Screws

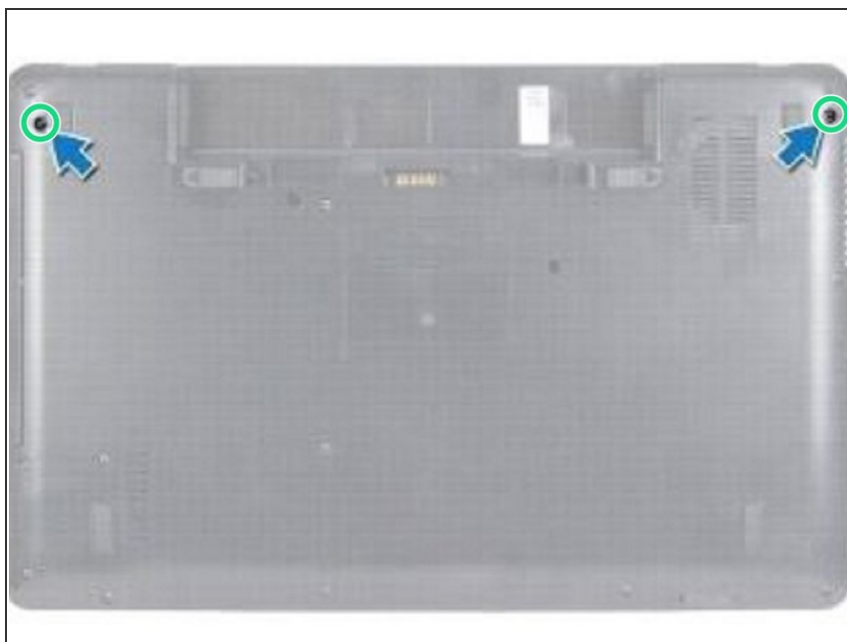

**WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).

**CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Remove the two screws that secure the display assembly to the base of the computer.

## Step 2 — Open the Display




- Turn the computer over and open the display as far as possible.

### Step 3 — Disconnect the Cable

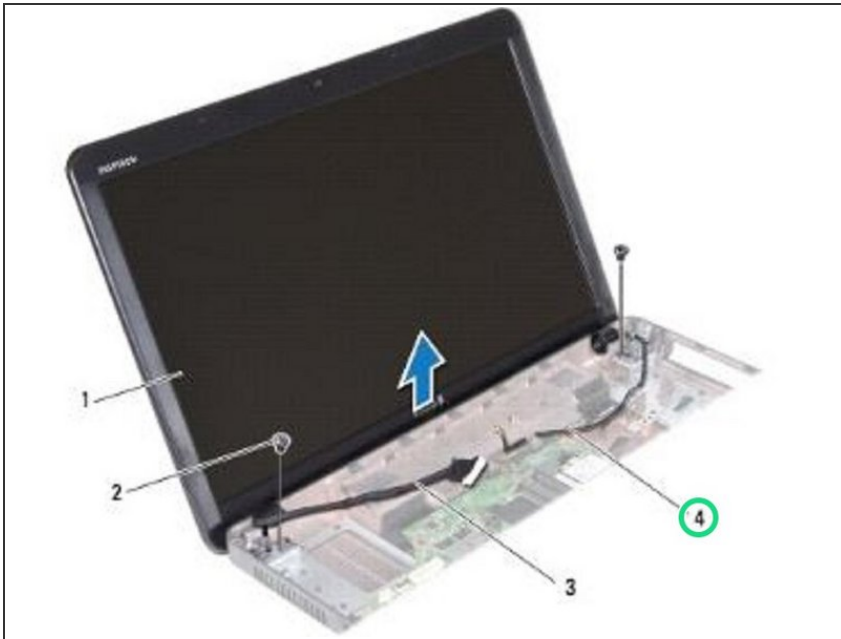


- Make a note of the Wireless Mini-Card antenna cable routing and disconnect the Wireless Mini-Card antenna cable from the Wireless Mini-Card.

### Step 4 — Disconnect the Display Cable

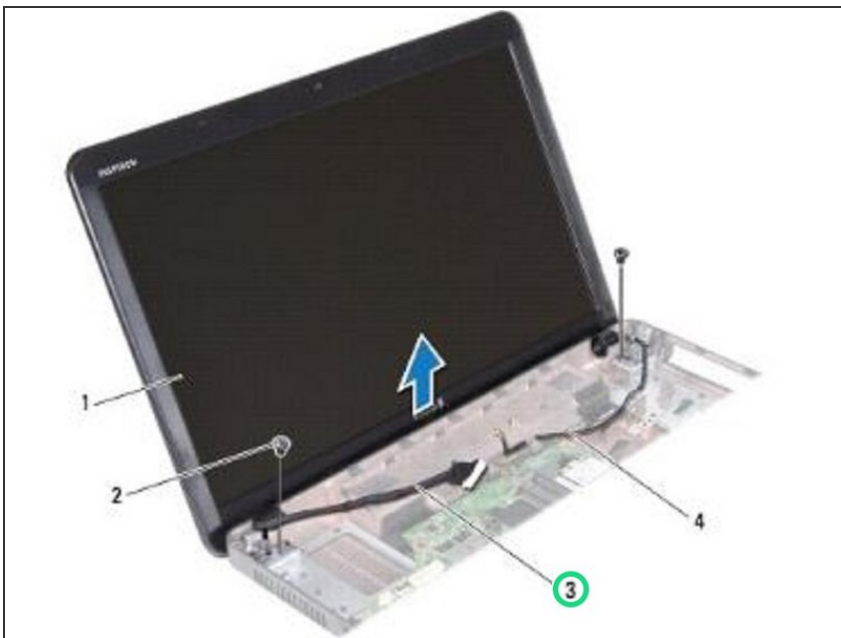

- Disconnect the display cable from the connector on the system board and remove it from the routing guide.

## Step 5 — Remove the Screws

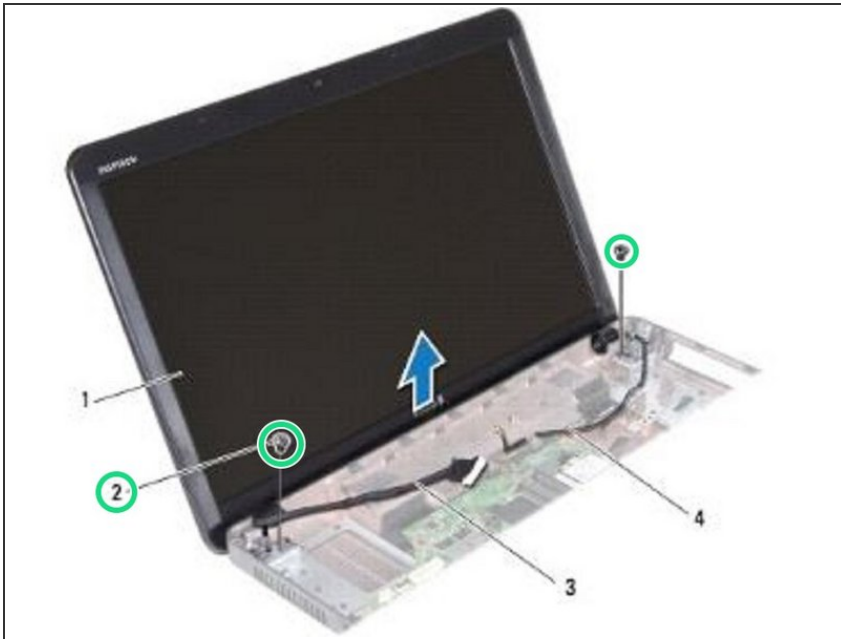

- Remove the two screws (one on each side) that secure the display assembly to the computer base.

## Step 6 — Remove the Display Assembly




- Lift and remove the display assembly out of the computer base.

## Step 7 — Placing the Display Assembly




- Place the **NEW** display assembly in position and replace the two screws (one on each side) that secure the display assembly to the computer base.

## Step 8 — Routing the Display Cable

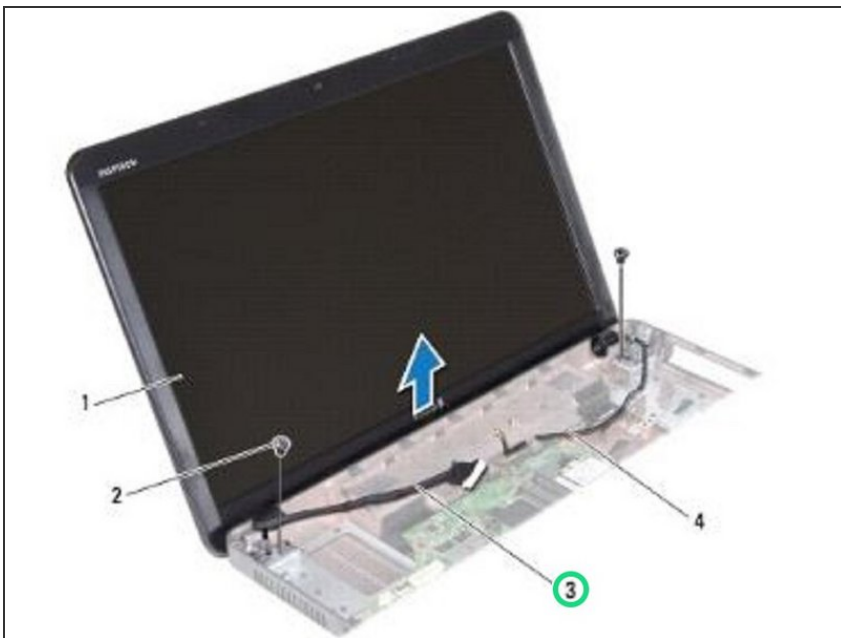


- Route the display cable into the routing guide and connect the display cable to the connector on the system board.

## Step 9 — Routing the Antenna Cable

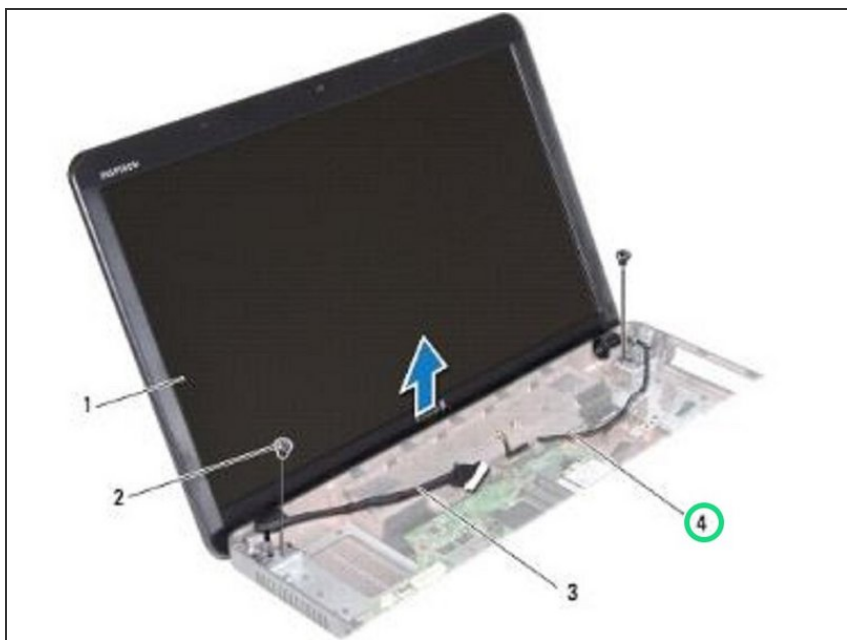

- Route the Mini-Card antenna cable into the routing guide and connect the Mini-Card antenna cable to the connector on the Mini-Card.

## Step 10 — Replace the Screws

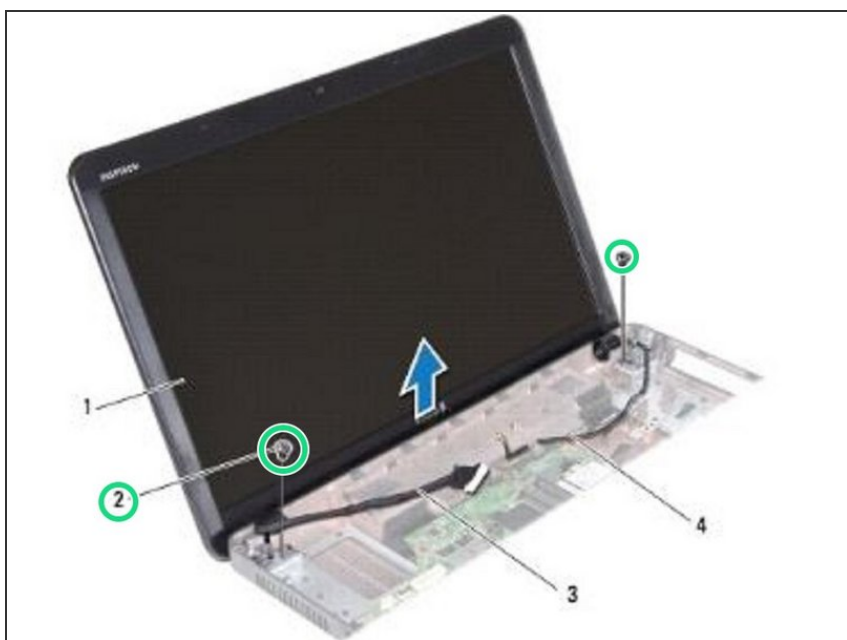

- Turn the computer over and replace the two screws at the base of the computer.