



# Dell Inspiron N5050 Battery Replacement

Follow this replacement guide to remove the battery from your laptop.


Written By: Kristy Mayo



## INTRODUCTION

Before disassembling your laptop to replace any device components, you must remove the battery. By removing the battery, you can prevent hazardous power issues.

## Step 1 — Battery

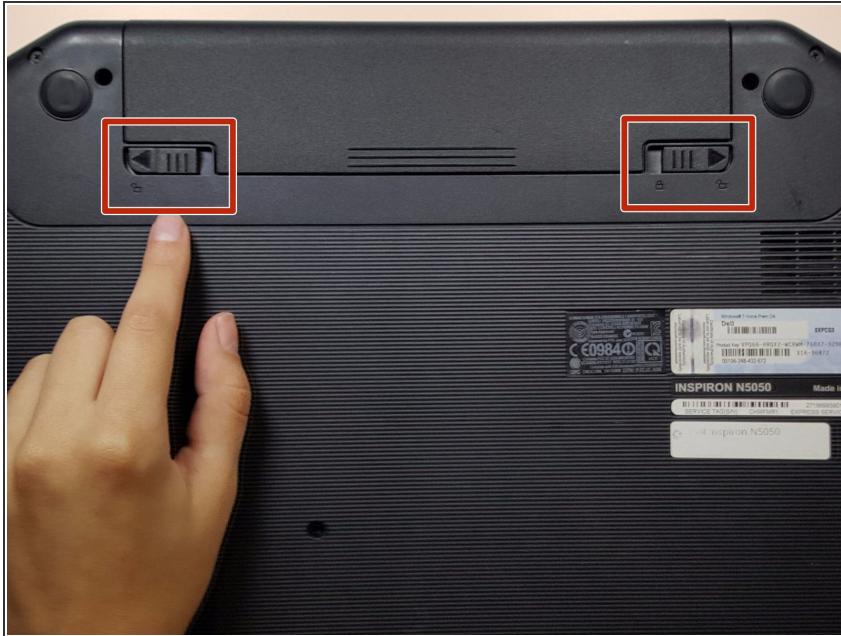

- Flip your laptop over to view the bottom and the two locks.


## Step 2



- Slide the two locks away from each other.

*(i)* Sliding these locks will loosen the battery to allow removal.

## Step 3

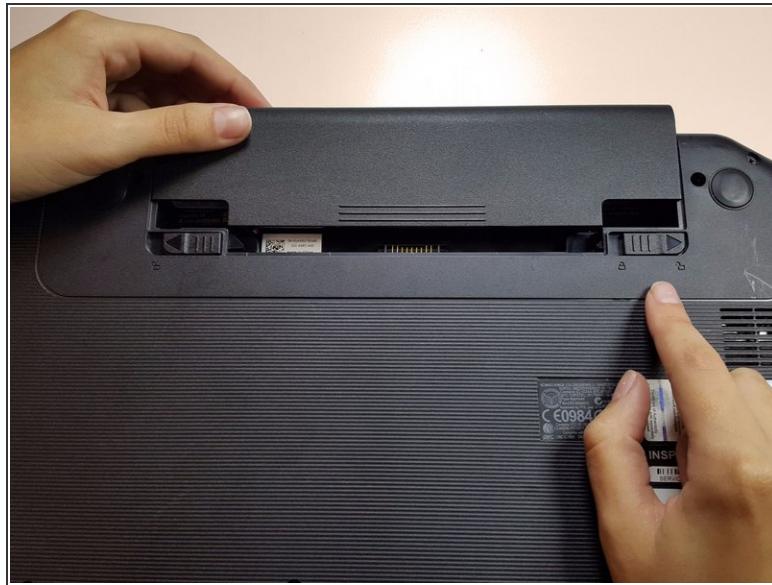

- Pull the battery out of the laptop.
- Your laptop's battery should be completely removed.

To reassemble your device, follow these instructions in reverse order.