




# Dell Inspiron i3558-5500BLK Battery Replacement

This guide will show you how to remove and replace the battery for the Dell Inspiron i3558-5500BLK Laptop.

Written By: Nathan Ybanez

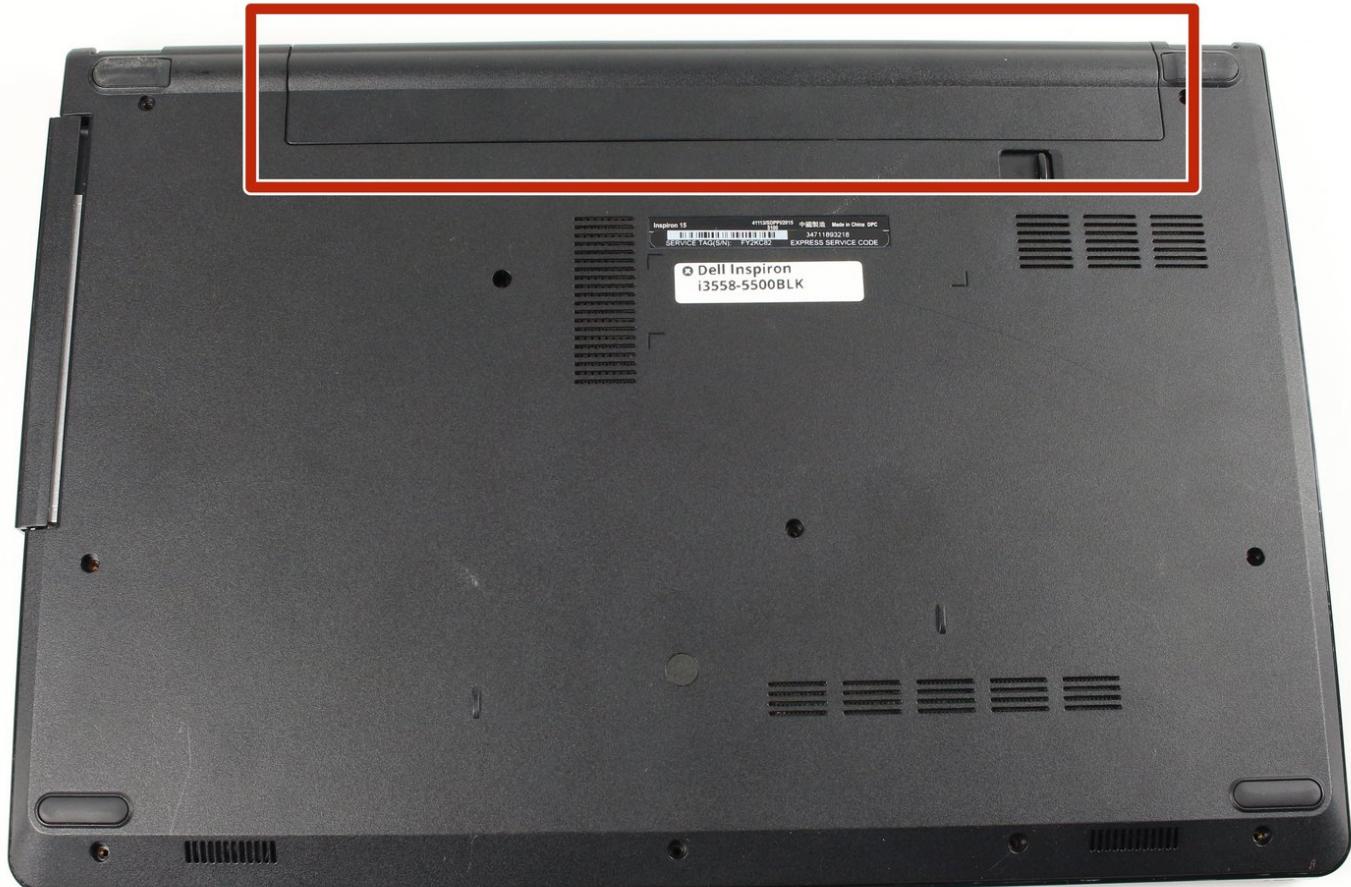

## INTRODUCTION

This guide will show you how to remove and replace the battery for the Dell Inspiron i3558-5500BLK Laptop.

**WARNING:** Static electricity can damage the electronic components of this model. Before beginning these procedures, discharge any built up static electricity by briefly touching a grounded metal object. For example, you can touch the metal frame inside the case of most desktop computers, or wear an anti-static wristband.

## TOOLS:

- [Anti-Static Wrist Strap \(1\)](#)

## Step 1 — Battery



- With the back of the laptop facing upright, press the switch shown to loosen the battery and remove it.

To reassemble your device, follow these instructions in reverse order.