




Dell Inspiron n5110 Battery Replacement

Written By: Terrence15

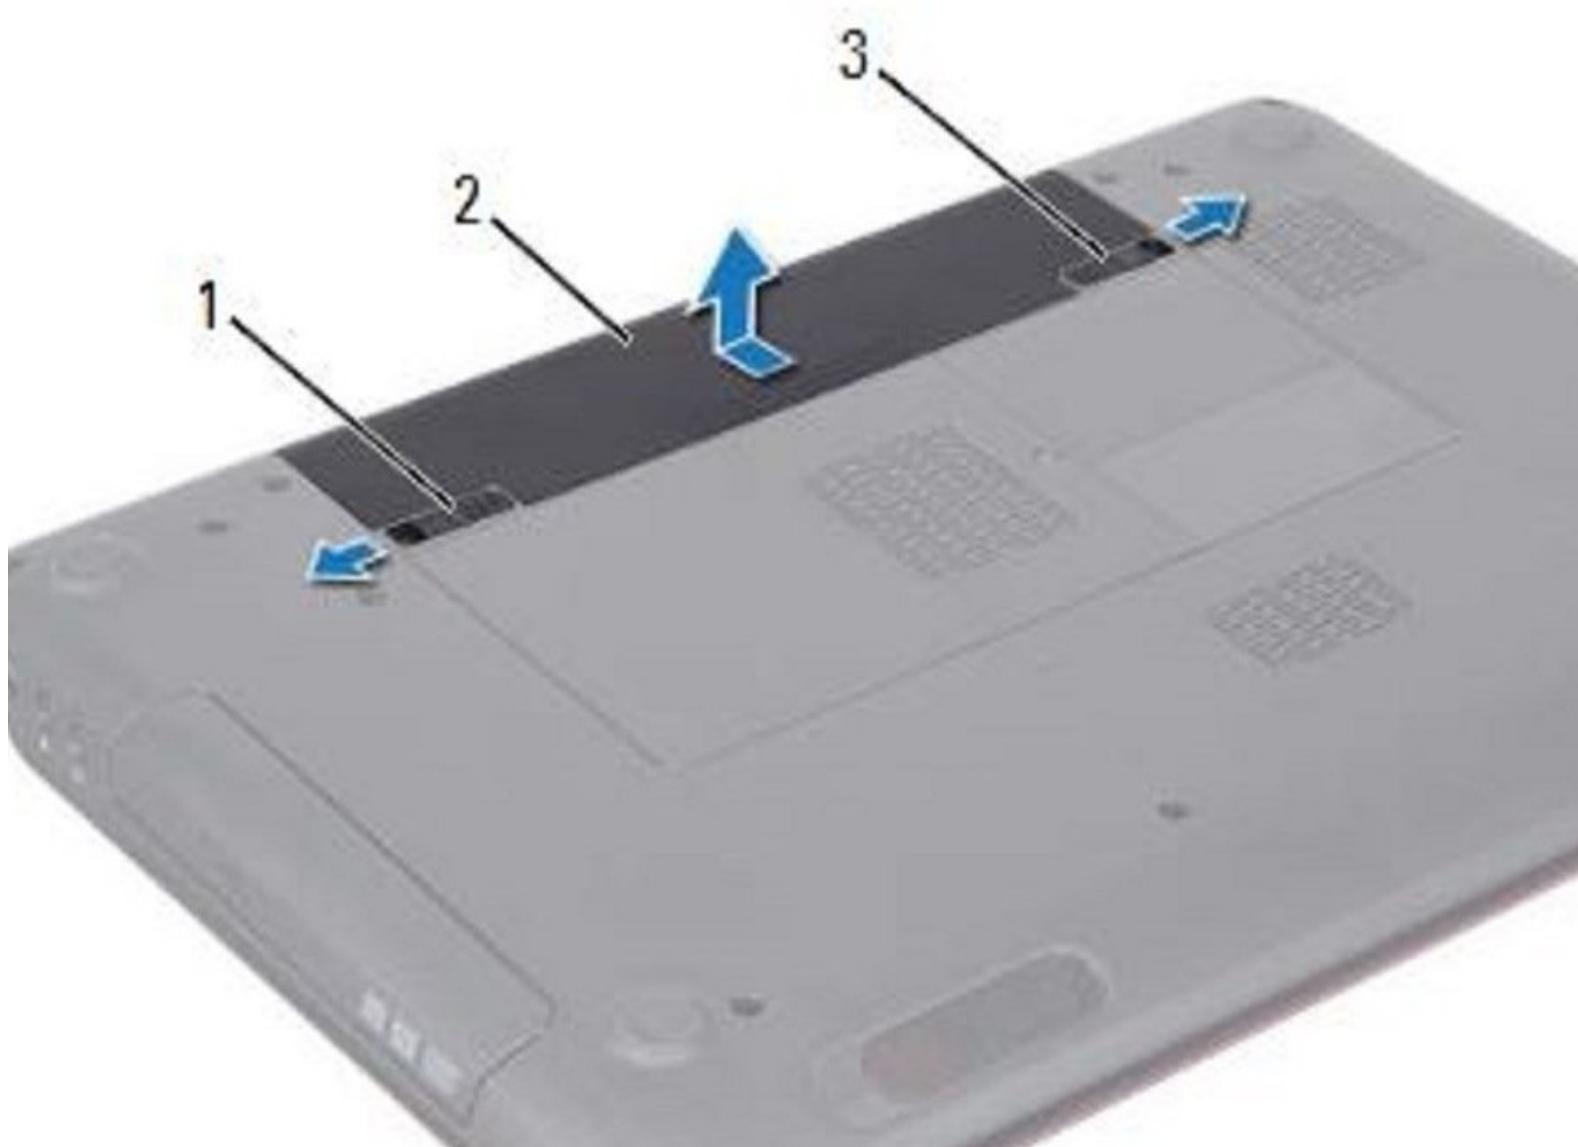

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

Step 1 — Turn Over the Computer




⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in "[Before You Begin](#)".

⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Shut down the computer and turn it over.

Step 2 — Sliding the Latch

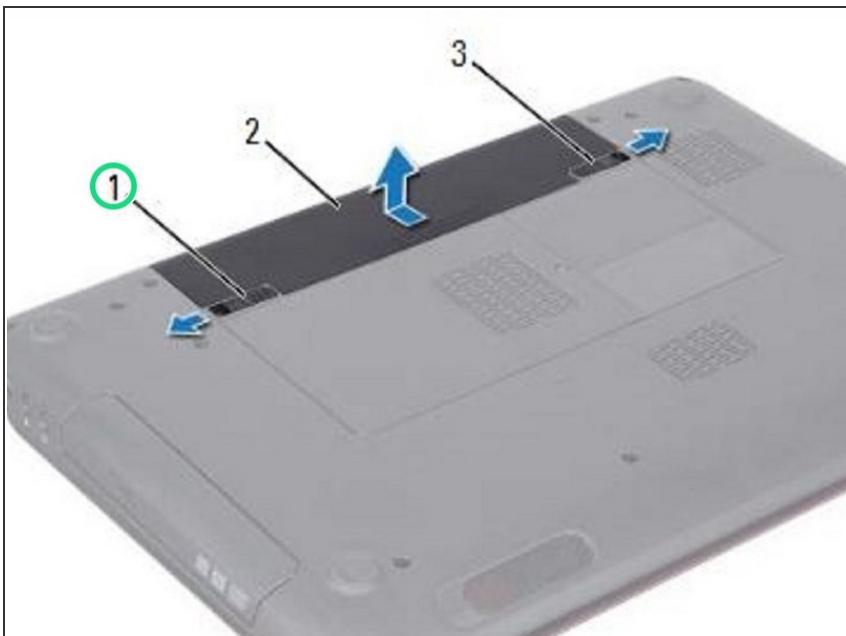


- Slide the battery release latch and the battery lock latch to the unlock positions.

Step 3 — Lifting the Battery

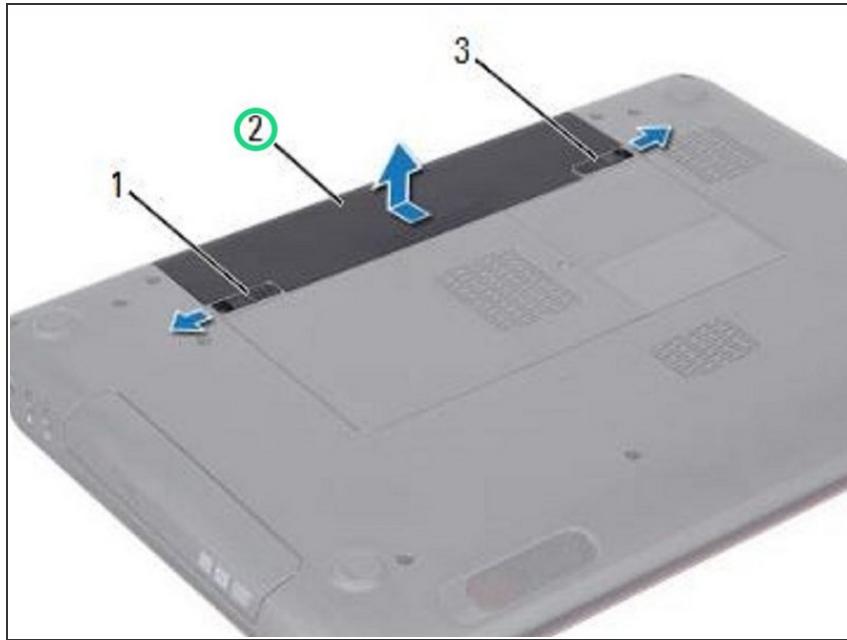


- Slide and lift the battery out of the battery bay.

Step 4 — Sliding the Battery

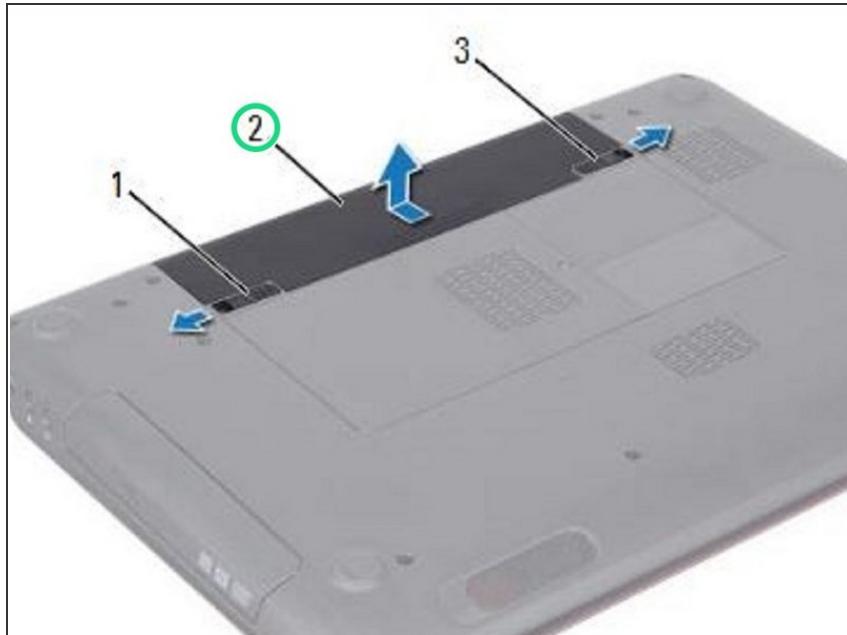

- Slide the **NEW** battery into the battery bay until it clicks into place.

Step 5 — Sliding the Battery Latch

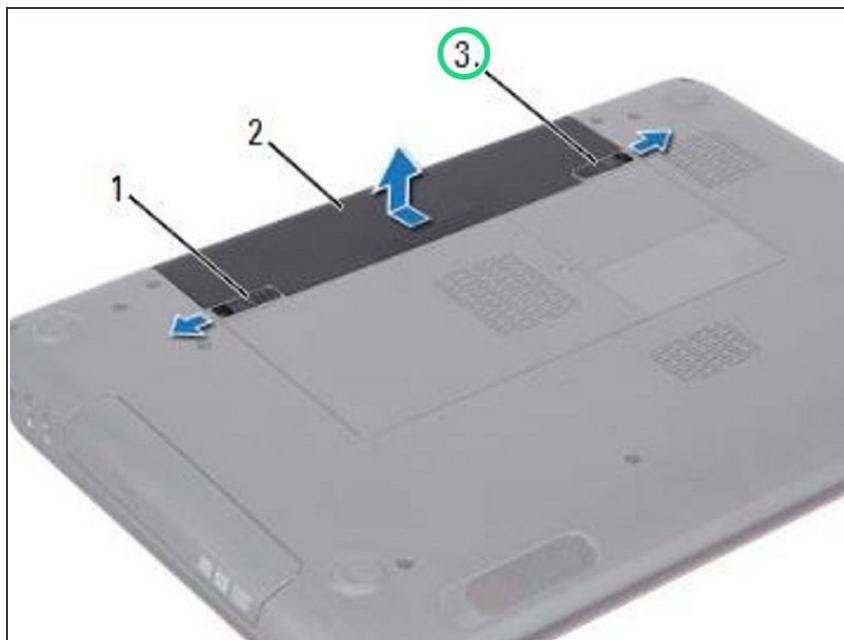

- Slide the battery lock latch to the lock position.