



Dell L100 U021 Large Keycap Replacement

Here is how to remove and replace small sized keycaps.

Written By: Addison



INTRODUCTION

Keycaps can become sticky or damaged over time. Here is how to remove and replace large sized keycaps, like the space bar.

TOOLS:

- [Qisan Keycap Removal Tool \(1\)](#)

PARTS:


- [Medium Keycap \(1\)](#)
- [Large keycap \(1\)](#)

Step 1 — Medium Keycap



- Place the prongs on either side of the keycap
- Twist to grip the top and bottom corners
- Pull the keycap from the board

Step 2

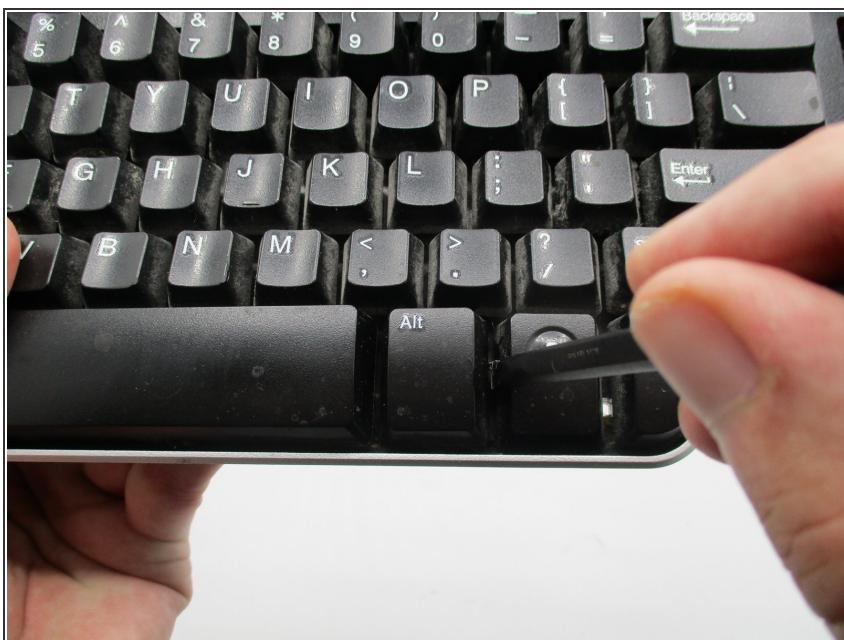

- Insert the flat end of the spudger under the medium keycap and gently press up until it pops off

Step 3 — Large Keycap



- After removing the medium keycaps around the large keycap, gently pull up on the large keycap

To reassemble your device, follow these instructions in reverse order.