



Dell L100 U021 Small Keycap Replacement

This guide will walk you through how to replace small keycaps on your Dell L100 U021 keyboard.

Written By: Addison



INTRODUCTION

Keycaps can become sticky or damaged over time. Here is how to remove and replace small sized keycaps. You can use a spudger or keycap remover.

TOOLS:


- [Qisan Keycap Removal Tool \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Small Keycap



- Insert the prongs under the small keycap
- Pull the small keycap up

Step 2 — Using the Spudger

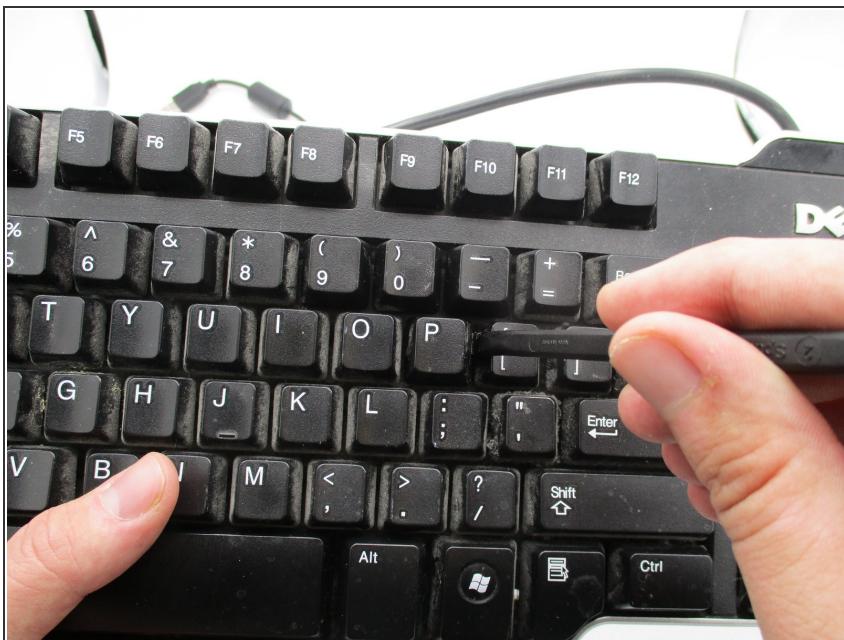

- Insert the flat end of the spudger under the keycap and gently press up until it pops off

To reassemble your device, follow these instructions in reverse order.