



Dell Latitude 3470 Battery Replacement

You will learn how to remove and replace the battery.

Written By: Christopher Melo-Pelaez

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Flathead Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Removing the battery



- Make sure your computer is turned off

To reassemble your device, follow these instructions in reverse order.