




Dell Latitude CPX Led control board Replacement


Written By: Logan

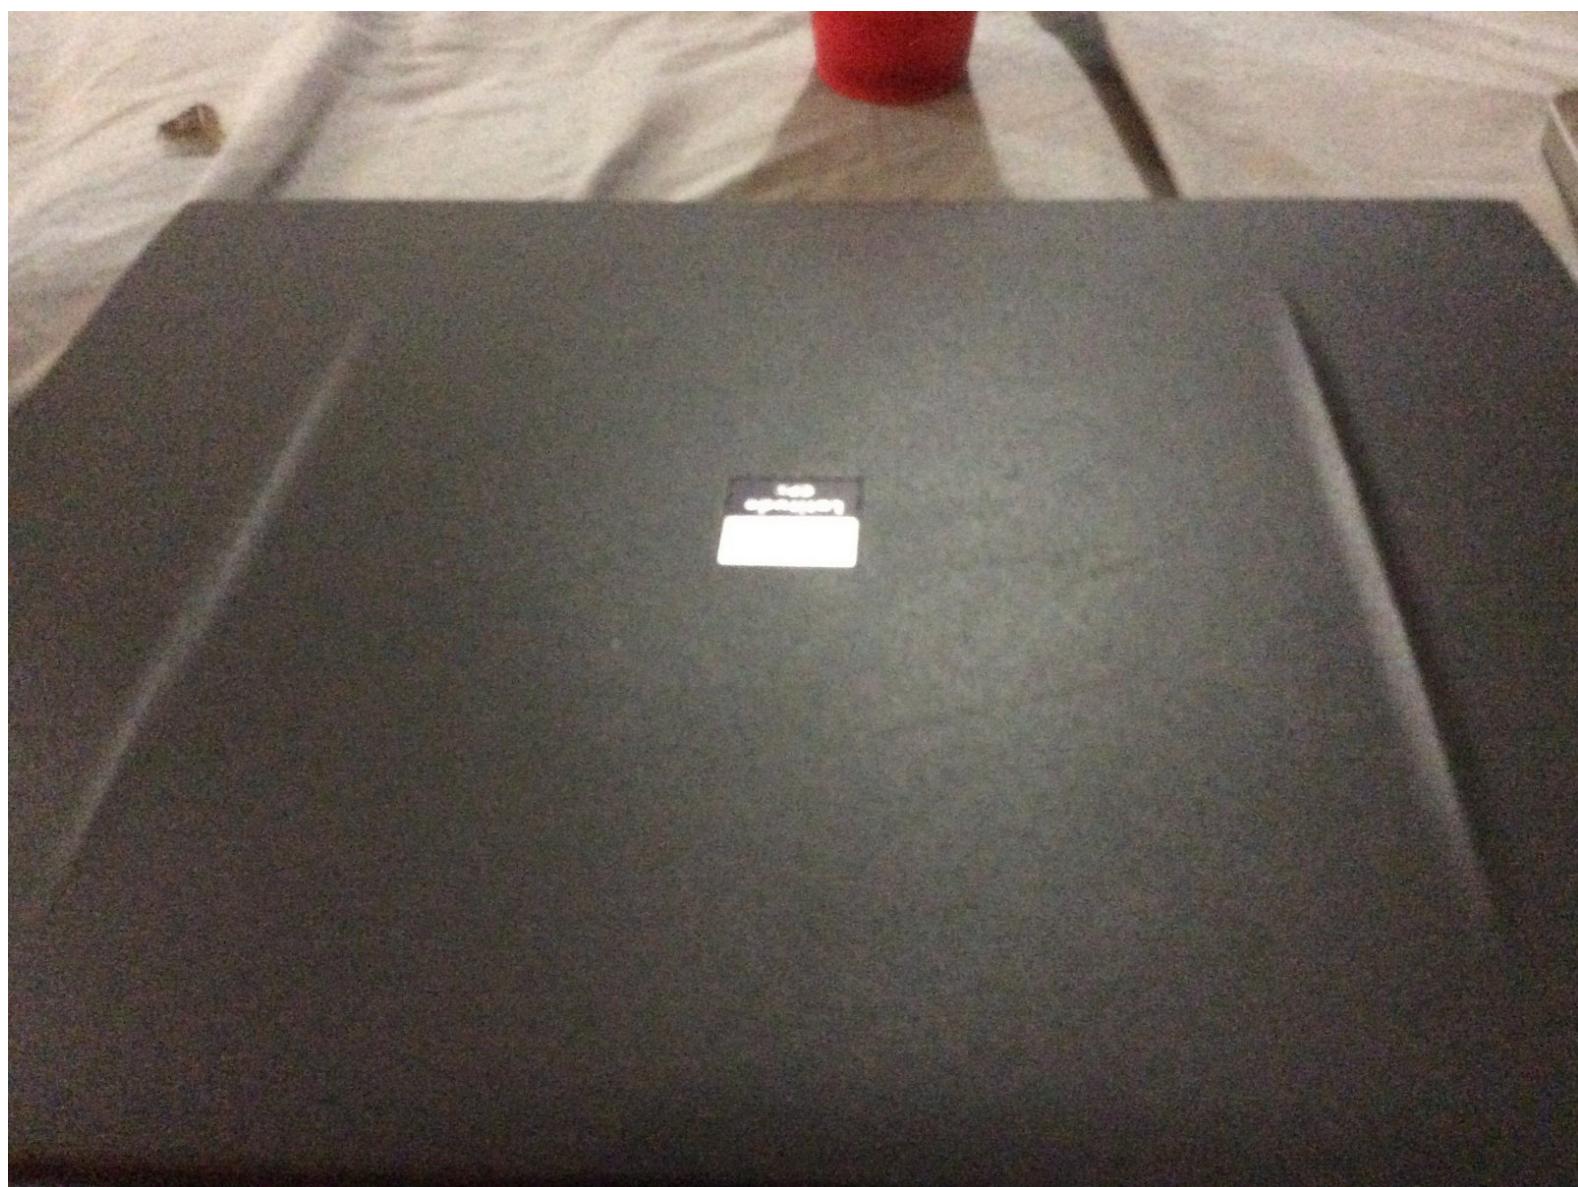

 **TOOLS:**

- 01# Philips screwdriver and a 03# flathead screwdriver (1)

Step 1 — Dell Latitude CPX LED control board replacement

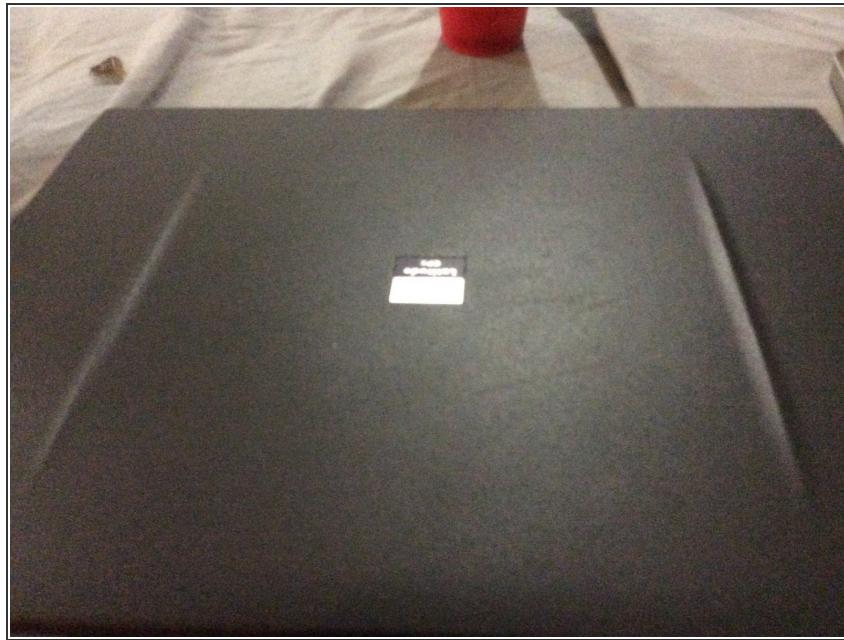

- This is the guide to replace the led control board in your DEEL Latitude CPX you can get all the tools for this guide from a iPhone disassembly kit they are for sale and for this guide the part you will need is a new led control board for your dell latitude CPX

Step 2



- Push the triangle things and hold them there with one hand and take the battery out and do the same to the cd drive you can get all the tools for this guide from a iPhone disassembly kit

Step 3




- Use the green tool to remove the ram compartment cover then remove the ram.

Step 4



- unscrew all screws be shure to keep track of them they are different sizes

Step 5

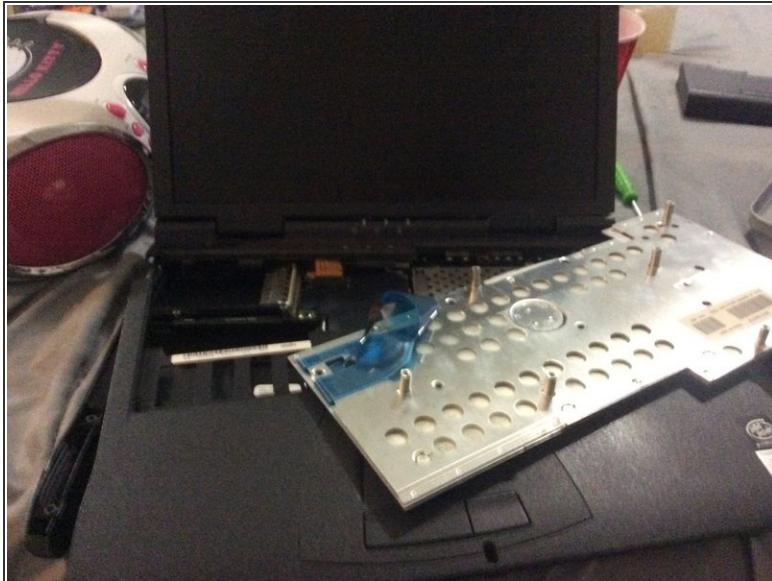

- Disconnect the cables and pull out the top base orange connector and the keyboard blue connector then you can remove both the keyboard and the top base

Step 6



- Remove the screw holding the led control board in and pull out the board be careful not to break the connector off the motherboard

To reassemble your device, follow these instructions in reverse order.