



Dell Latitude CS RAM Replacement

This guide shows one how to remove the RAM on a Latitude CS.

Written By: Axuak



INTRODUCTION

Not much prior knowledge is required before starting. According to Dell, however, you must have the following tools:

"#0 and #1 magnetized Phillips-head screwdrivers

Small flat-blade screwdriver

5-mm socket wrench

7-mm socket wrench

Small plastic scribe"

(Guide found at: <http://tim.id.au/laptops/dell/latitude%2...>)

TOOLS:

- Phillips #0 Screwdriver (1)
- Phillips #1 Screwdriver (1)

PARTS:


- PC100 Mobile RAM (up to a single 256MB) (1)

Step 1 — RAM



- Flip laptop over.

Step 2

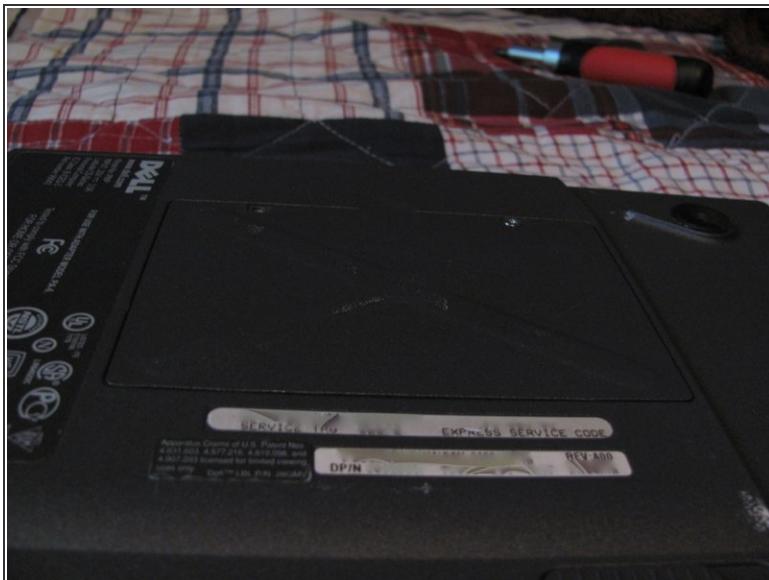

- Remove the screws over the RAM door

Step 3




- Open the RAM door.

Step 4



- Carefully pull the tabs over the RAM chip down - the RAM will spring up.

Step 5

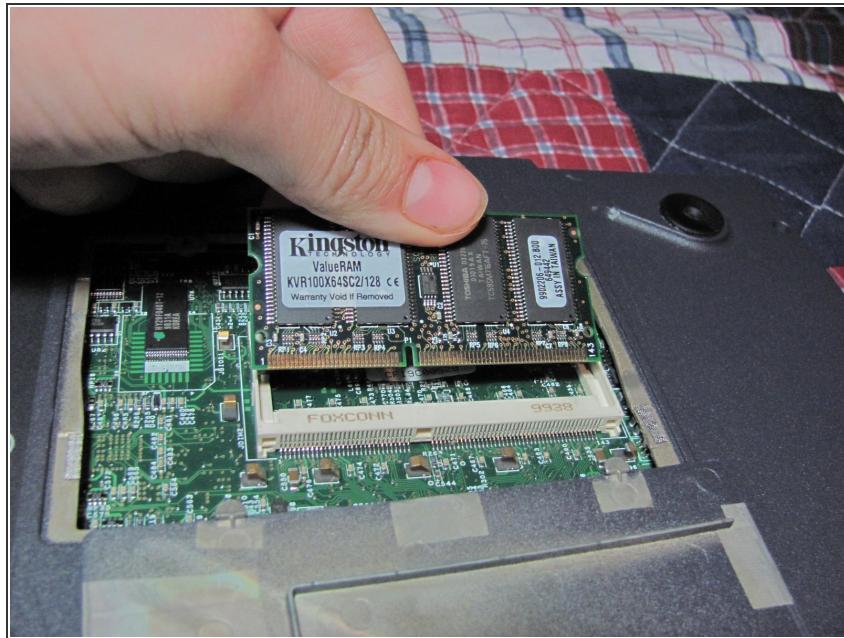

- Remove the RAM from the socket and insert replacement RAM.

To reassemble your device, follow these instructions in reverse order.