



# Dell Latitude D610 Keyboard Replacement

Replacing a broken or damaged keyboard in a Dell Latitude D610.

Written By: Jordan Barham



## INTRODUCTION

Replacing a defective keyboard is a fairly simple and easy task, requiring little tools and prior knowledge.

### **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

### **PARTS:**

- [Keyboard](#) (1)

## Step 1 — Battery



- Remove the 3.9 mm Phillips #1 screw from the battery compartment.

## Step 2



- Locate the laptop battery release button lock
- Push the battery release in the direction of the arrow, and pull upward.

## Step 3



- Remove the battery from its compartment.

## Step 4 — Keyboard



- Use an opening tool or flat tool to remove the plastic cover above the keyboard.

## Step 5



- Remove the two 3.9mm Philips #1 screws that are holding the keyboard in place.

## Step 6



- Using an opening tool, carefully release the keyboard from the case.

**⚠** Making sure not to tear or damage the wires still connecting it to the laptop.

## Step 7



- Carefully lift the key board.

 Lift only about 3 - 4 inches so that the wires holding the keyboard do not get damaged.

- Pull on the blue tab to unplug the keyboard.

To reassemble your device, follow these instructions in reverse order.