




Dell Latitude D820 Battery Replacement

Removal and replacement of battery

Written By: Elizabeth

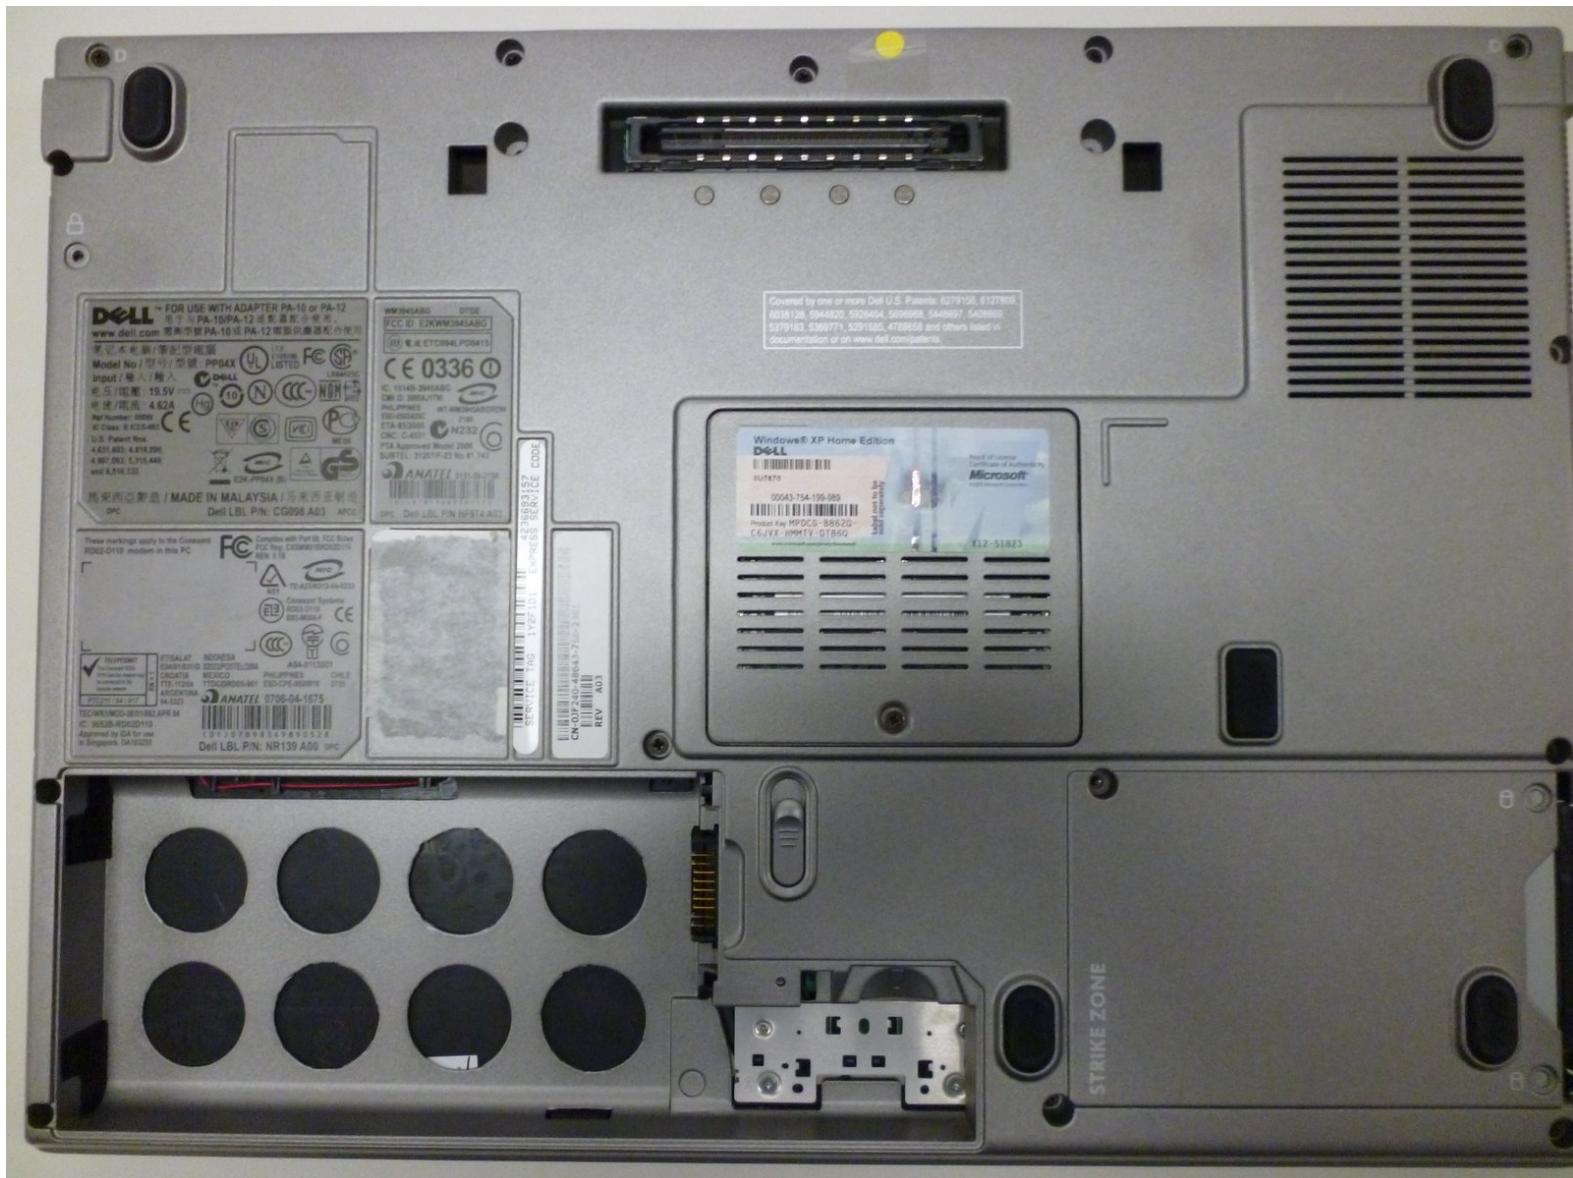

INTRODUCTION


Removal and replacement of battery



PARTS:

- [Dell Latitude D820 Replacement Battery \(1\)](#)

Step 1 — Battery

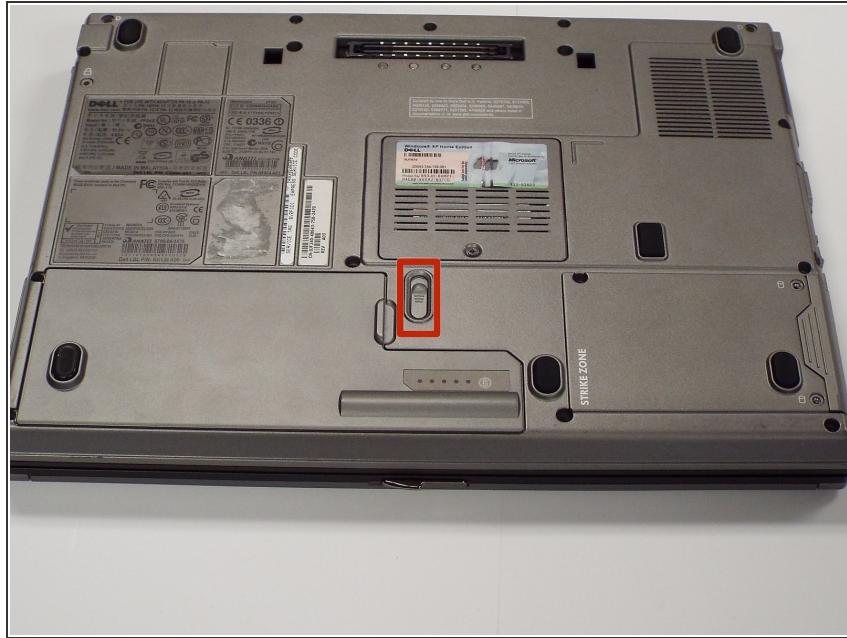

- Remove the charger from the laptop.
- Turn the laptop over and locate the battery slide lock. Slide the switch and gently lift up the battery.
- If you are replacing other components, leave the battery out.
- If you are only replacing the battery, reverse the steps to install a new battery.

To reassemble your device, follow these instructions in reverse order.