



Dell Latitude E4200 Keyboard Replacement

Follow the guide steps to remove the computer's keyboard.

Written By: Michelina Carbone



 **TOOLS:**


- [Flathead Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Power Button Panel




- Open computer.

Step 2

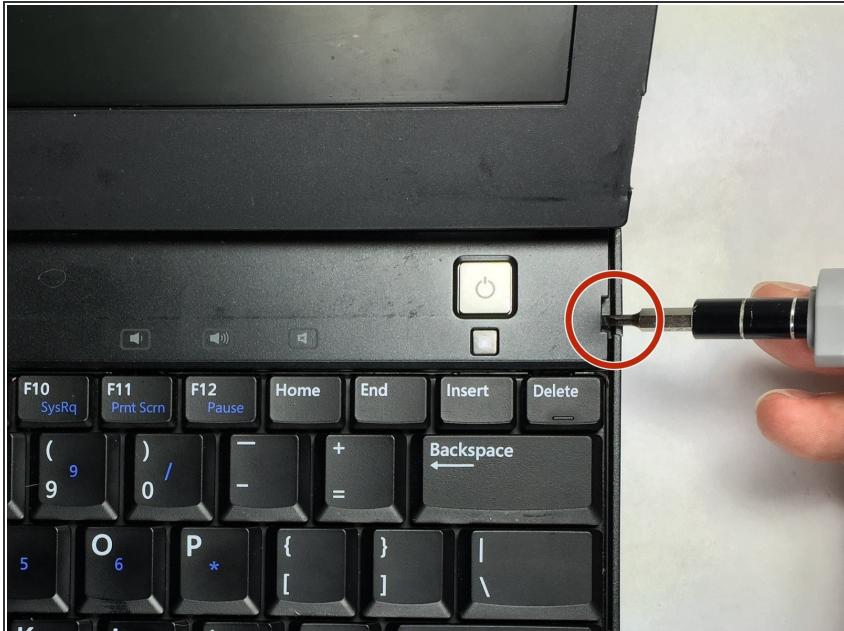


- Slide any tool with a flat surface under the side bottom right corner of front panel and pry the front panel out of place.
- A small flat head screwdriver would be an ideal tool to use during this step.

Step 3

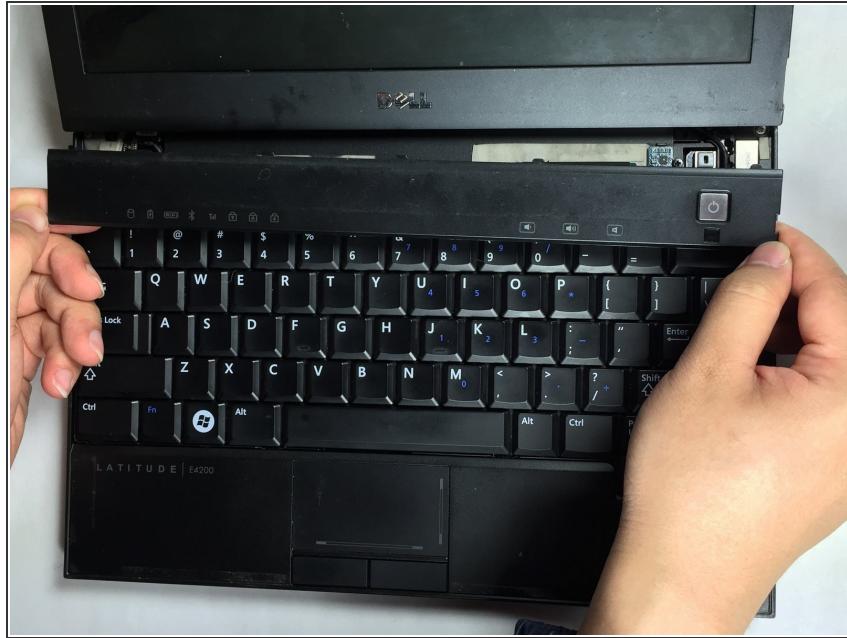



- Once out of place, position your thumbs under the bottom of the panel and pull upwards.

Step 4 — Keyboard

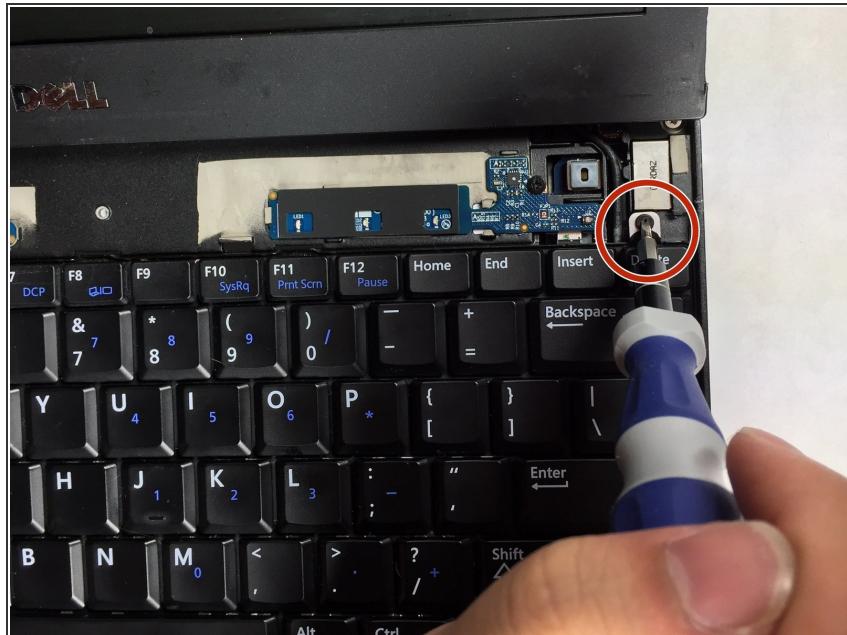


- Use a PH00 screwdriver to unscrew the screw.

Step 5

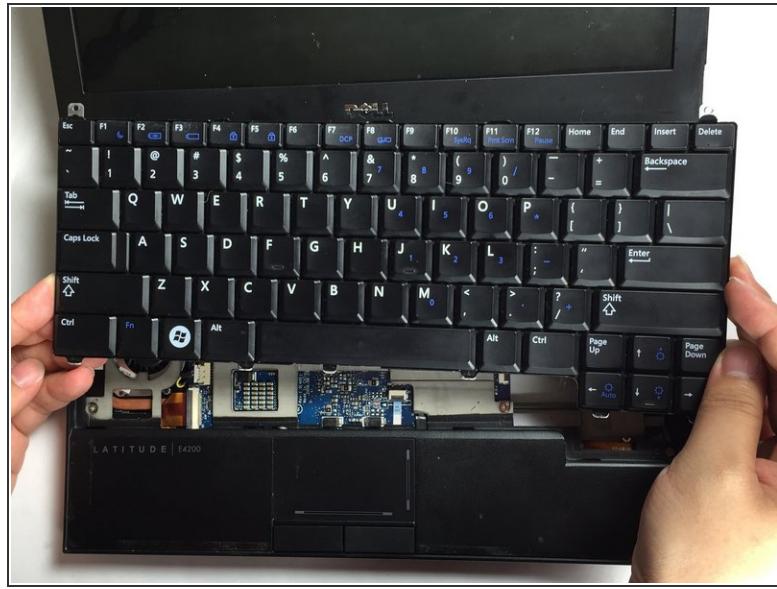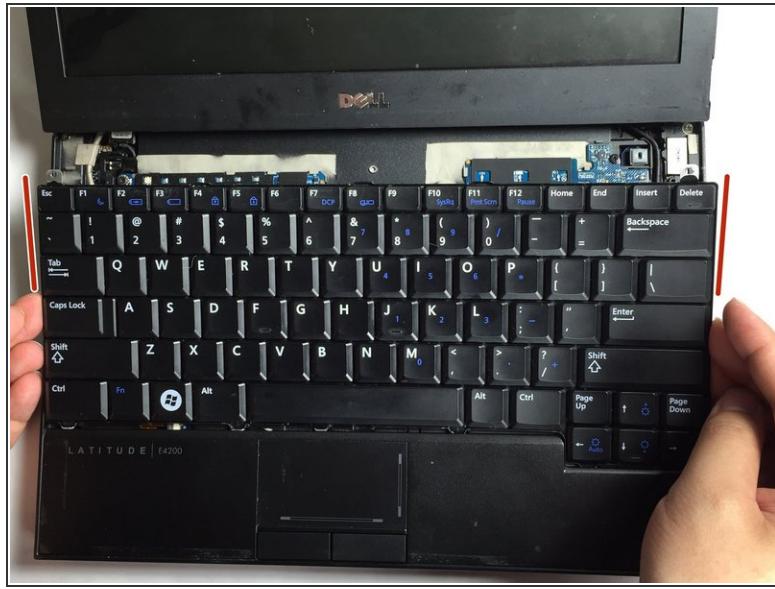


- Use your hands to gently lift the keyboard from the device.

Step 6

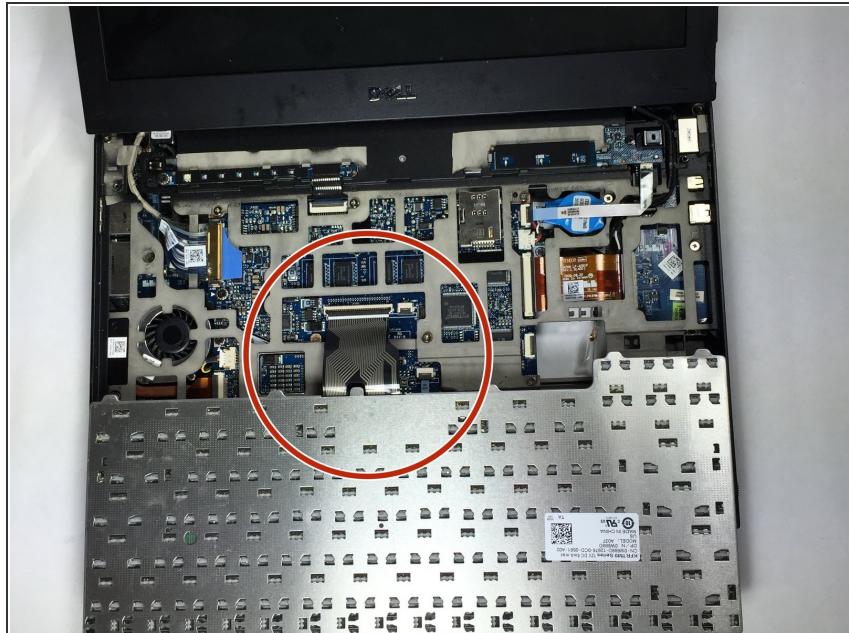


- Gently turn the keyboard over.

Step 7

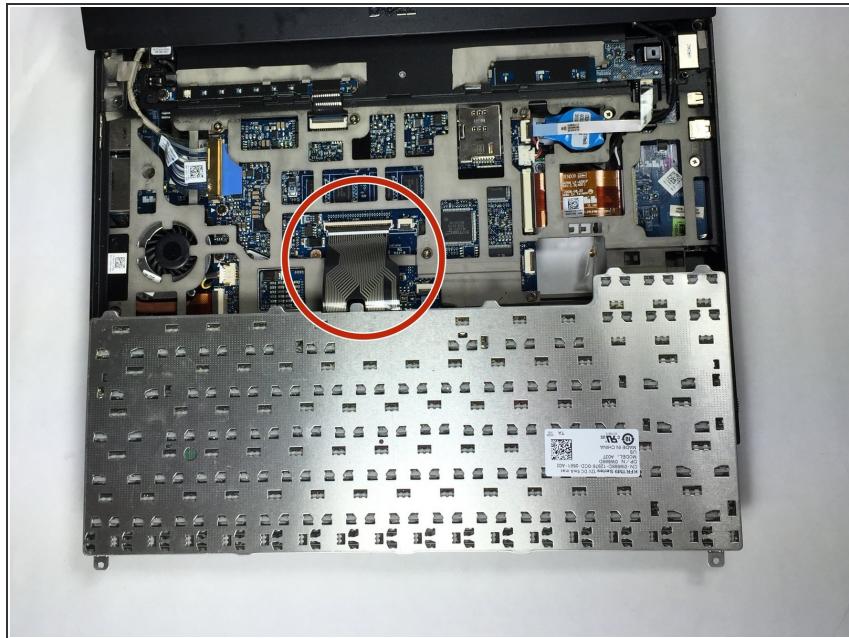


⚠ Be careful not to disconnect the keyboard connector.

Step 8

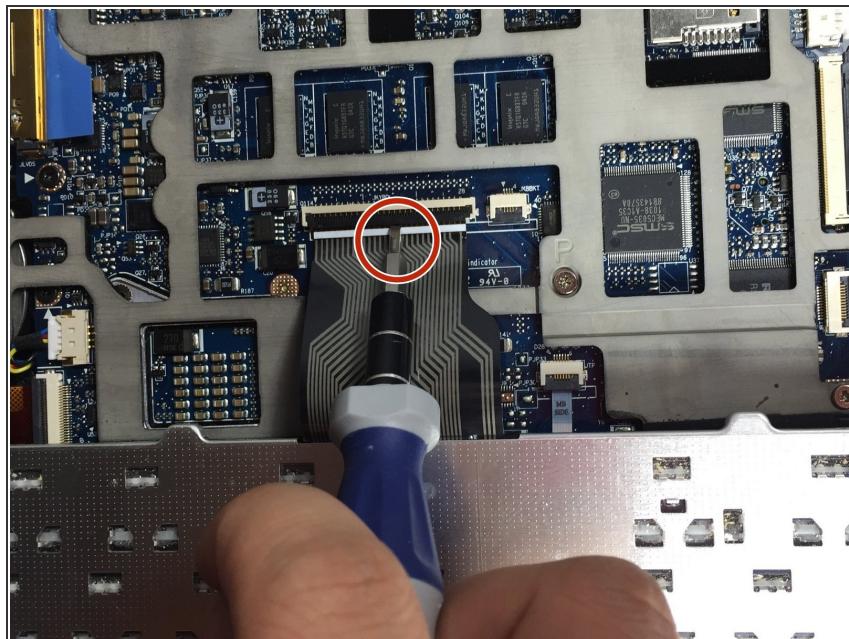

- Use a flat head screwdriver to flip the keyboard connector up. This will allow you to disconnect the keyboard and remove it.

Step 9

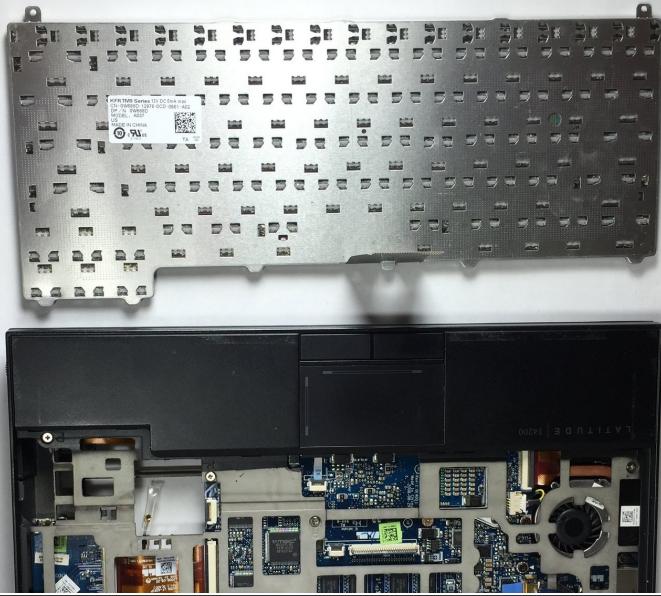

- Completely lift the keyboard from the device, as they are now disassembled.

To reassemble your device, follow these instructions in reverse order.