



Dell Latitude E4310 Mini Card Door Replacement

Removal of the Mini Card Door on Dell Latitude E4310 laptop.

Written By: Brice Brosig




INTRODUCTION

This guide walks through the removal of the Mini Card Door for access to the Mini Card itself, and for removal of further parts in the device.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Mini Card Door

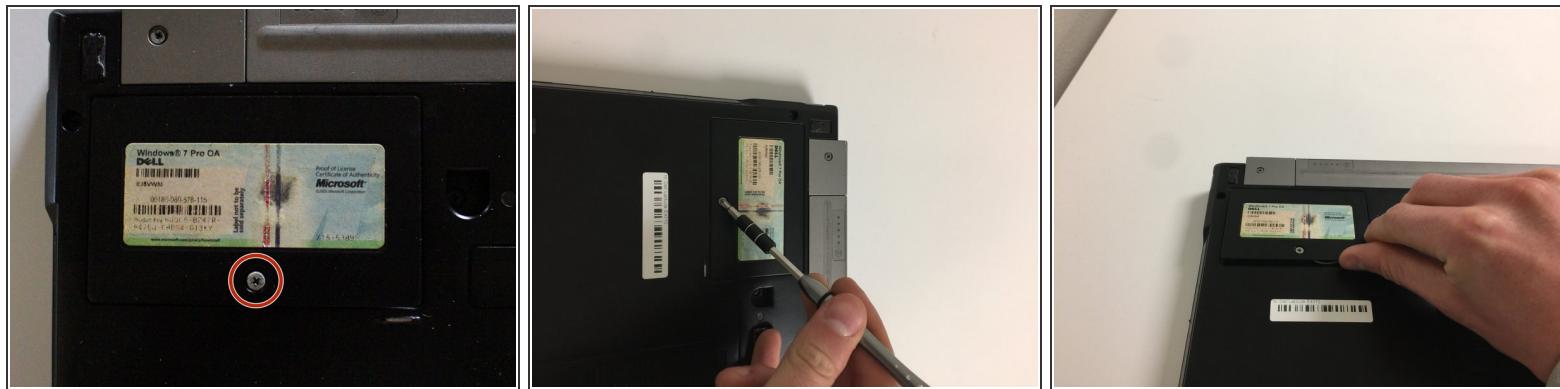

- Remove the single Phillips #1 screw.
- *(i)* This screw will not necessarily come off of the panel.
- Lift up and remove with your fingernail, or a spudger, from the side of the door with the screw.

To reassemble your device, follow these instructions in reverse order.