



Dell Latitude E5400 Memory Upgrade / Replacement

In this repair guide, I'll teach you how you can upgrade / replace the memory in Dell Latitude E5400.

Written By: Robin Koch



 **TOOLS:**


- **Spudger** (1)
- **Phillips #1 Screwdriver** (1)

Step 1 — Remove battery




- Be sure to remove the battery to prevent any electrical shortage.

Step 2 — Remove the backpanel

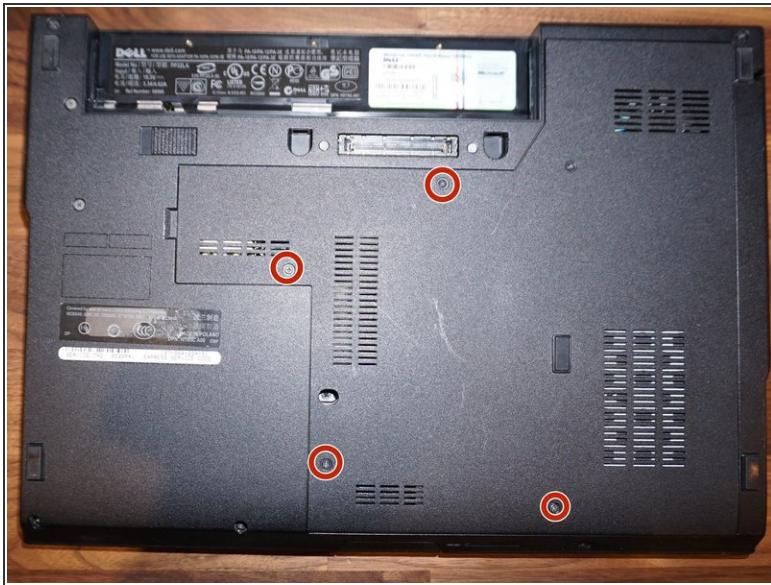

- Losen all four screws and remove the backpanel.
- Remove the backpanel with a spudger. Start out as in the second photo to prevent the plastic from breaking. Work you're way around the panel to remove it.

Step 3 — change/upgrade the memory

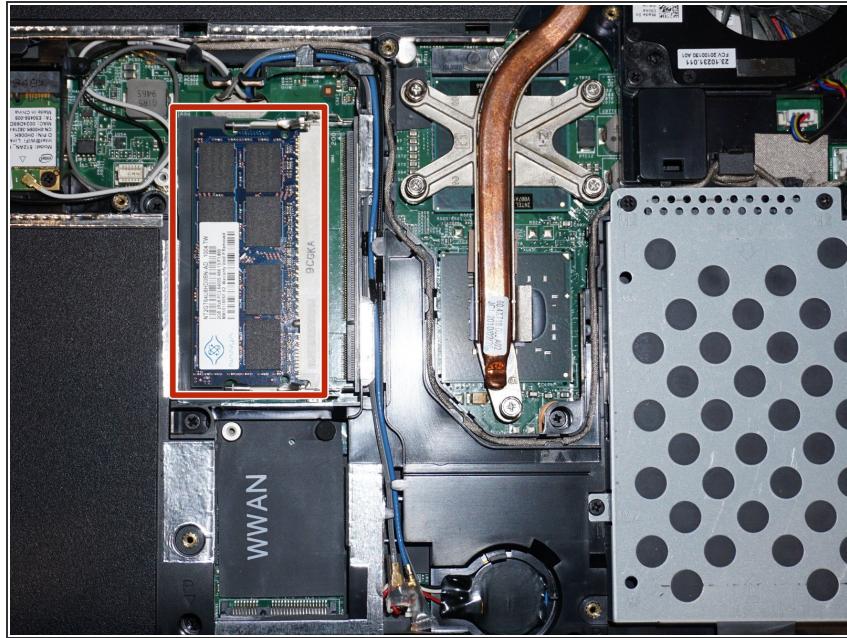

- Now you can upgrade or change the memory.
- NOTE: If the laptop doesn't boot after the upgrade, make sure the ram is fully inserted. Still doesn't boot? Try another memory stick.

To reassemble your device, follow these instructions in reverse order.