



Dell Latitude E5410 Dell Latitude E5410 keyboard Replacement

How to replace the keyboard on your Dell Latitude E5410 laptop.

Written By: Megan Perrizo



INTRODUCTION

This guide will show you how to replace the Dell Latitude E5410 keyboard.



TOOLS:

- [JIS Driver Set](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

 
- [Dell Latitude E5410 Keyboard](#) (1)

Step 1 — Dell Latitude E5410 keyboard




- Have your laptop ready with the screen pulled all the way down parallel to the bottom of the laptop.

Step 2

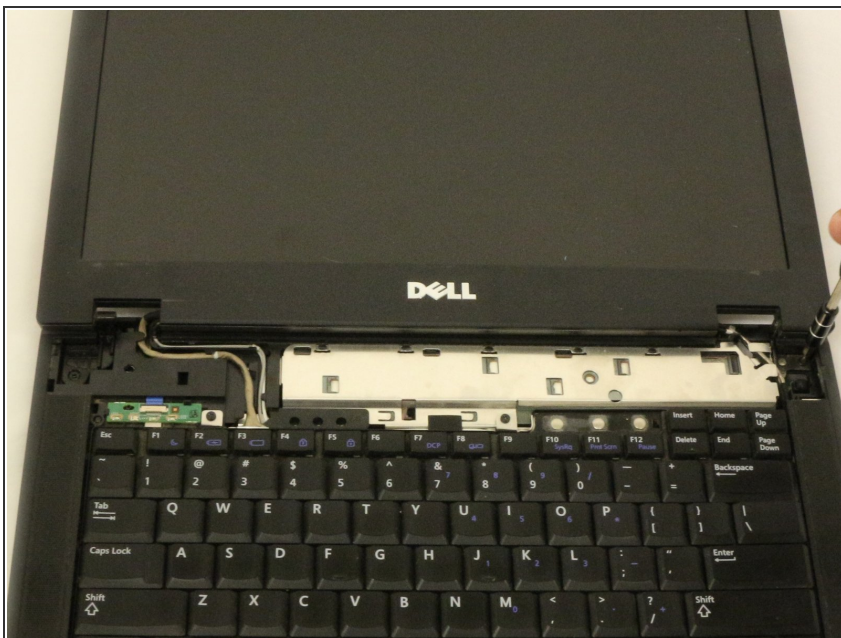


- Use the spudger to remove the flat part right above the keyboard.
- Inside, you will notice that there are a couple of screws that will need to be removed.

 Step 3

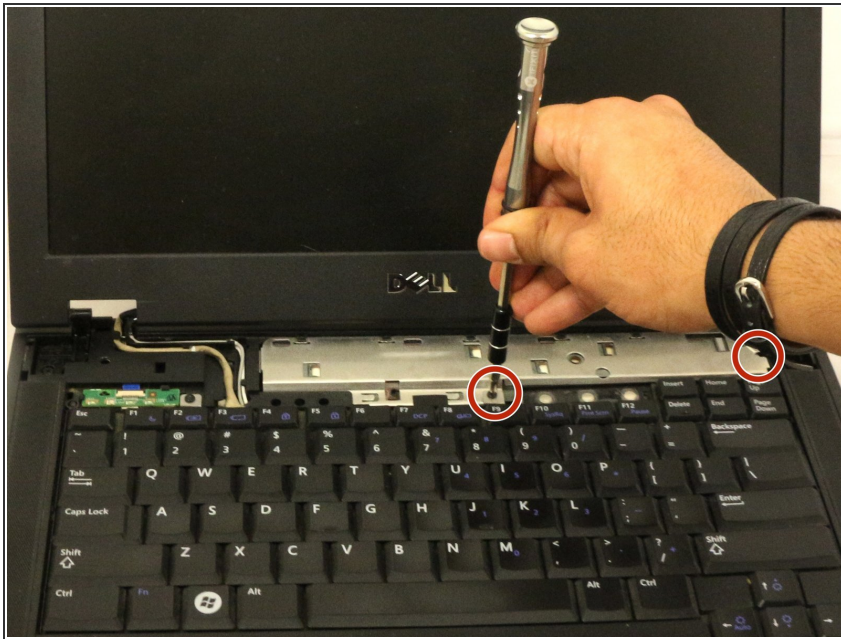

- Use the Phillips screwdriver to remove both screws. The screw in the middle is 3.85mm and the screw in the middle is 8.66mm.

 Step 4

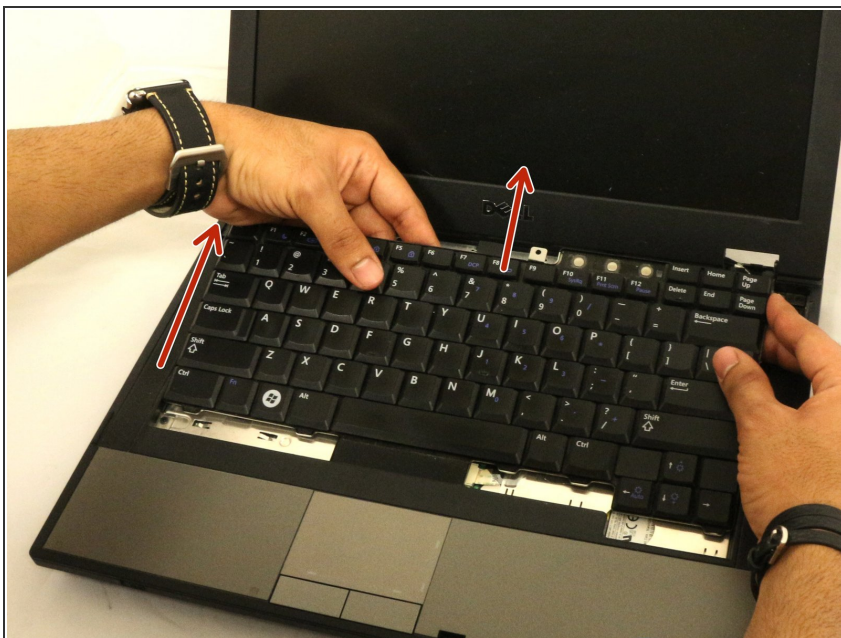

- Grab the keyboard near the top and pull up and towards the screen. The keyboard should come out.

To reassemble your device, follow these instructions in reverse order.