



Dell Latitude E5430 Hard Drive Replacement

This guide will demonstrate how to replace the hard drive on your Latitude E5430.

Written By: Sam



INTRODUCTION

This guide will demonstrate how to replace the hard drive on your Latitude E5430.

TOOLS:

- Phillips #1 Screwdriver (1)

PARTS:


- 2.5" SATA Hard Drive (1)

Step 1 — Remove the Battery




- Slide the two notches outward. Lift the battery outward and pull.

Step 2 — Remove the Bottom Cover

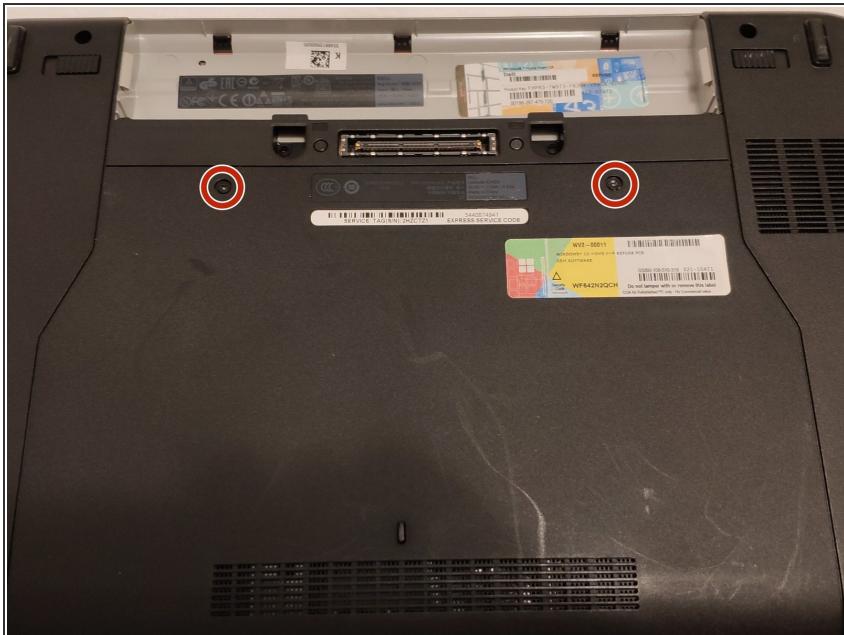


- Remove two Phillips head screws from the bottom cover.

Step 3 — Remove the Hard Drive Caddy

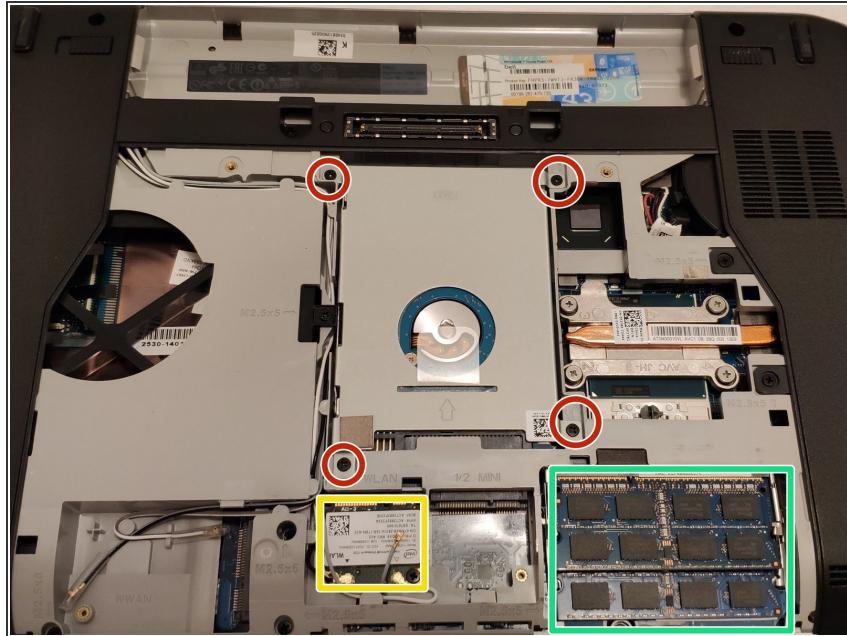

- Remove the four Phillips head screws from the hard drive caddy.
- System memory (RAM) is located here.
- Low profile WLAN card
- *i* Various components can be replaced from this stage.

Step 4 — Unscrew the Hard Drive from the Caddy

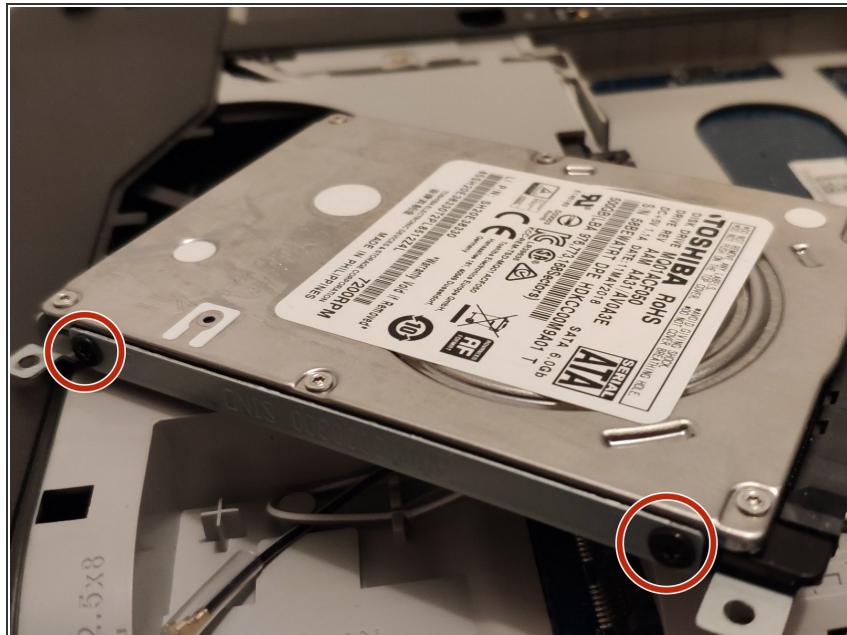

- Remove the four Phillips head screws surrounding the hard drive in the caddy.
- *i* There are two more screws on the other side of the hard drive.

Step 5 — Done!



Congratulations, you've done it!

After you have installed your new hard drive or SSD, repeat the process in reverse.