



Dell Latitude E5500 Battery Replacement

How to replace the battery on the Dell Latitude E5500.

Written By: Maxwell Whalen



Step 1 — Battery



- Place the laptop face-down with the hinges facing towards yourself

Step 2



- Locate the battery's release switch and slide it to the right

Step 3



- Once the switch had been slid, pull the battery out laterally towards yourself

To reassemble your device, follow these instructions in reverse order.