


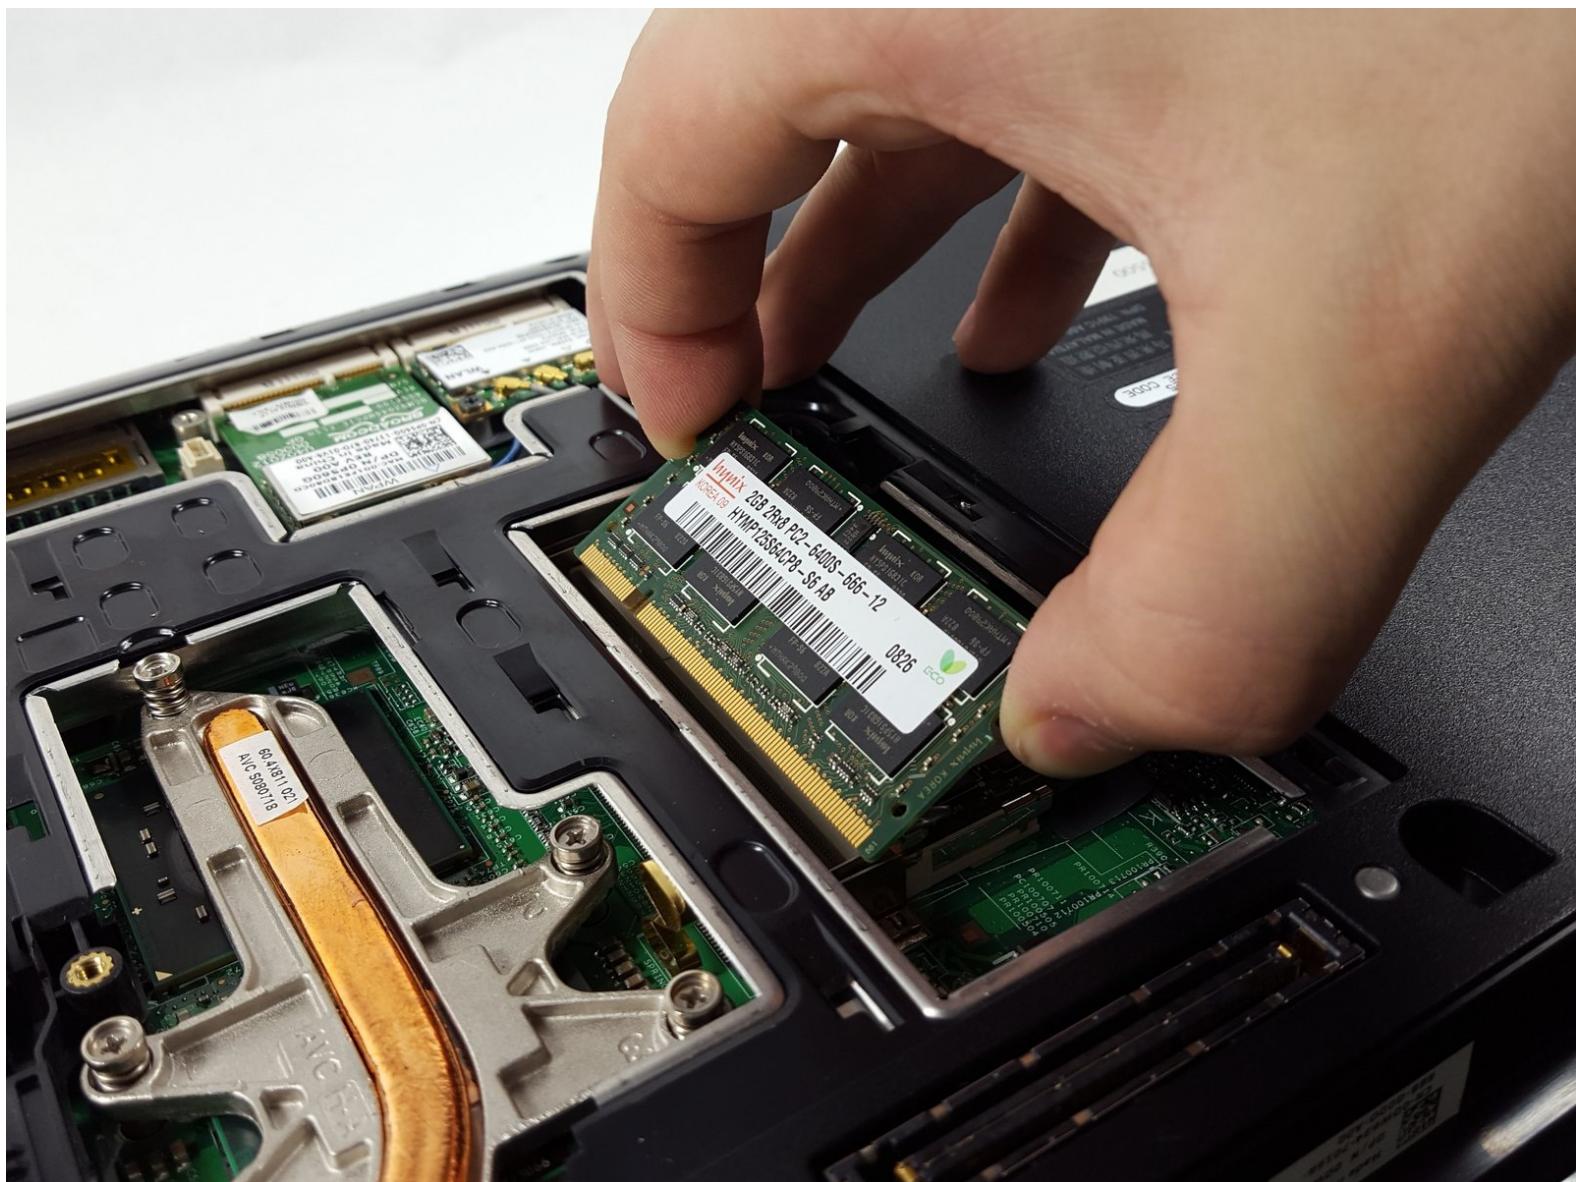

# Dell Latitude E5500 RAM Replacement

Replacement guide for the RAM in a Dell Latitude E5500.

Written By: Evan Eldridge



## INTRODUCTION

If the user would like to replace a faulty RAM stick or one with insufficient capacity, this guide will give step by step information on how to achieve this.

### TOOLS:


- Phillips #1 Screwdriver (1)

## Step 1 — RAM



- Unscrew the single 3.5mm Phillips #1 screw that holds on the bottom plate of the device.

## Step 2

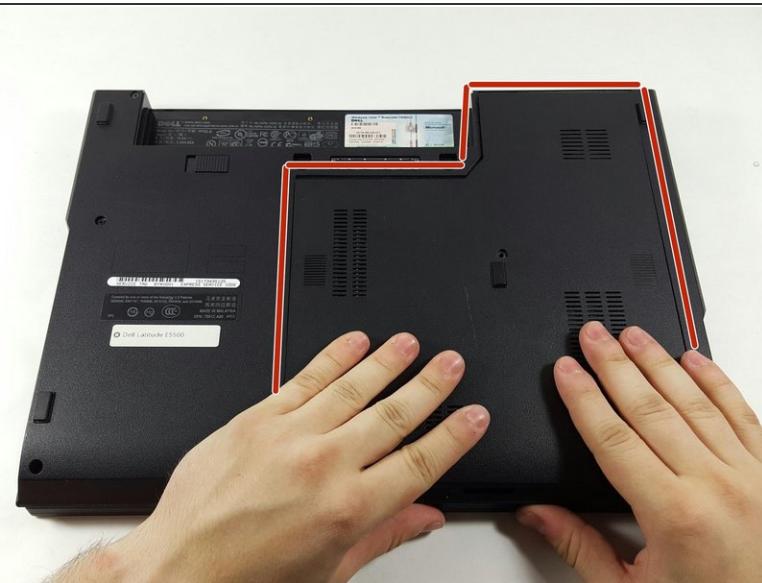



- Place your hands on the plate and pull it toward yourself.
- The plate will pop out of place and may then be removed.

## Step 3



- The RAM sticks are located near the center of the device, and are arranged one on top of the other.

## Step 4

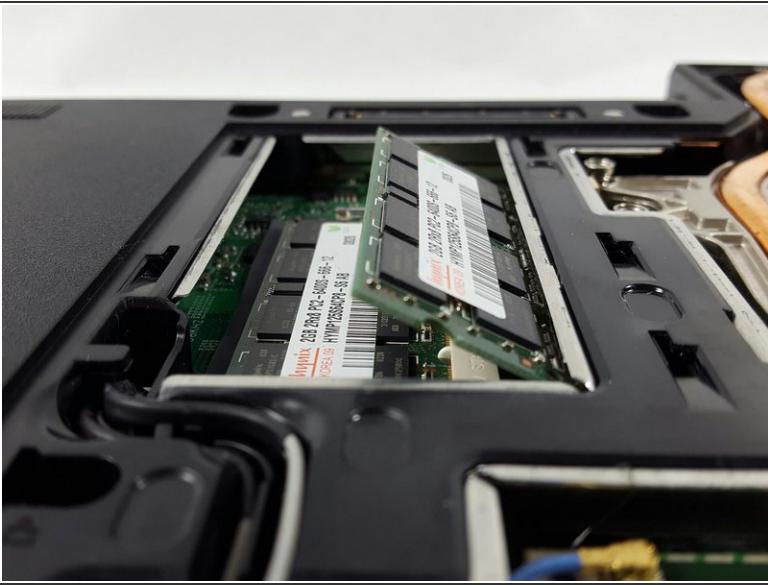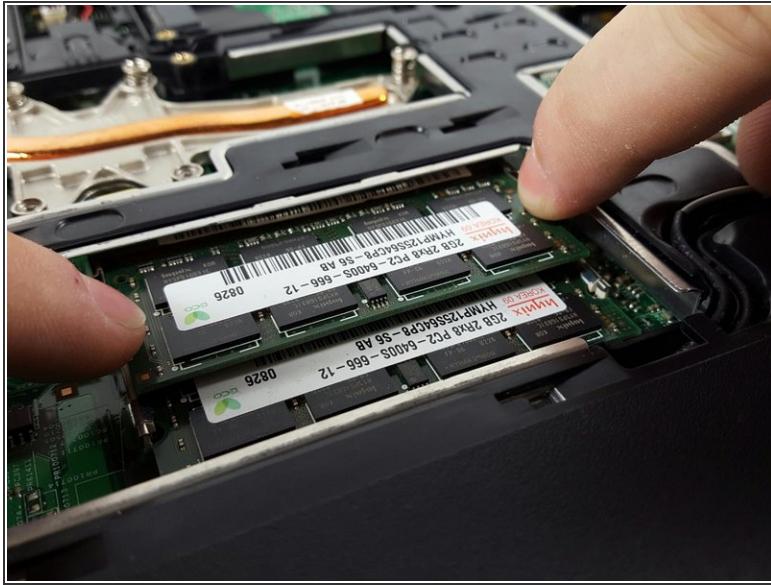

- Locate the two dislocating tabs on each side of the stick and place your fingers on the tabs.
- Pull the tabs away from the stick to pop it out of place.
- *(i)* Notice the angle it rests at after the tabs have been opened. This is important for installation of new RAM.
- Once the RAM stick has popped out of place, it can be gently removed.

## Step 5



- If necessary, repeat this process with the second RAM stick that lies beneath the first one.

To reassemble your device, install the new stick(s) and follow these instructions in reverse order.