



# Dell Latitude E6330 CD Drive Replacement

If you want to replace the CD Drive for your Dell Latitude E6330 follow this tutorial.

Written By: Brett Murray



 **TOOLS:**


- Phillips #00 Screwdriver (1)

## Step 1 — Battery



- Turn off computer

## Step 2

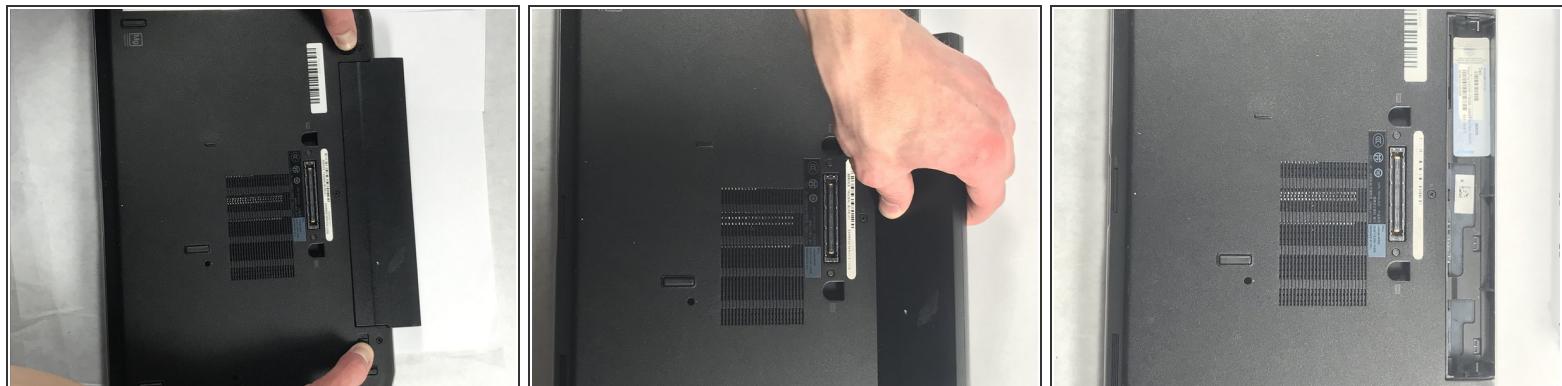

- Slide latches out to unlock and remove battery.

## Step 3 — CD Drive



- Click the button on the side of the disk.

## Step 4



- Carefully slide out the disk drive

To reassemble your device, follow these instructions in reverse order.