



Dell Latitude E6410 Cooling Fan Replacement

This guide will walk you through all the steps needed to replace your cooling fan.

Written By: Stephen Tate



INTRODUCTION

This guide will step you through the process of replacing your cooling fan.

TOOLS:


- Phillips #0 Screwdriver (1)

Step 1 — Cooling Fan



- Lay your laptop upside down on your desk.
- Remove the battery.


Step 2

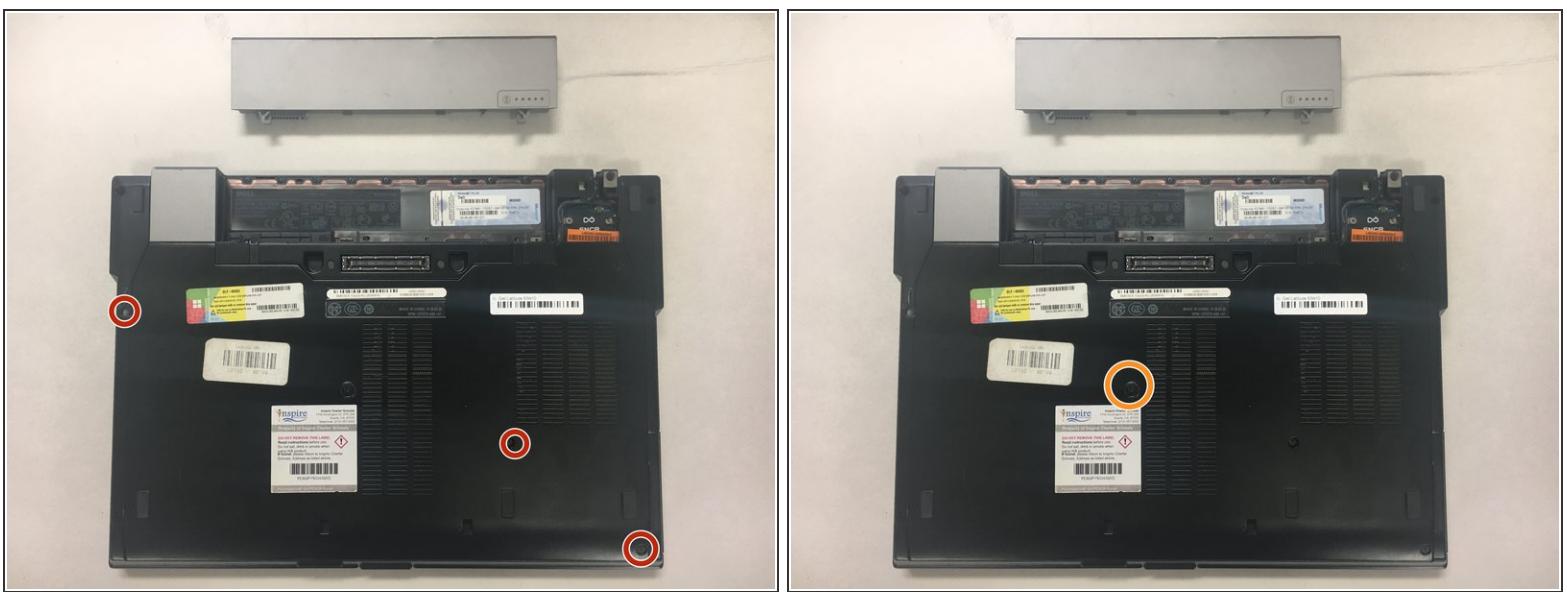

- Remove the following 5mm screws.
- Loosen the middle 5mm screw.



This document was generated on 2019-09-22 02:56:56 PM (MST).

Step 3

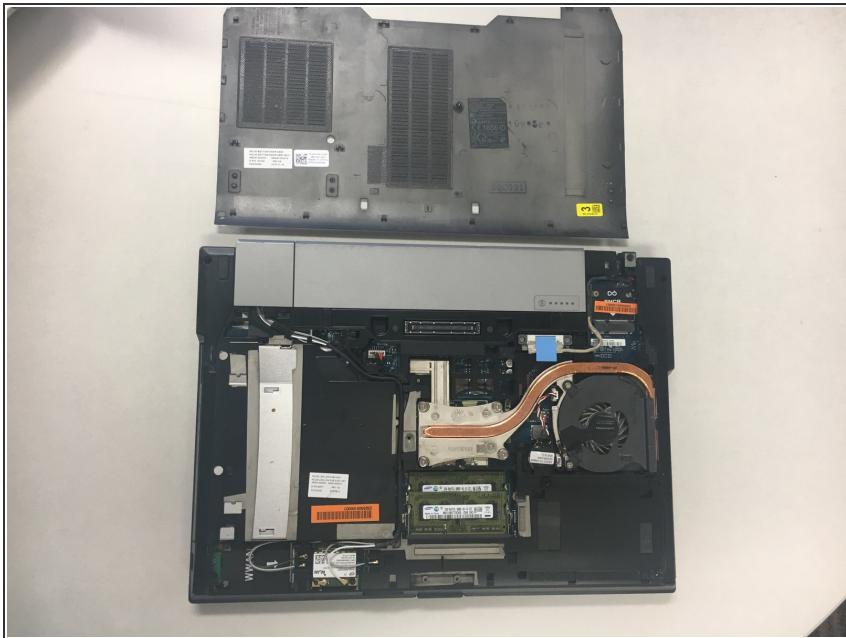

- Remove the back cover by sliding it downwards.


Step 4

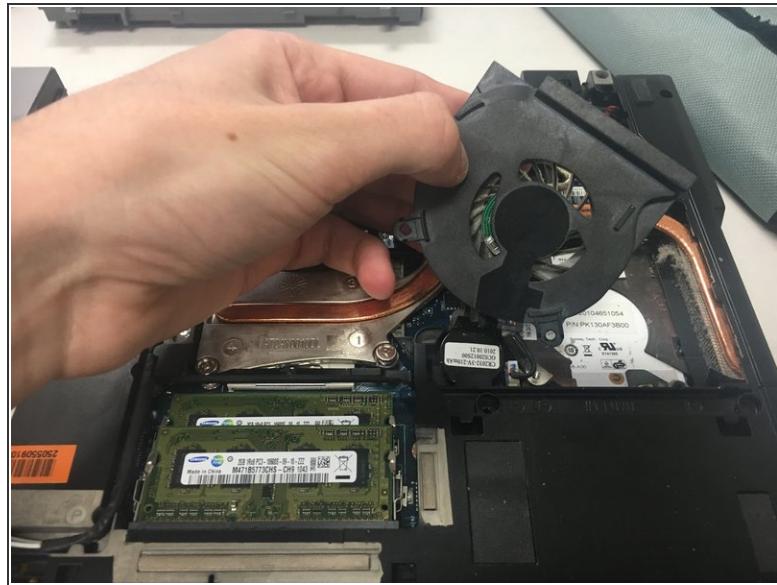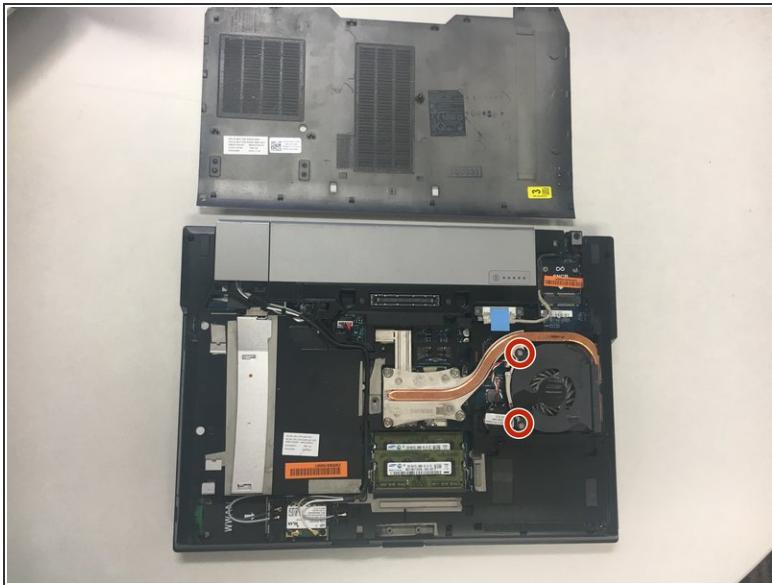

- Unscrew the following 2mm screws.
- Remove the fan case.

⚠ Do not pull hard enough to break the wires connected to the motor.

Step 5

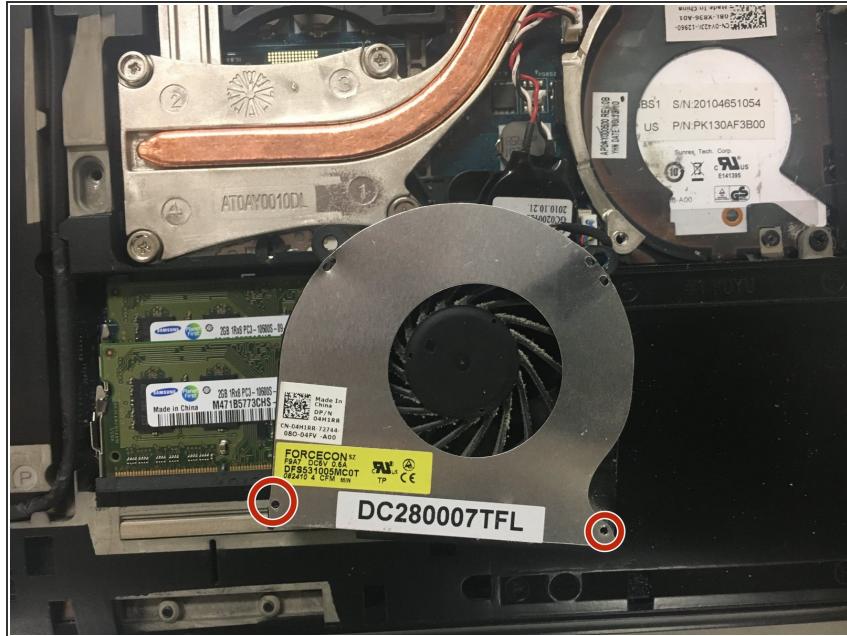

- Unscrew the 1mm screws on the fan case.

Step 6



- Remove the fan by pulling it away from the motor.

To reassemble your device, follow these instructions in reverse order.