




# Dell Latitude E6410 RAM Replacement

This guide will walk you through the steps of replacing the RAM in your Dell Latitude E6410.

Written By: Stephen Tate

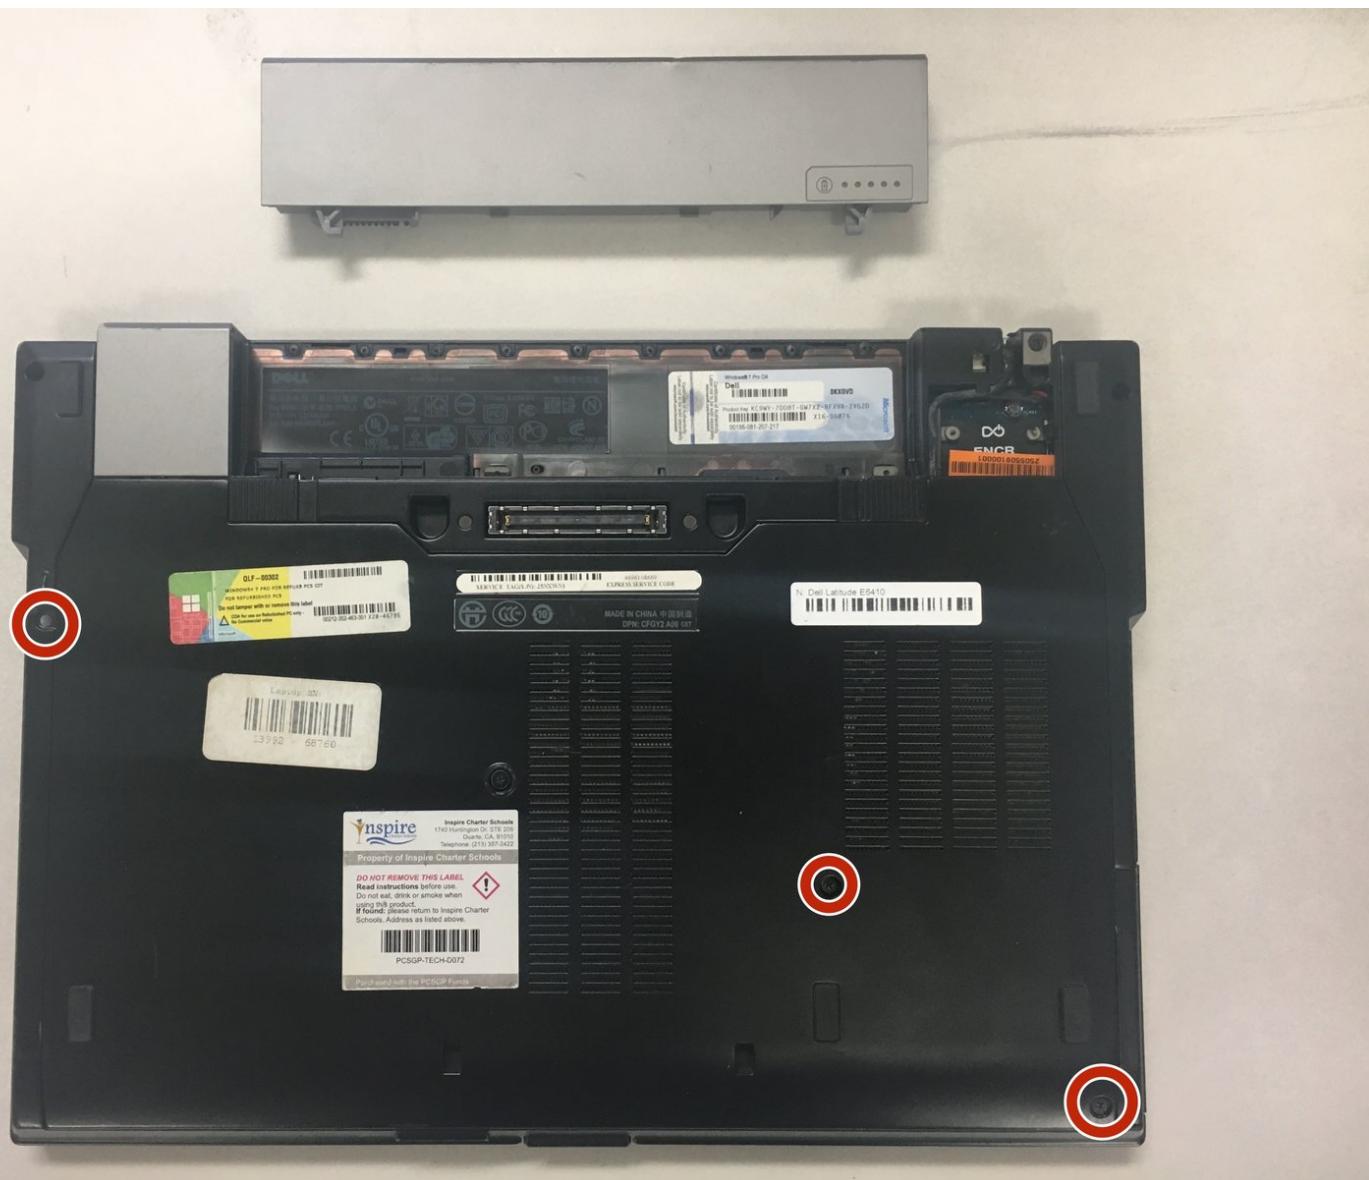

## INTRODUCTION

This guide will walk you through the process of replacing your RAM.

### TOOLS:


- Fingers (1)
- Phillips #0 Screwdriver (1)

## Step 1 — Battery




- Unplug power cord and place computer upside down on your desk.

## Step 2

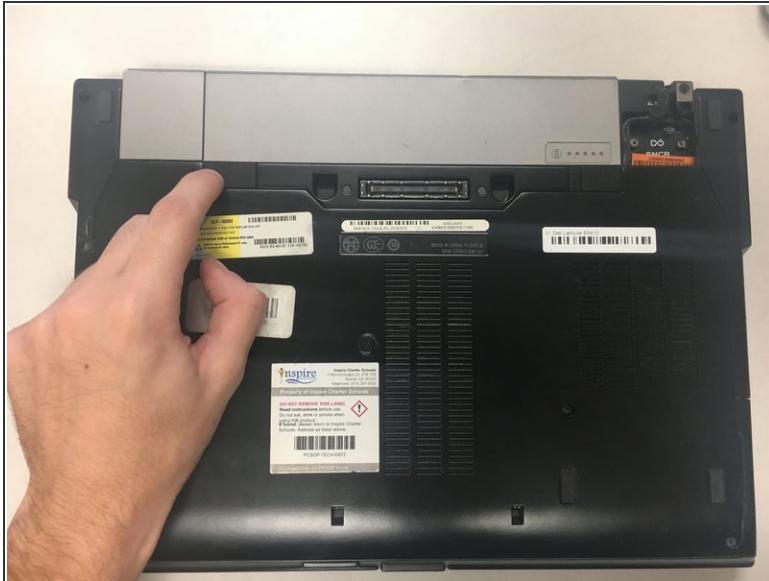


- Remove battery by sliding the locks inward and pushing the battery out.

## Step 3 — RAM

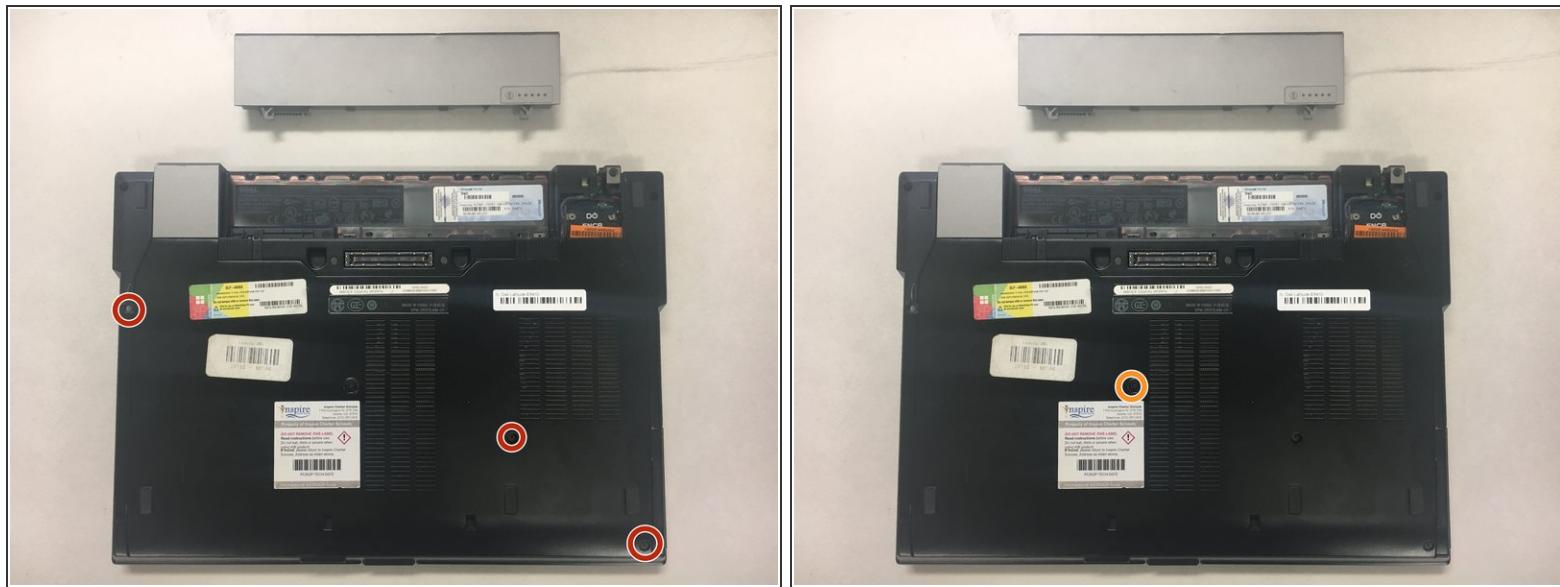


- Remove the following 5mm screws from the bottom of your laptop.
- Loosen the 5mm screw in the middle.

## Step 4

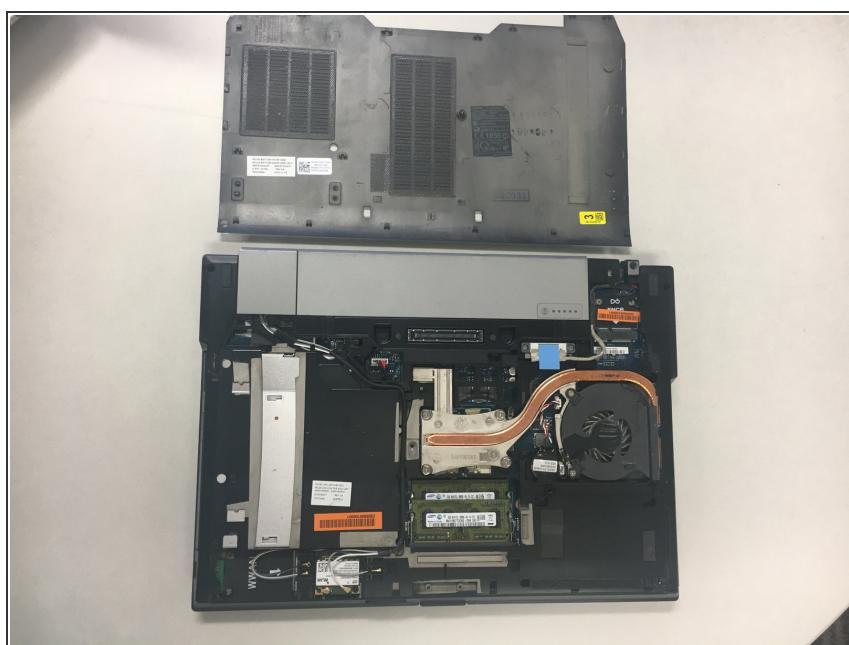

- Remove bottom cover by sliding it downwards.

## Step 5

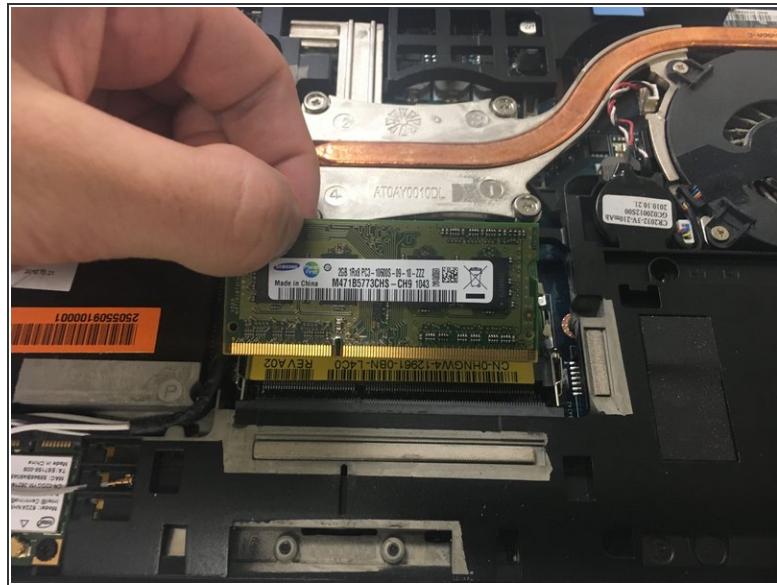

- Remove first RAM card by pushing clips outwards
- Pull the RAM card out.

***(i)*** Repeat this procedure for the second RAM card.

To reassemble your device, follow these instructions in reverse order.