



# Dell Latitude E6420 CD/DVD Drive Replacement

How to replace a Dell Latitude E6420 CD/DVD drive.

Written By: Madysen Eames



## INTRODUCTION

The CD/DVD drive may wear over time and stop recognizing discs. This guide will show the user how to remove the CD/DVD drive from the laptop.

## Step 1 — CD/DVD Drive



- Push the button in on the CD/DVD drive to eject the drive.

## Step 2



- Slide the drive out of the laptop.

! When removing the drive, keep it flat to prevent damage to anything inside the laptop.

To reassemble your device, follow these instructions in reverse order.