



Dell Latitude E6500 Battery Replacement

This guide will show the user how to replace the faulty battery within the laptop

Written By: Anthony Sands



Step 1 — Battery



- Place the laptop on a flat surface.
- Flip the laptop with the hinges facing outward.

Step 2



- Press the two buttons inward.
- Remove battery from its holster.

This document was generated on 2019-09-20 09:05:21 AM (MST).

To reassemble your device, follow these instructions in reverse order.