



Dell Latitude E6510 Keyboard Replacement

How to replace the keyboard in a Dell Latitude E6510.

Written By: AminElgazar



INTRODUCTION


In this section, you will observe how to very easily remove a damaged or malfunctioning keyboard. This breakdown of components can be done with ease: simply follow each step using the required tools. Tools needed are:

- Spudger
- Screwdriver
- Bit J00

TOOLS:


- [Spudger \(1\)](#)
- [JIS #00 Screwdriver \(1\)](#)

Step 1 — Keyboard

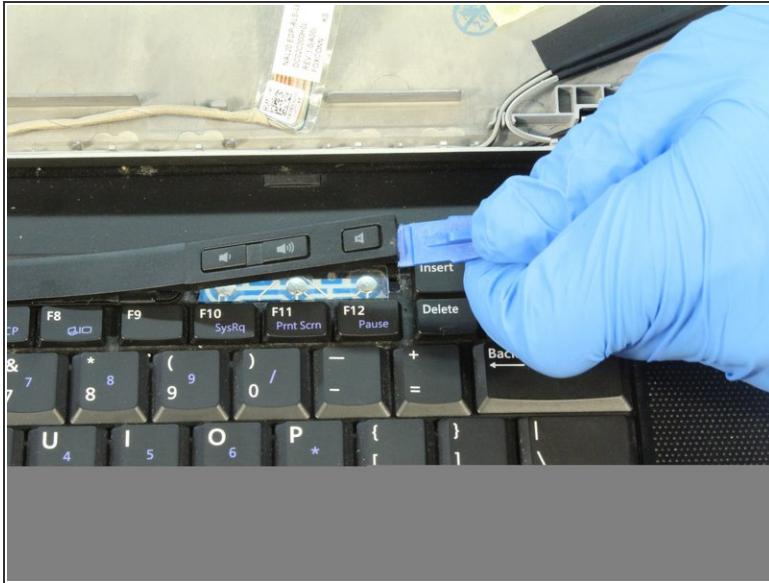

- Locate the keyboard and the led display cover.
- Using the prying tool, go to the furthest right side of the keyboard cover and wedge upwards to lift the component out.
- Locate the two M2.5X5mm screws and loosen using the J00 bit.

Step 2

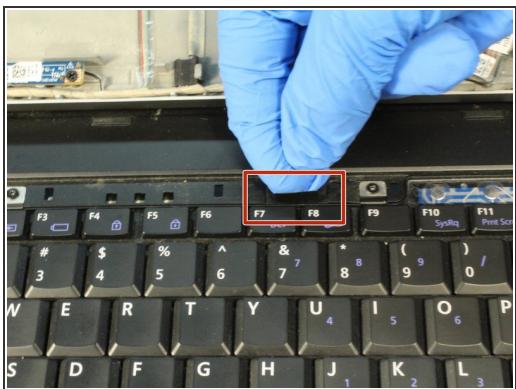

- Locate the tab above the F7 and F8 keys.
- Pull up and toward the screen to remove the keyboard from the main component.

To reassemble your device, follow these instructions in reverse order.