



Dell Latitude E6510 RAM Replacement

Looking to upgrade your memory? Use this guide to upgrade or replace your RAM sticks.

Written By: Kolin Doyle



INTRODUCTION

Looking to upgrade your memory? Use this guide to upgrade or replace the RAM on your Dell Latitude E6510.



TOOLS:

- [JIS #1](#) (1)
-

Step 1 — RAM



- Use a J1 screwdriver to remove the 8mm screw on the bottom cover.

Step 2



- Unclasp and pull the memory card up.

⚠ Be careful when unclasp and releasing the memory card. Clasps are fragile.

To reassemble your device, follow these instructions in reverse order.