




# Dell Latitude E6510 RAM Replacement

How to replace the RAM in the Dell Latitude E6510.

Written By: Seth Thomas

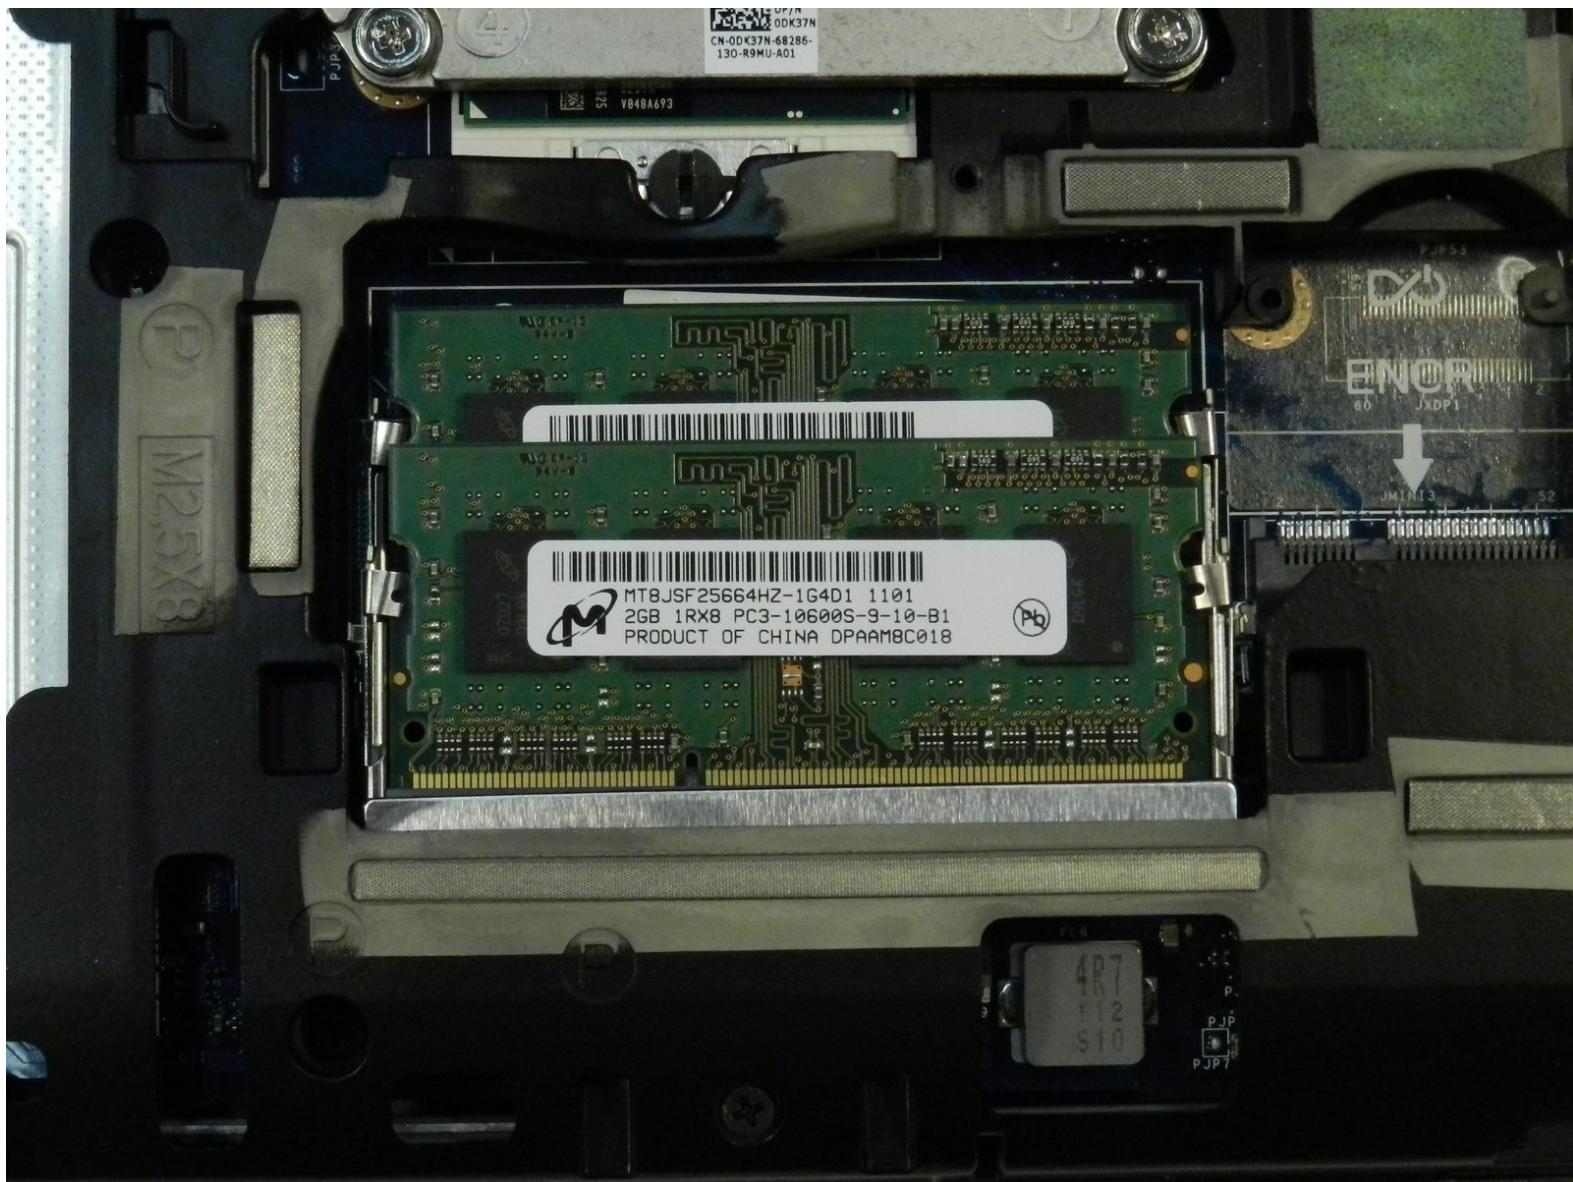


## INTRODUCTION

When the laptop becomes slow, it could be due to a shortage of RAM. This guide will show you how to replace RAM so that you can add or exchange RAM in your Dell Latitude E6510.

### TOOLS:


- Phillips #0 Screwdriver (1)

## Step 1 — RAM

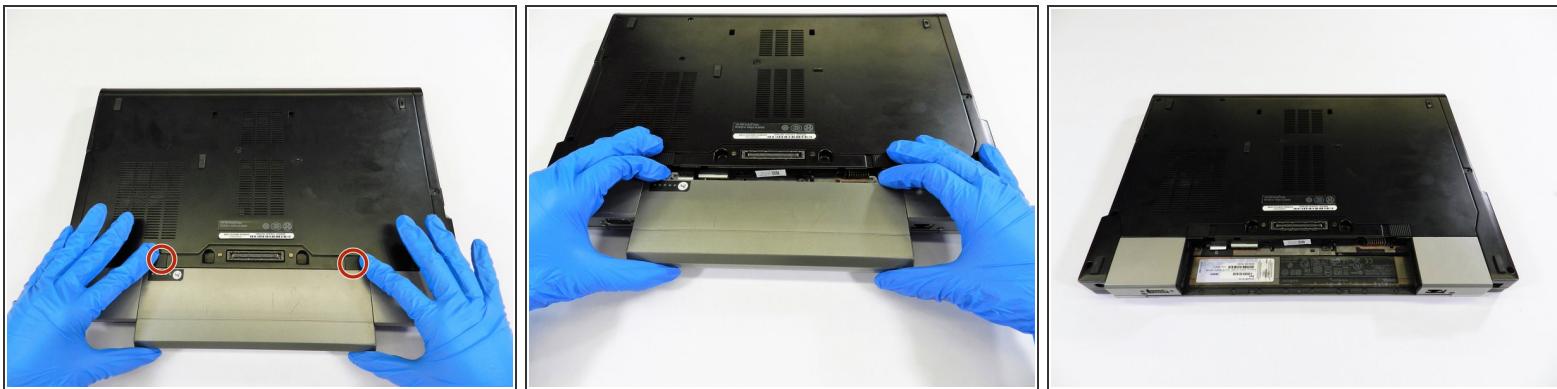


- Orient the laptop so that the bottom is facing up towards you.
- Place your thumbs on the grooved sections above the battery and firmly pull away from each other.
- Slide the battery out and separate it from the laptop.

## Step 2

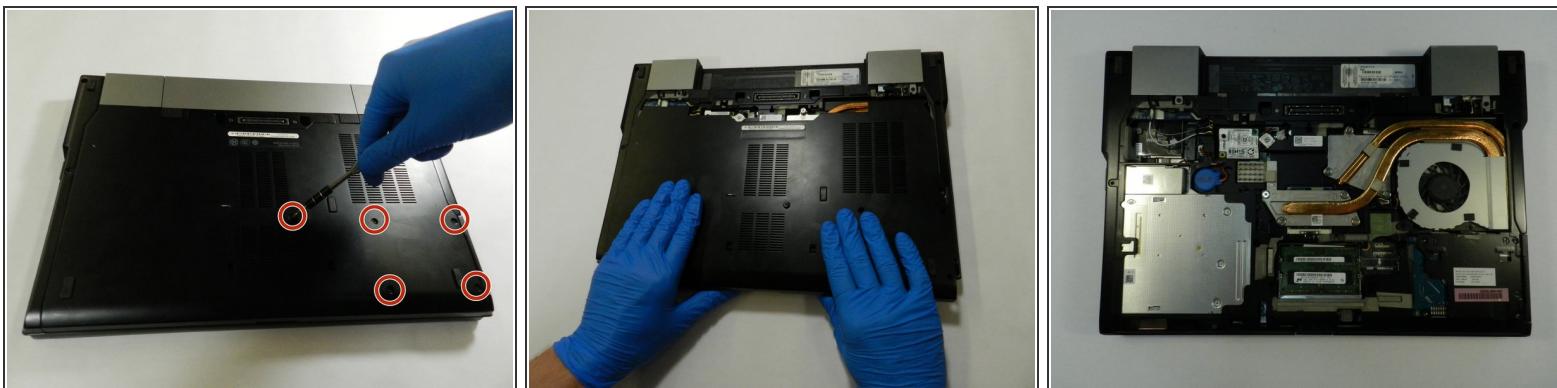

- Remove the 5 screws from the back panel with a type 0 Phillips head.
- Pull the panel towards you in a slightly upwards motion.
- Remove the panel from the laptop and set it aside.

## Step 3

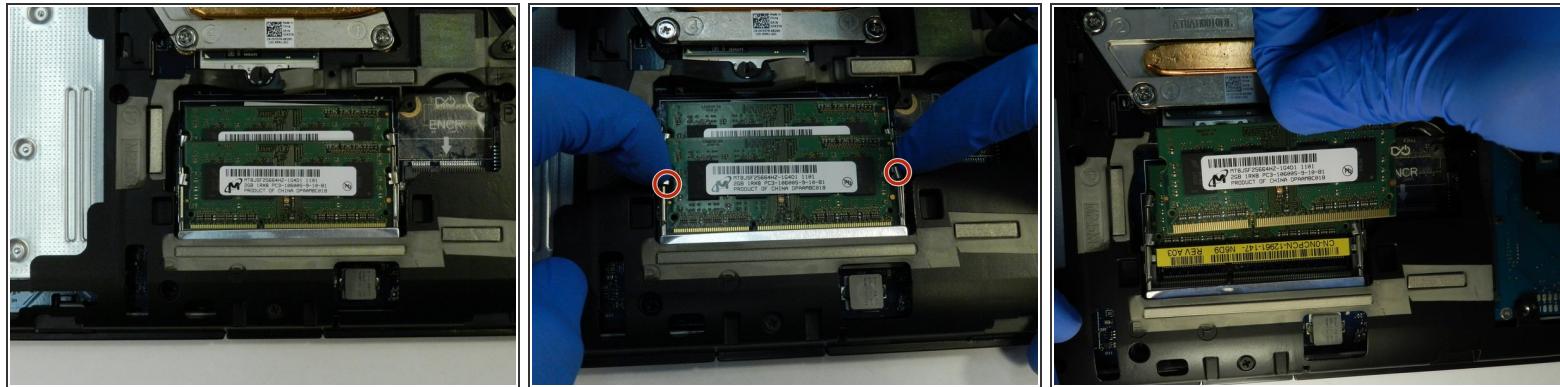

- Locate the RAM sticks in the laptop.
- Using your fingers, disconnect the prongs connected to the RAM sticks.
- Gently remove the RAM from the port.
- Repeat the first three steps to remove the second RAM stick.

To reassemble your device, follow these instructions in reverse order.