



Dell Latitude E6520 WLAN Adaptor Card Replacement

This guide demonstrates a simple procedure to properly remove the WLAN Adapter Card from a Dell Latitude E6520.

Written By: Alec Weiss



This document was generated on 2019-10-21 08:52:54 PM (MST).

INTRODUCTION


The WLAN Adapter Card is what allows the computer to connect to Wi-Fi.

The WLAN Adapter Card is connected to the laptop by 2 J0 PH screws with a head size of 4.44 mm and a length of 3.67 mm.

TOOLS:


- JIS #0 Screwdriver (1)

Step 1 — Battery

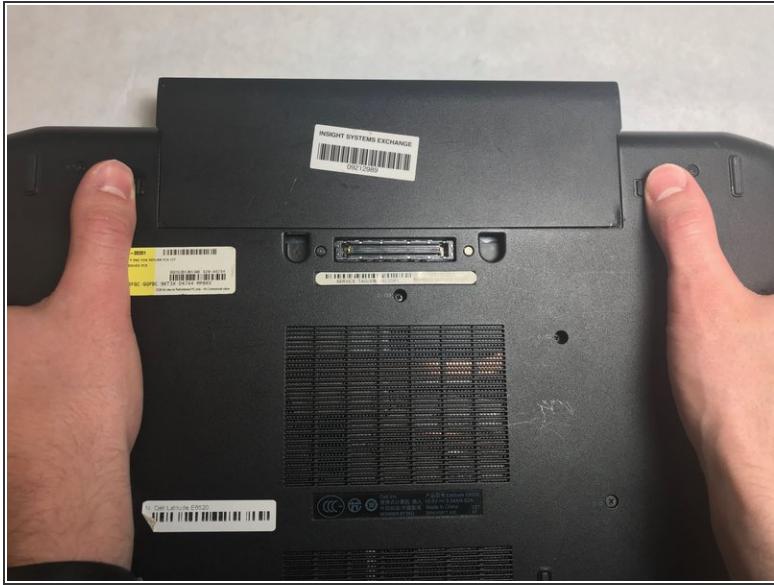


- With the laptop closed and the bottom side facing up, slide the two battery latches towards the sides of the laptop.
- (i)* When the latches are unlocked, a small logo resembling an open padlock will become visible.

Step 2

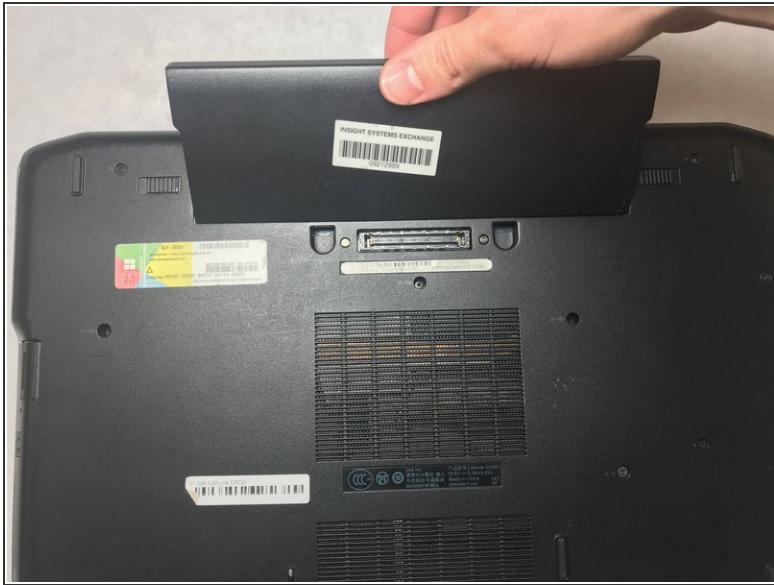

- Grasp the battery from the top and pull upward.

Step 3 — Bottom Cover

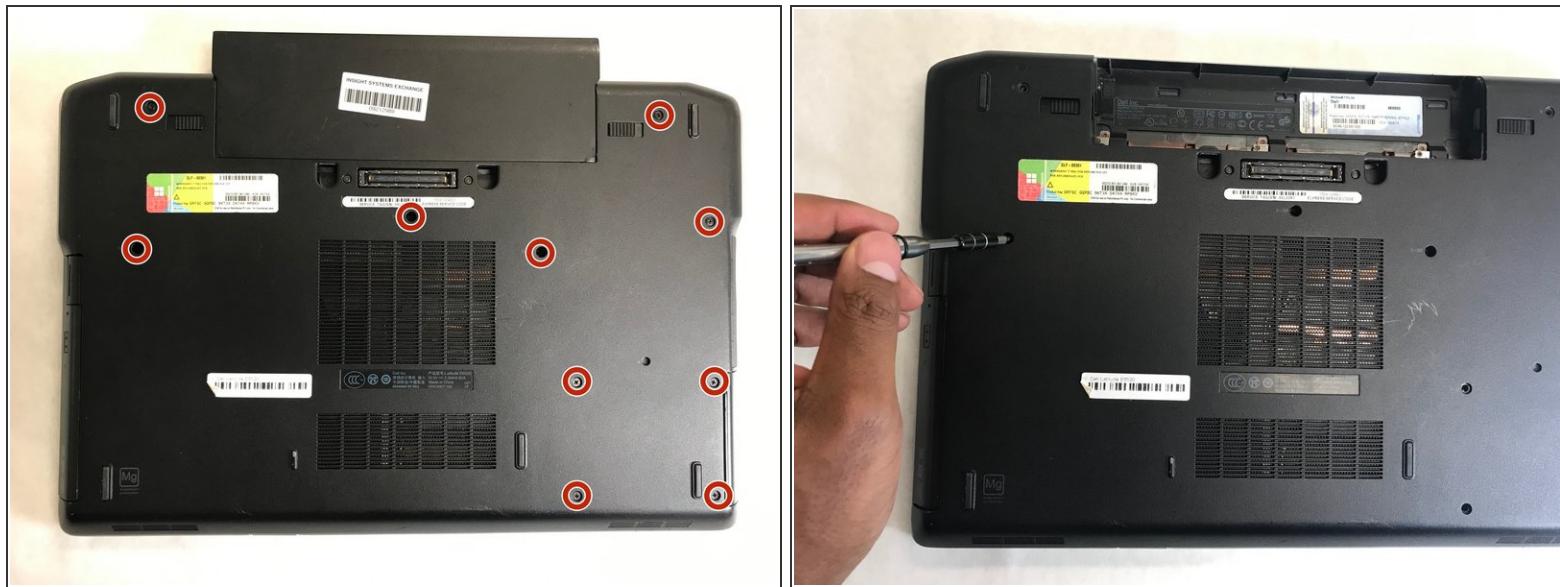

- Remove the ten 8.6 mm JIS #0 screws.

Step 4





- Place fingers underneath cover and pull off the cover.

Step 5 — WLAN Adapter Card



- Gently pull the two wires connected to the WLAN Adapter Card.


Step 6

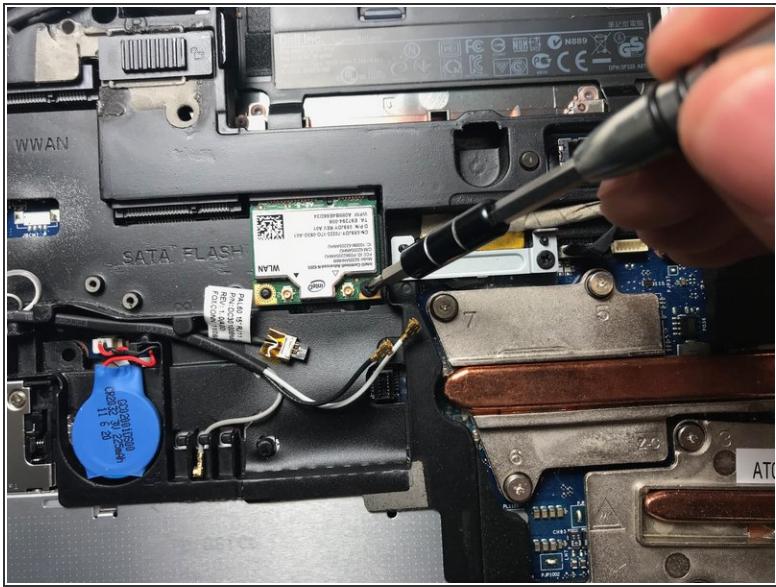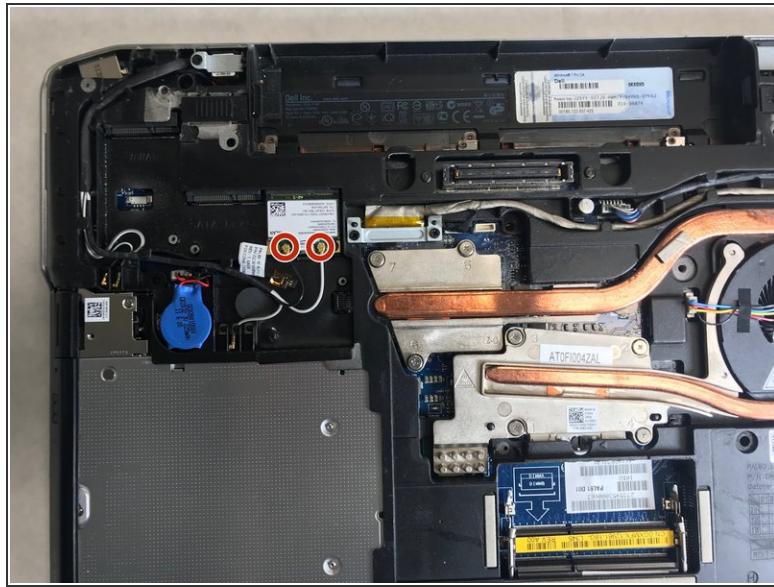

- Remove the two electrode connectors.
- Remove the single 3.67 mm JIS #0 screw that holds the WLAN Adapter Card to the laptop.

ⓘ The WLAN Adapter Card will pop up once the screws are taken out.

Step 7

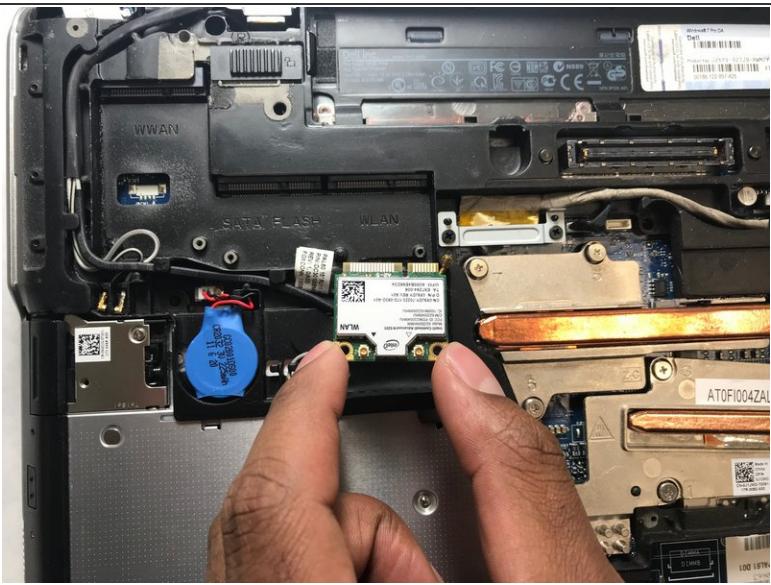

- Pull WLAN Adapter Card to remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.