



Dell Latitude E7470 Keyboard Replacement

This guide is going to show you how to replace the keyboard in the Dell Latitude E7470.

Written By: Bo Zeng



INTRODUCTION


This guide is going to show you how to replace the keyboard. But first, we need to remove whatever covers the keyboard. So this is going to be time-consuming. Be patient!

Before you start your replacement, make sure that you have powered off your laptop completely

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [Anti-Static Wrist Strap \(1\)](#)

Step 1 — RAM

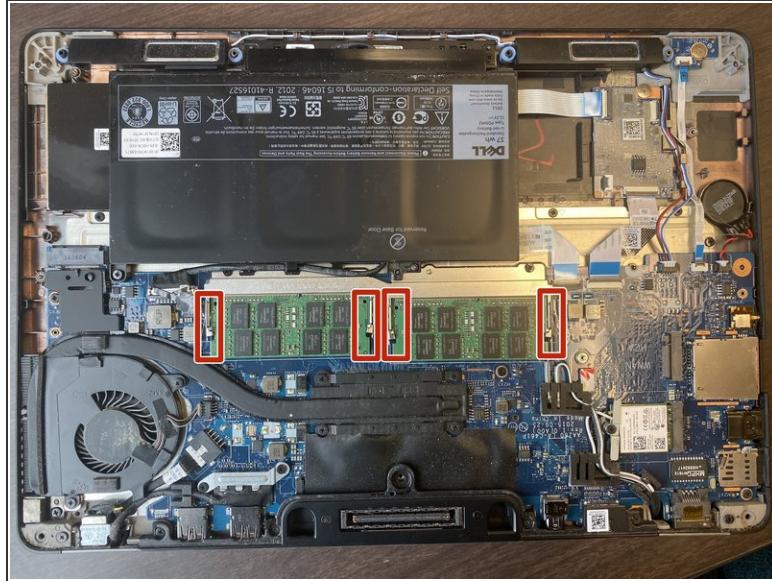


- Grab the two clips beside the RAM stick and pull them outward. The RAM stick should release.
- Remove the RAM from the device.
- Repeat this for second RAM stick

Step 2 — Fan and Heatsink

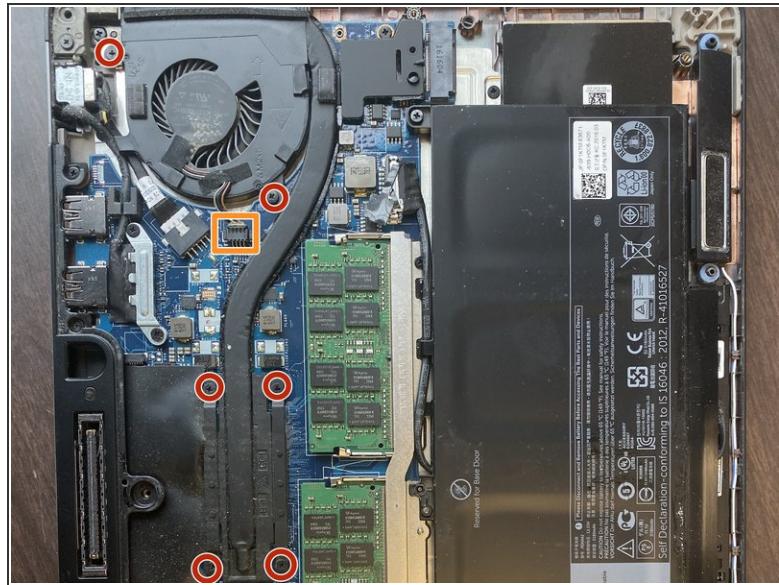


- After opening the backcase of the computer, remove the screws using the Phillips #0 screwdriver.
- Unplug and remove the wire from the socket.

Step 3

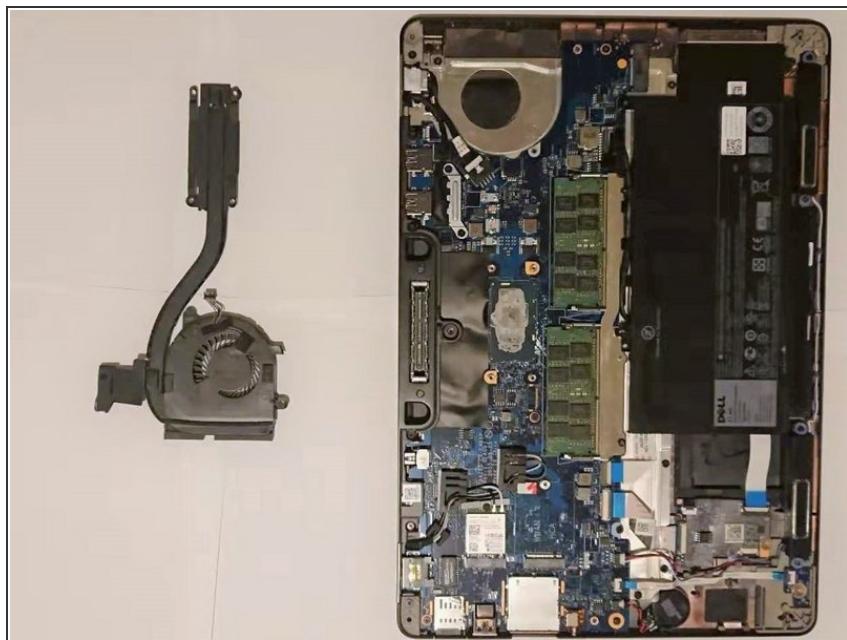



- Remove the fan and heatsink from the laptop.

Step 4 — Battery

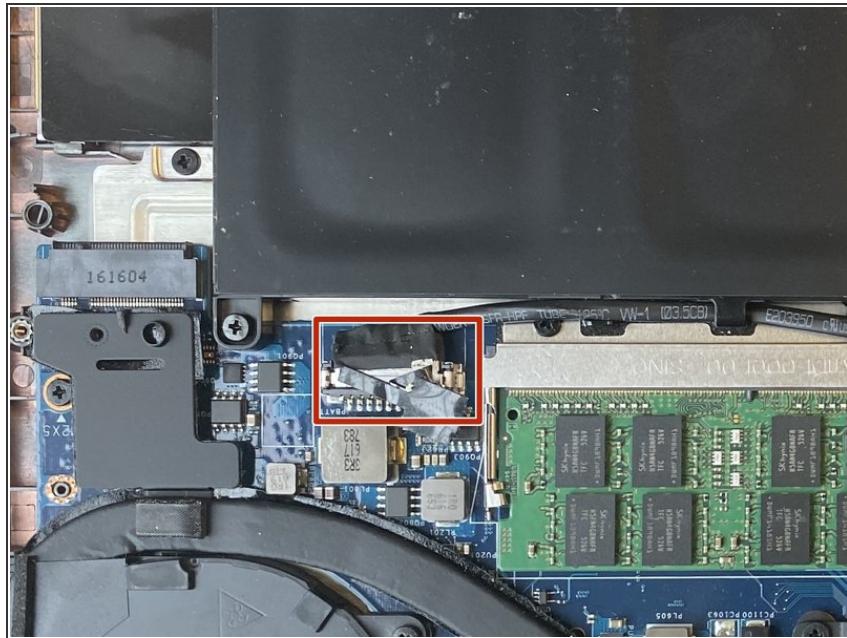


- Use the pull tab on the battery connector to lift the connector straight up off its socket on the motherboard, disconnecting it.

Step 5

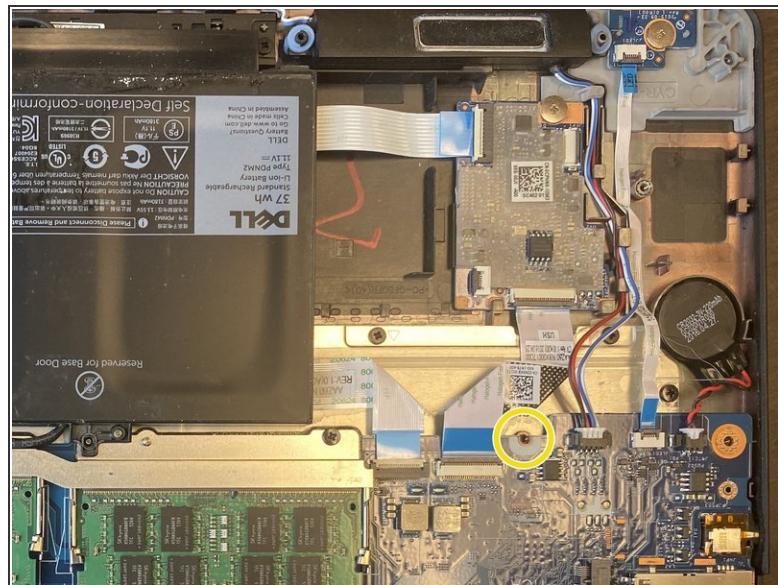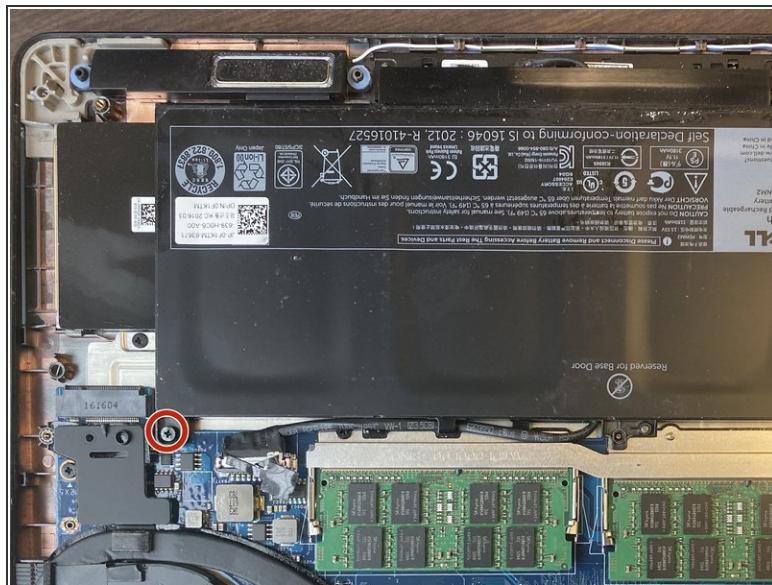

- Remove the single 4 mm Phillips screw securing the bottom left corner of the battery.
- If you are removing an extended capacity battery, remove the Phillips screw securing the bottom right corner of the battery.

Step 6

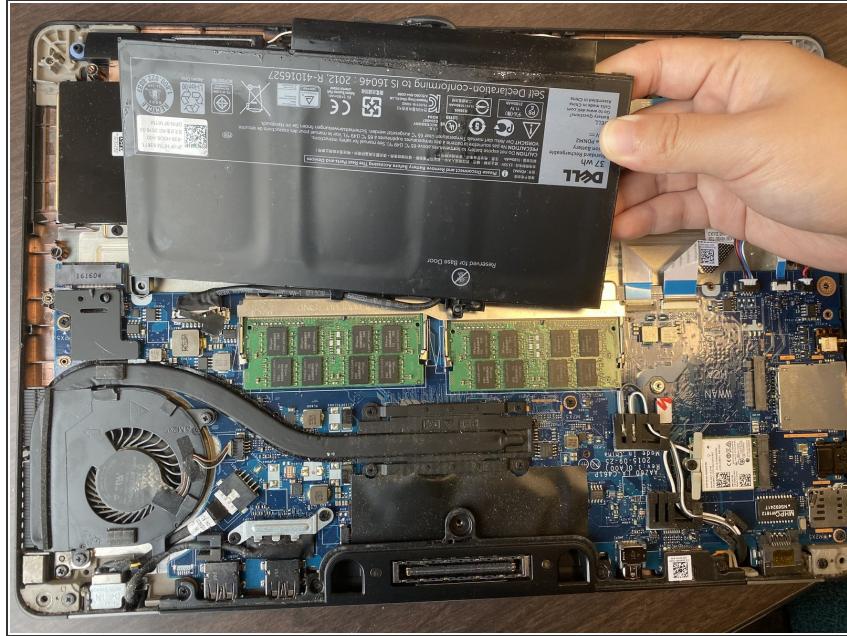


- Remove the battery from the laptop.

Step 7 — Motherboard



- Remove all the screws using a Phillips #0 screwdriver.
- Disconnect all of the cables from the motherboard.

Step 8

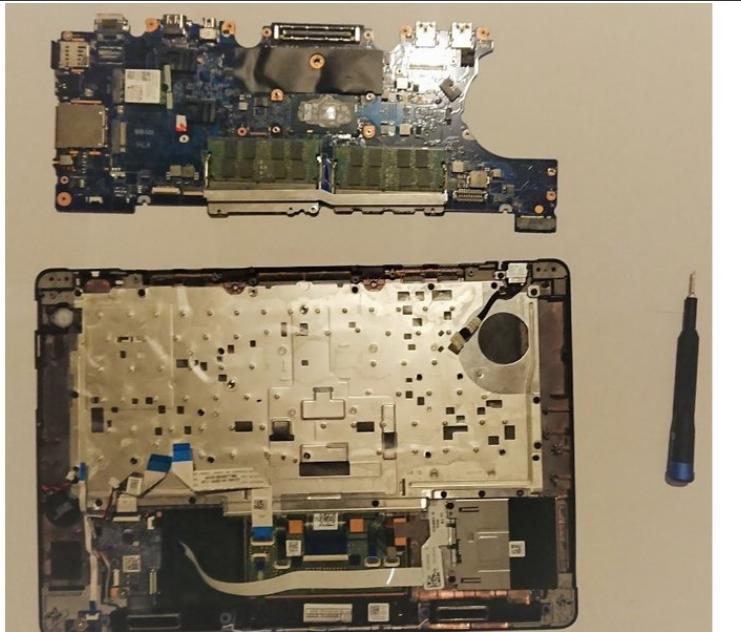



- Remove the motherboard from the laptop.

Step 9 — Keyboard




- Use a Phillips #0 screwdriver to remove the seventeen 4 mm screws.

Step 10

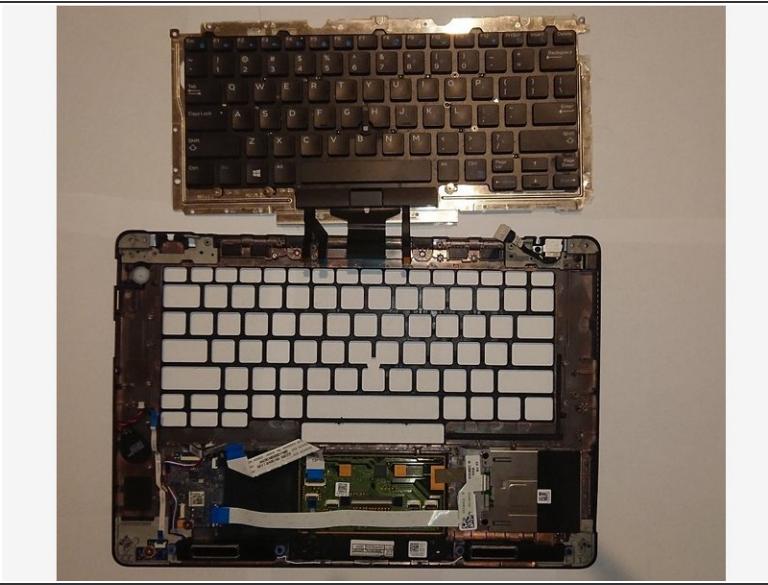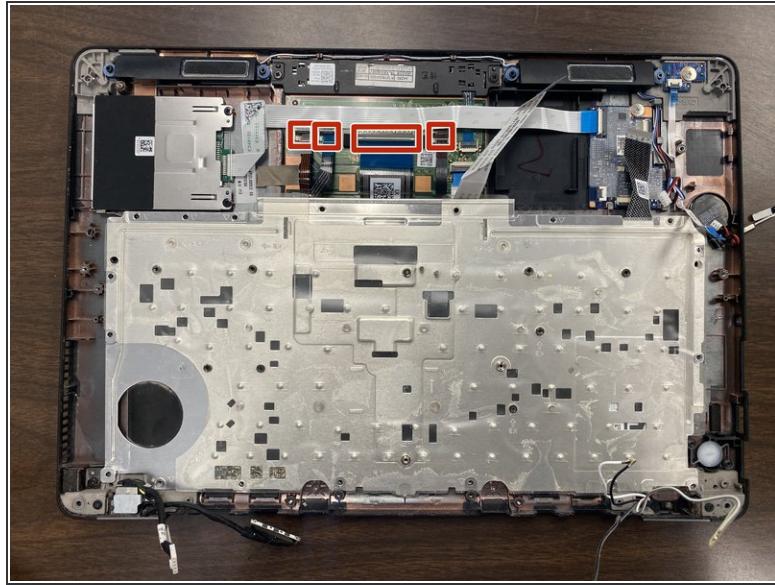

- Disconnect the four ribbon wires labeled by the red rectangles by pushing aside the metal release tab and gently pulling the ribbon wire.

Step 11

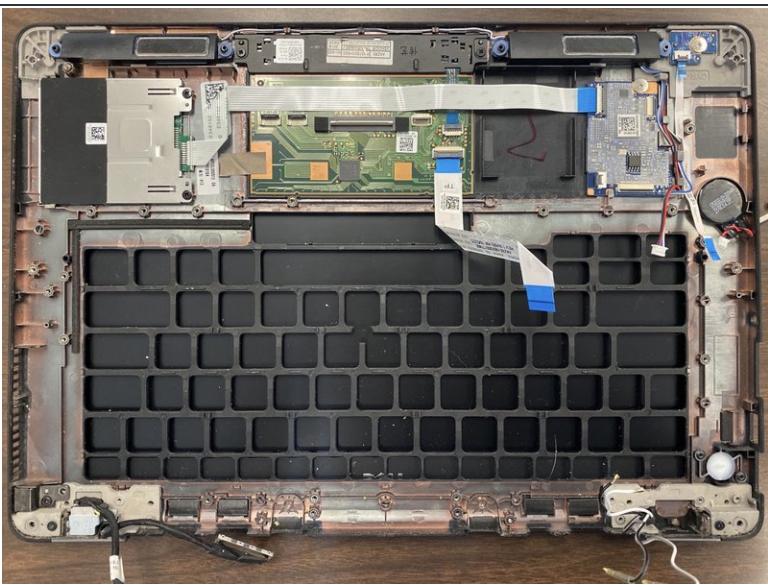

- Remove the keyboard from the device.

To reassemble your device, follow these instructions in reverse order.