




Dell Latitude EG6510 Fan Replacement

How to replace the fan in a Dell Latitude EG6510.


Written By: Christopher Owen

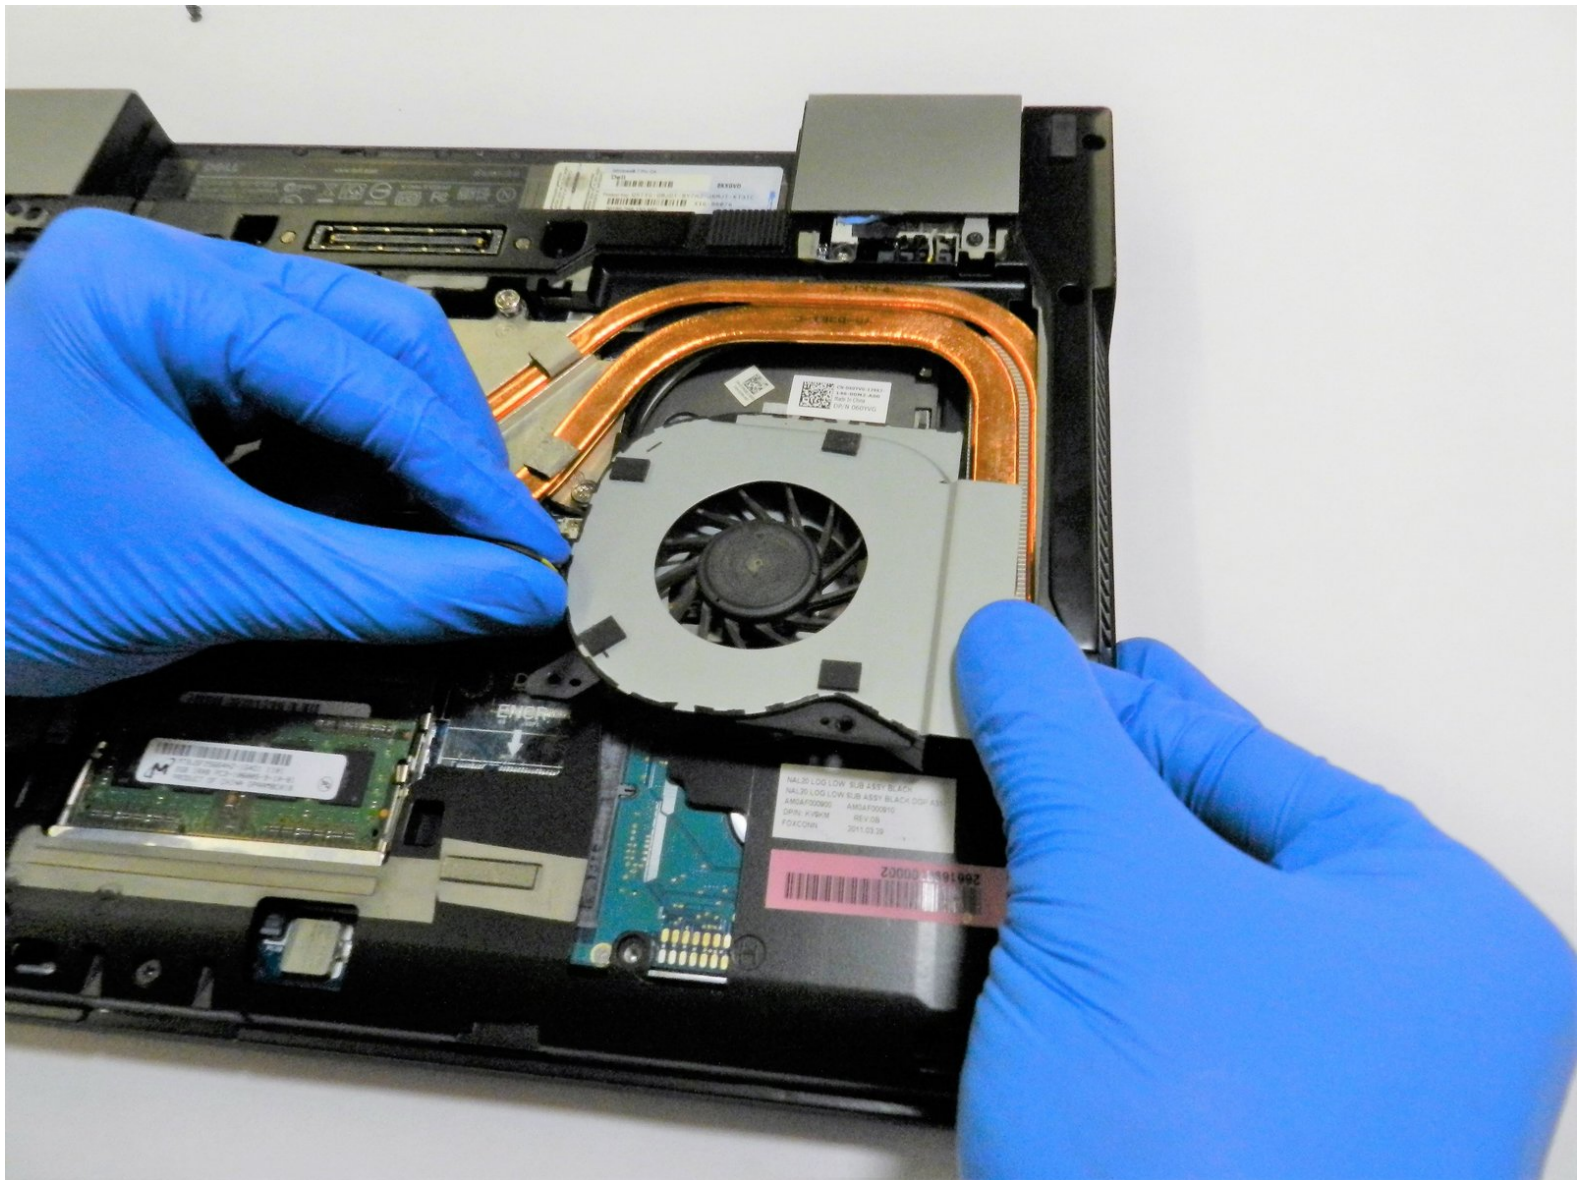

INTRODUCTION


If the laptop tends to overheat, this could be a result of the fan not functioning properly. The following is a step-by-step guide to remove and replace the fan in the Dell Latitude E6510.

Step 1 — Fan

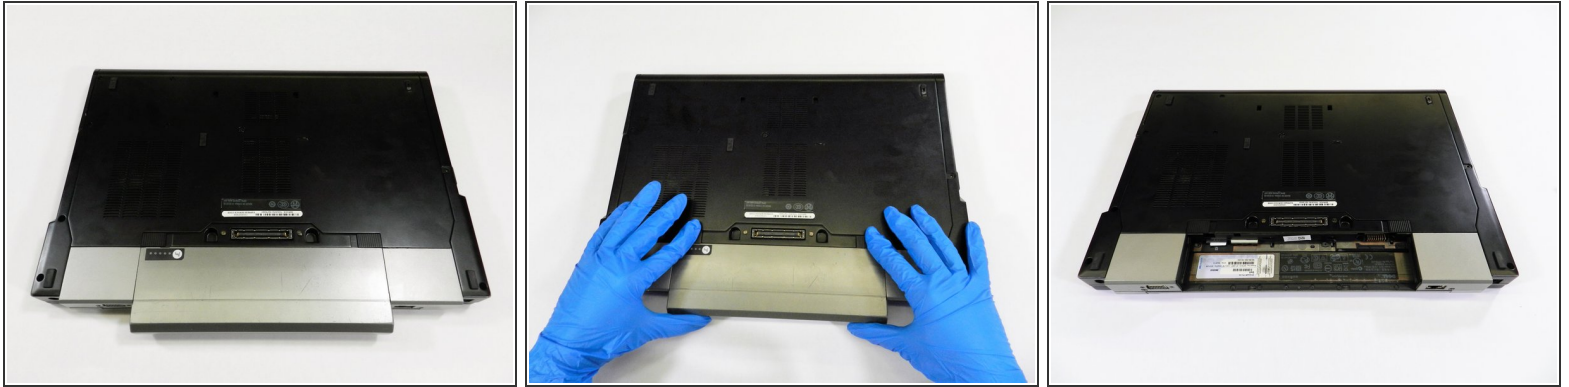


- Push the two tabs in and pull out the battery pack.

Step 2

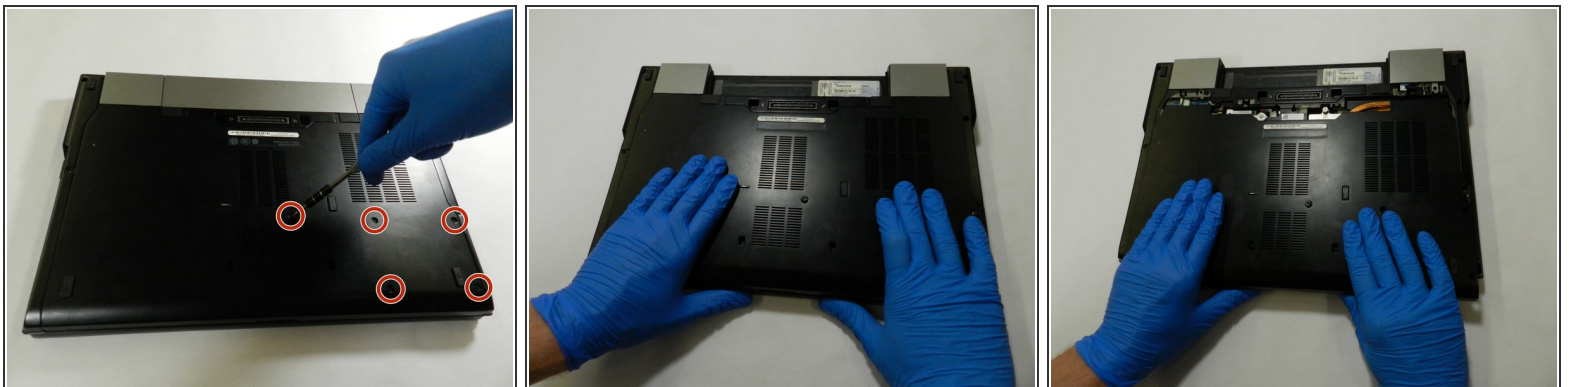


- Remove the 5 screws from the back panel of the laptop using a Type 0 Phillips Head screwdriver.
- Slide the back panel off of the computer.

Step 3

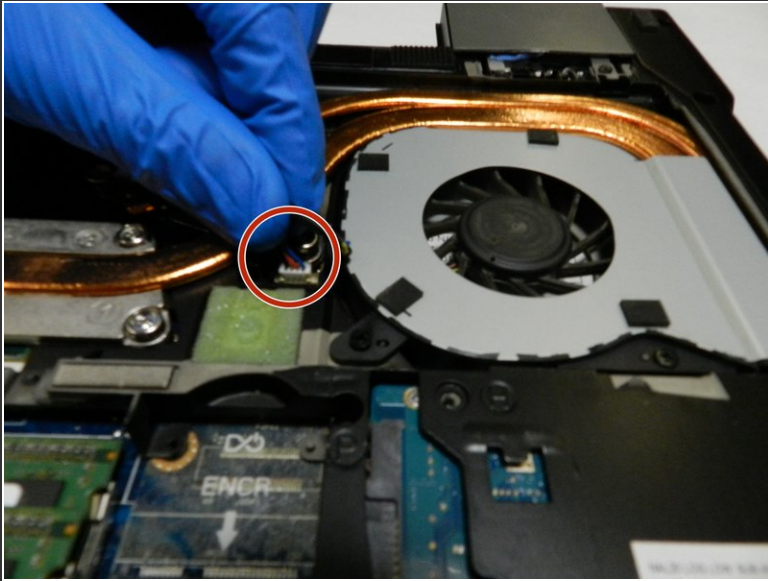


- Carefully detach the fan power supply cable.

Step 4

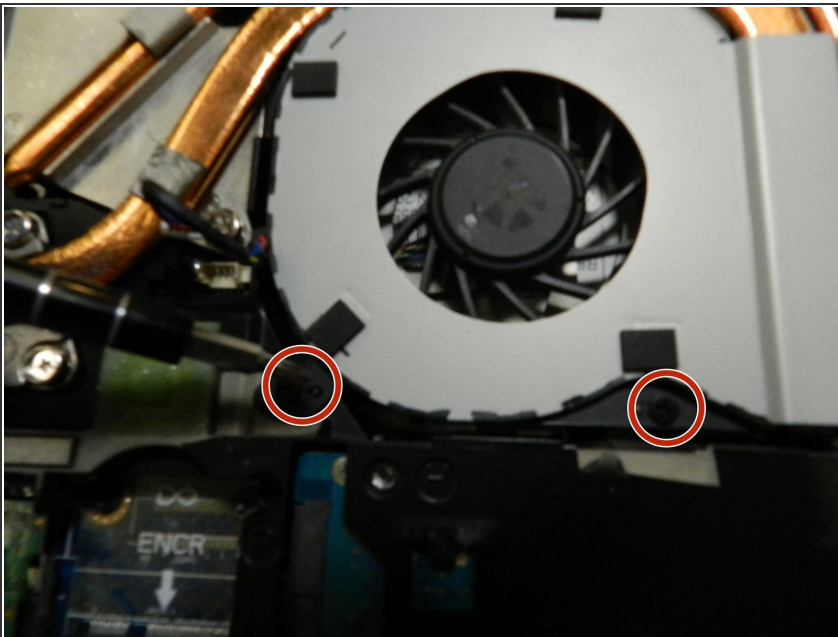

- Remove the two screws connecting the fan to the laptop using a type 0 head Phillips screwdriver.

Step 5

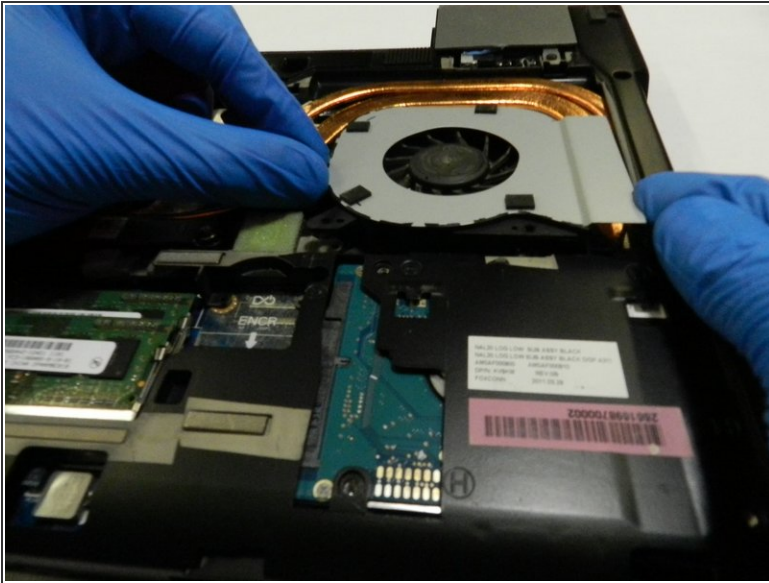

- Remove the fan from the laptop.

To reassemble your device, follow these instructions in reverse order.