


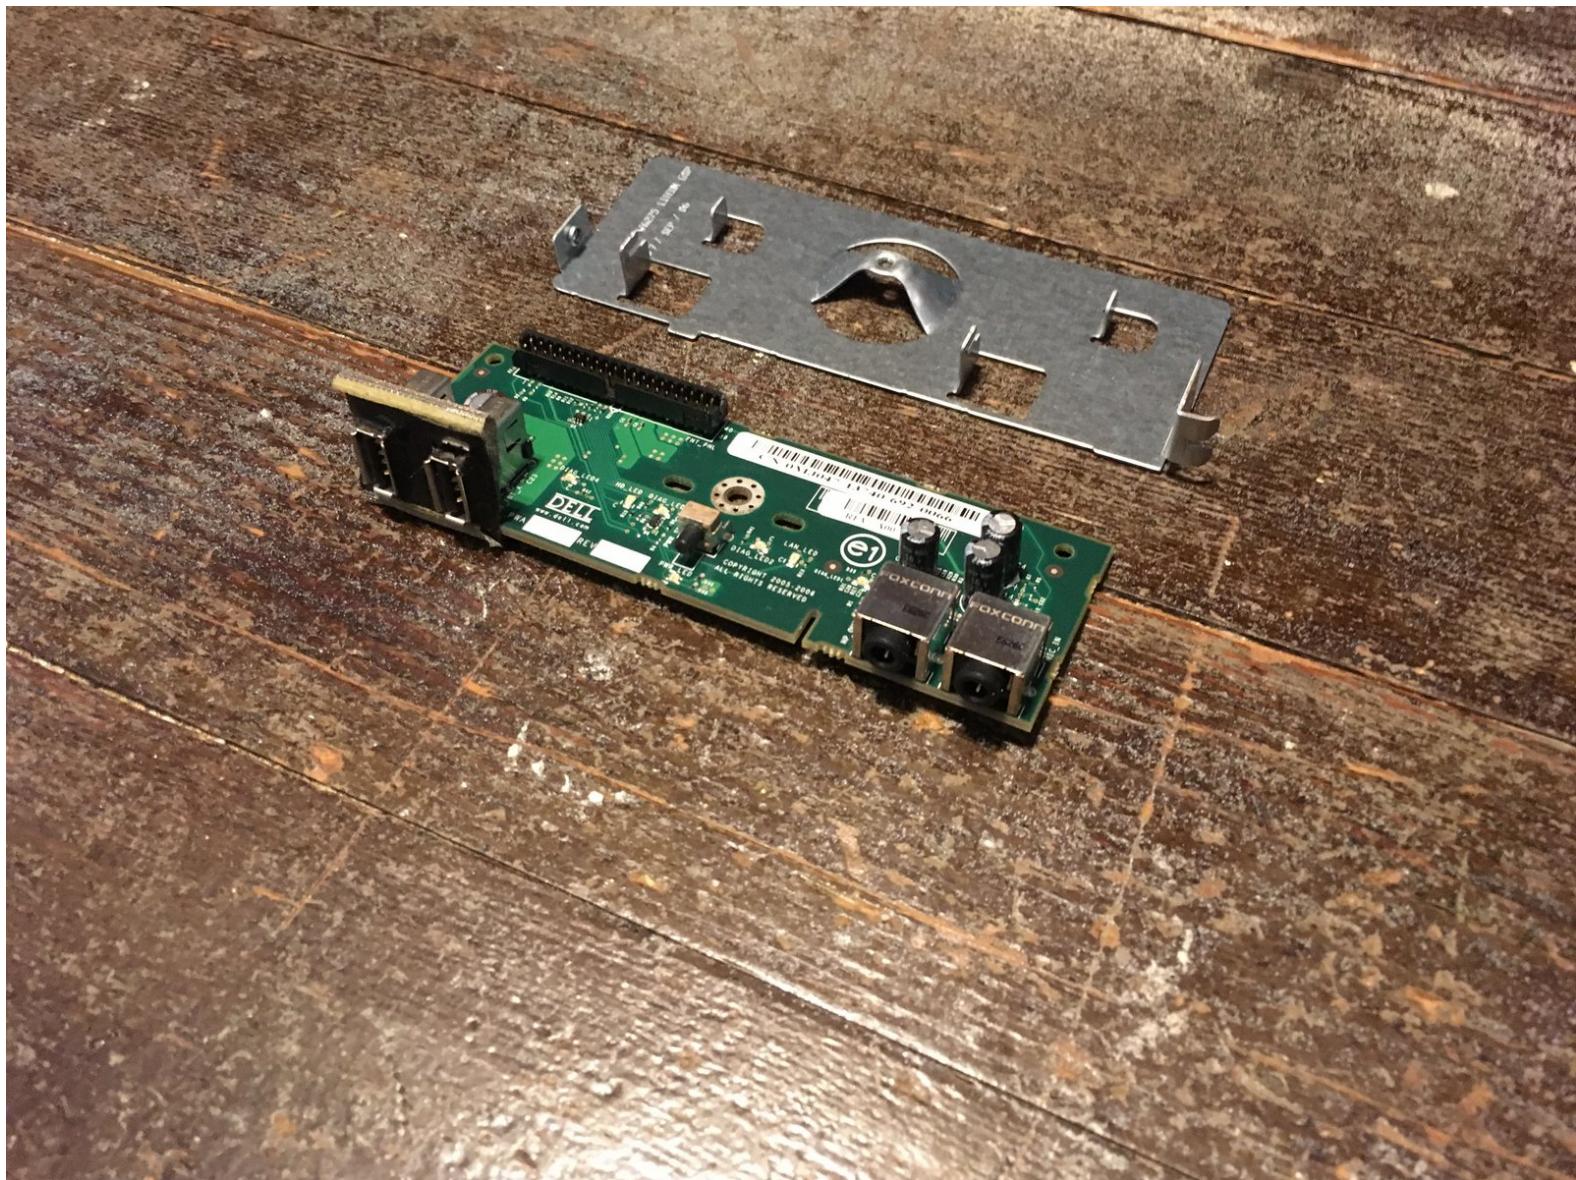

Dell Optiplex GX620 Front panel Replacement

Front panel removal and replacement for a Dell Optiplex GX620.

Written By: Padraic Hoselton



 **TOOLS:**

- Phillips #2 Screwdriver (1)

Step 1 — How to unplug and discharge before repair



- Power down your PC and remove the power cord from the back.

Step 2




- Press and hold the power button for about 10 seconds, then release.
- *(i)* This helps drain any remaining power stored in the capacitors, so that you can safely work on the internal components.

Step 3 — Dell Optiplex GX620 Side Panel Disassembly




- With the computer standing upright, firmly pull on the tab at the back of the computer.
- When the side panel pops free, gently pull the panel away from the computer.
- (i)* If you have trouble freeing the side panel from the case, you may need to pull the tab a bit harder.

Step 4 — Unplug your hard drive.

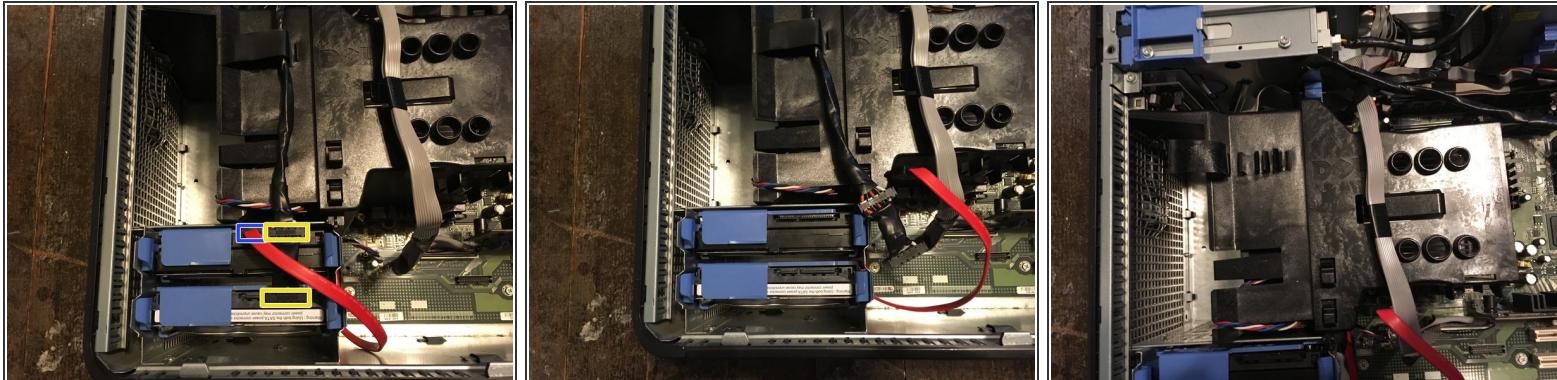

- Remove the SATA power and data cables.
 - SATA Power
 - SATA Data

Step 5 — Unplug your floppy drive.

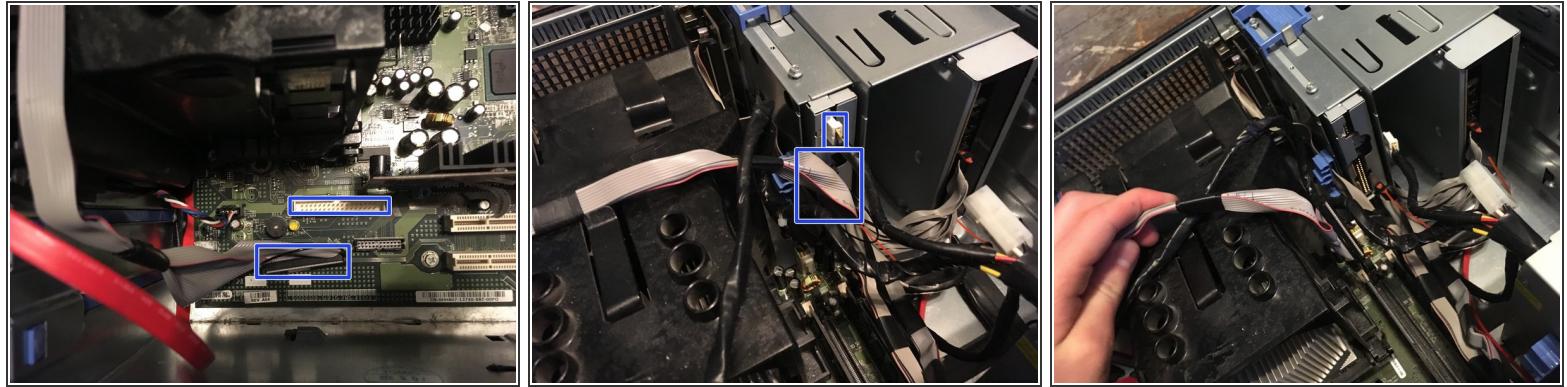


- Unplug the power and data cables.

Step 6 — Unplug the fan.



- Unplug the fan.

Step 7

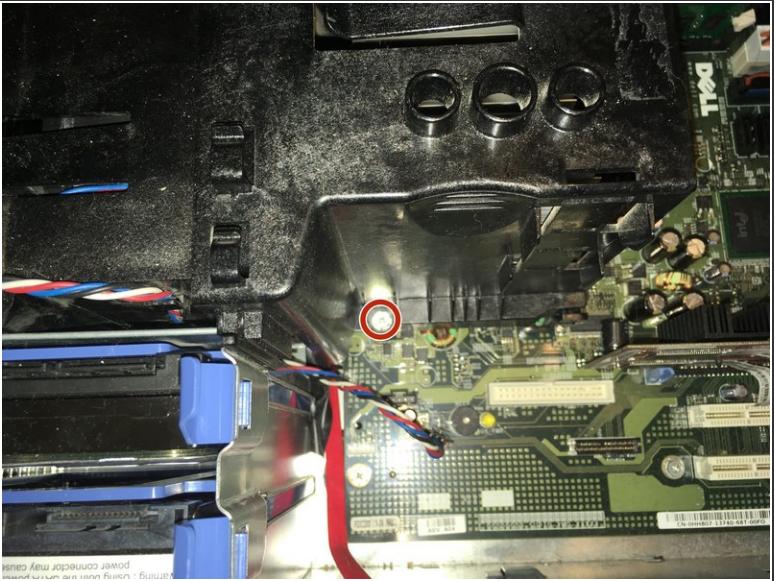


- Remove the two Phillips #2 screws.

Step 8 — Remove the heat sink.




- Pull the heat sink up.

Step 9

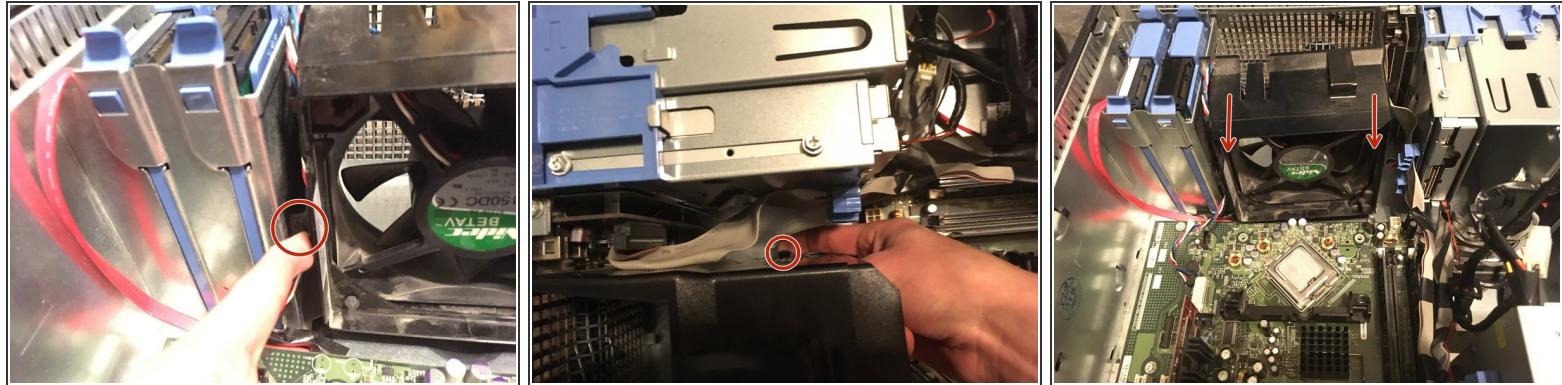

- Pull the two tabs and pull it out.
- This needs a lot of force to take it off.



Step 10 — Remove front panel

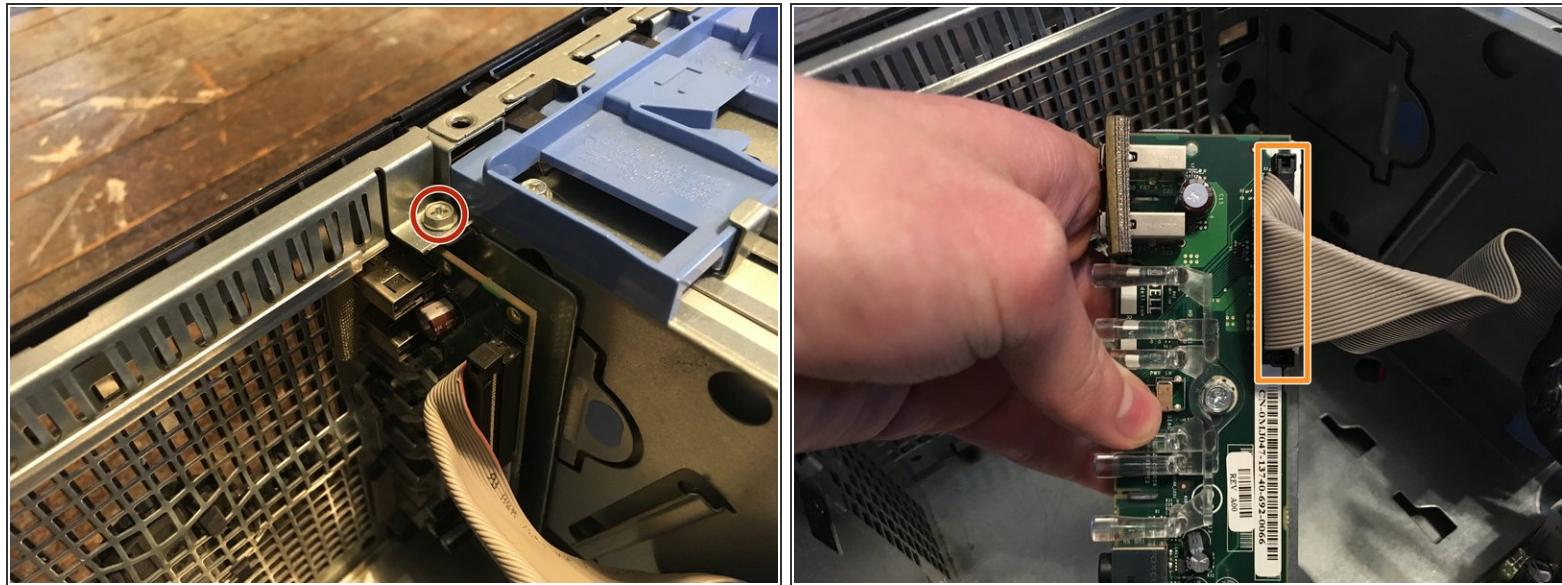

- Remove the one Phillips #2.
- Remove the Data cable.

ⓘ Taking this cable off will break some of the plastic that's locking it in. But you can still plug the cable back in.

Step 11 — Remove the last screw.

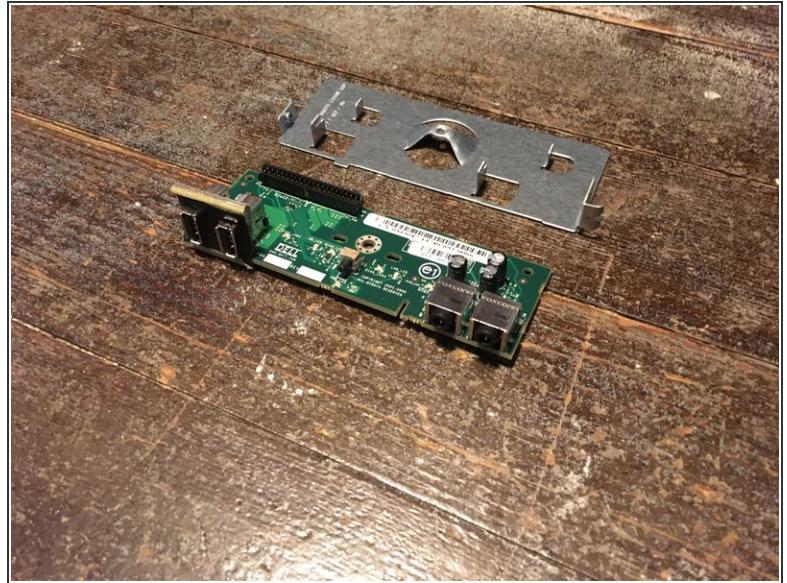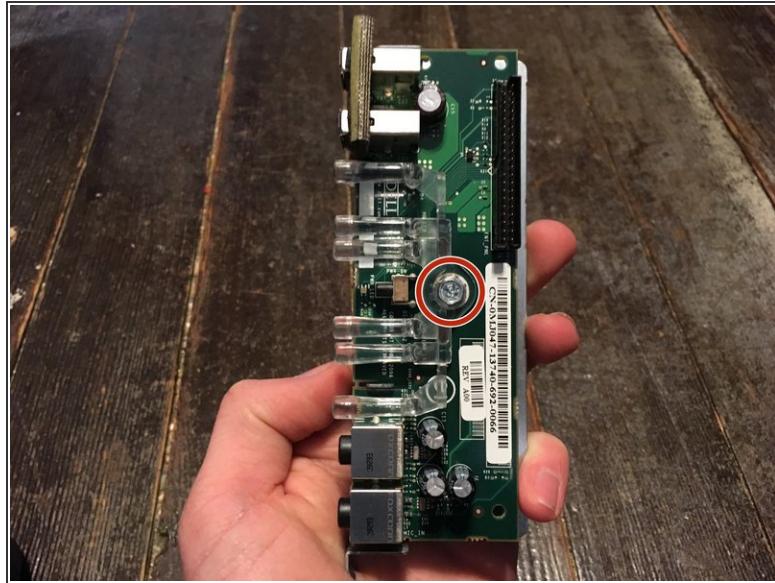

- Remove the one Phillips #2 screw.
- Now you can replace it with a new one.

To reassemble your device, follow these instructions in reverse order.