



Dell Optiplex SX280 Optical Drive Replacement

Optical Drive (CD, DVD)

Written By: Tom



INTRODUCTION

Replace the Optical Drive in the computer tower to allow the Optiplex to read CD's and DVD's

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)

Step 1 — Optical Drive




- Position the tower with the Optical Drive facing upward.

Step 2



- Remove the small black screw connecting the Optical Drive to the computer.

Step 3

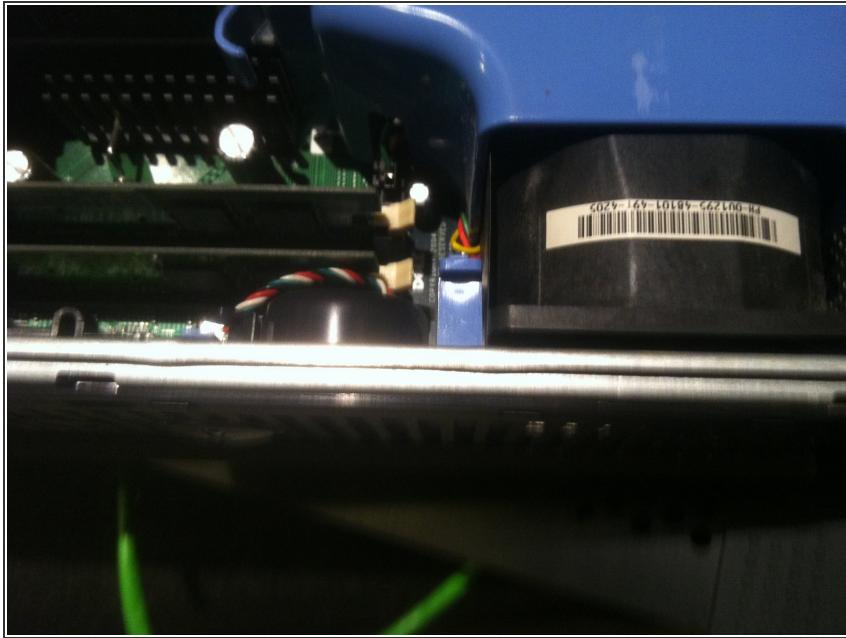

- There is a little blue tab you have to disengage, inside of the case, to be able to pull the DVD drive out. Simply pull it up to release the DVD.

Step 4



- Press on the drive release button.

Step 5



- Pull Optical Drive out of the computer.

To reassemble your device, follow these instructions in reverse order.