



Dell Optiplex SX280 RAM Replacement

RAM cards removed from computer.

Written By: Wyatt



INTRODUCTION

Prerequisite Only

Step 1 — RAM



- The RAM are the two green cards in the corner of the computer.
- At each end of the card, there are two white clips securing the RAM to the Motherboard.

Step 2



- Push down both white clips with your thumbs until you hear a click.
- The RAM cards can now be removed.

To reassemble your device, follow these instructions in reverse order.