



Dell Photo Printer 720 Power Adapter Replacement

This guide will demonstrate how to replace the power adapter on your Dell Photo Printer 720.

Written By: Megan Lawrence



INTRODUCTION

The power adapter connects from the printer to the wall outlet, allowing electricity to power the device. This guide will show you how to replace the power adapter on your Dell Photo Printer 720.

Step 1 — Power Adapter



- Locate power adapter on the back of the printer.
- Grab ahold of the power adapter using the thumb grip.
- Pull outwards until the power adapter is disconnected from the printer.

To reassemble your device, follow these instructions in reverse order.