




Dell Precision 7710 KeyBoard Replacement


Written By: Johnathan Hammond

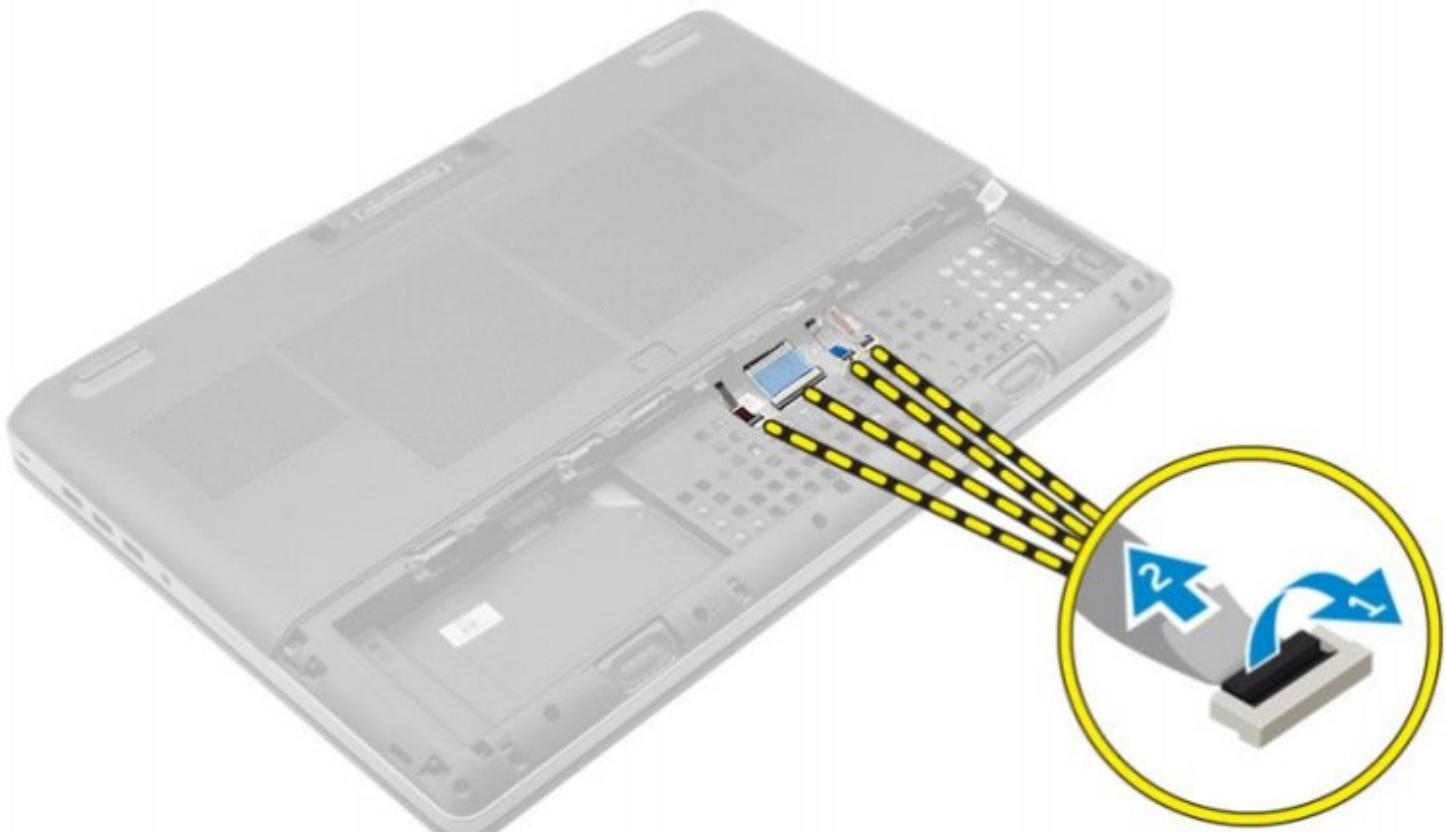

 **TOOLS:**


- **Spudger** (1)
- **Phillips #0 Screwdriver** (1)

Step 1 — Battery Cover

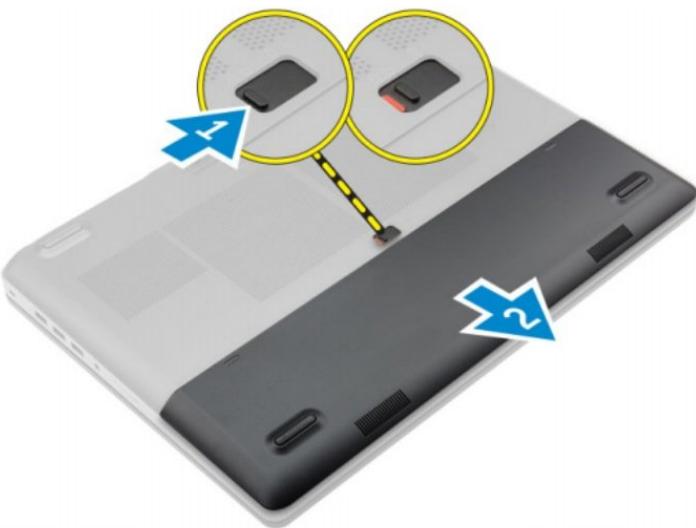


- Slide the release latch to unlock the battery cover [1].
- Slide and lift the battery cover to remove it from the computer [2].

Step 2 — Battery

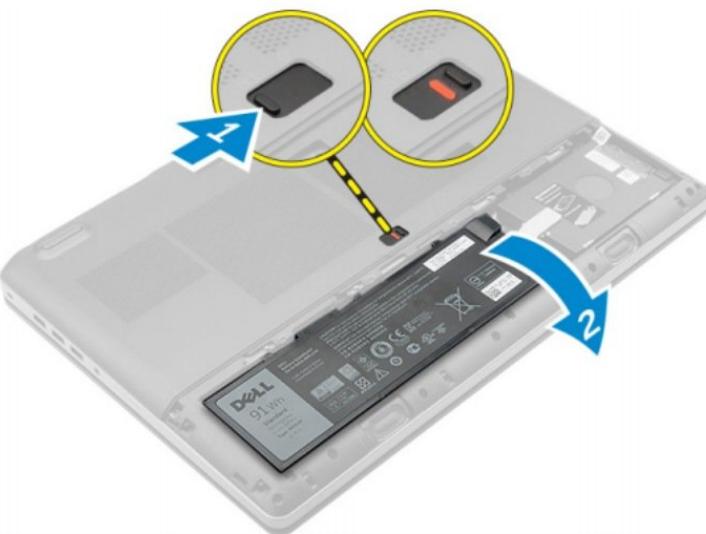


- Slide the release latch to unlock the battery [1].
- Lift and remove the battery from the computer [2].

Step 3 — KeyBoard

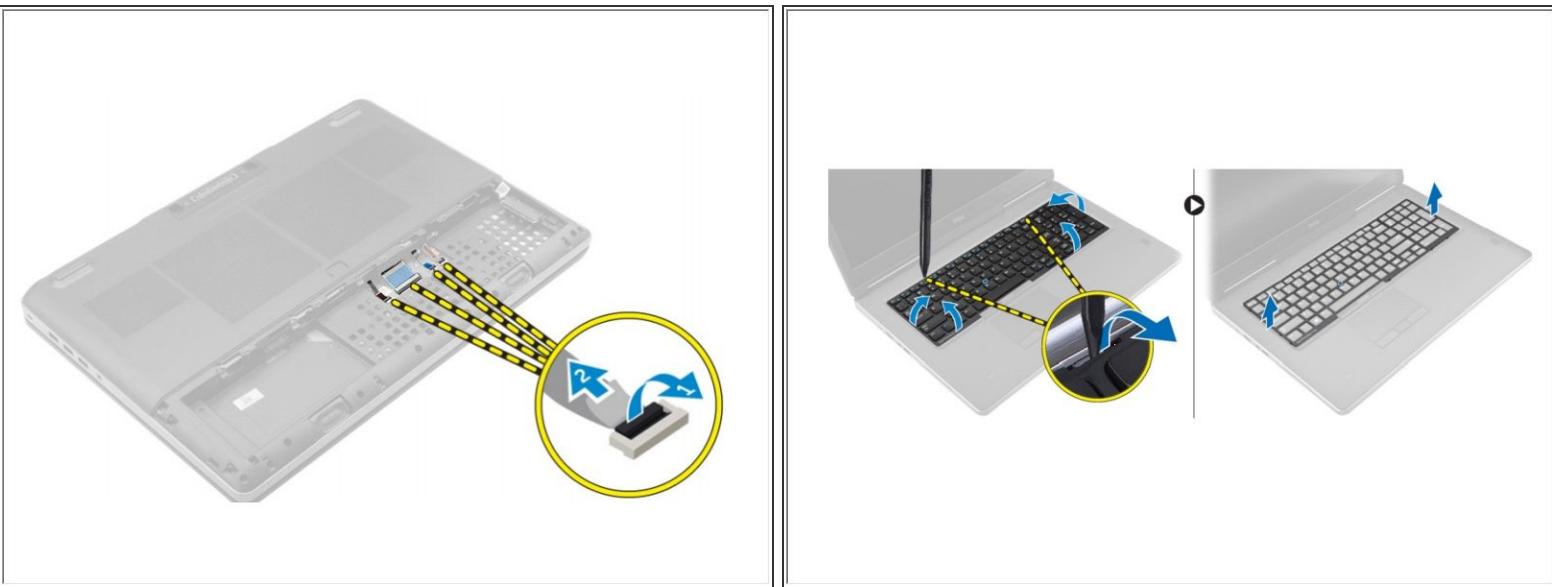

- Lift the tab and disconnect the 4 cables, one of the cables may be obstructed by the HDD, so you will need to unscrew/detach the HDD tray first [1, 2].
- Pry the keyboard trim starting from the bottom and work along the top edge and remove it from the computer.

Step 4

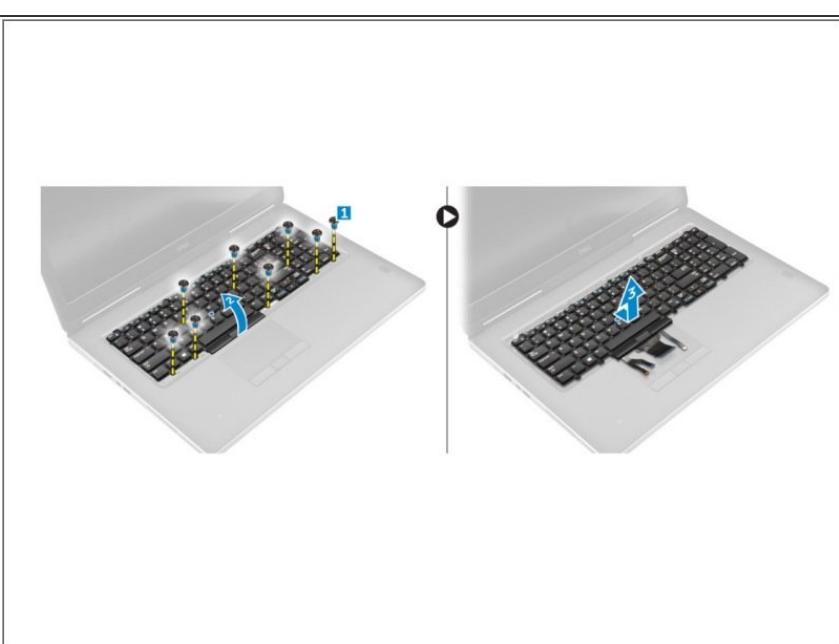

- Remove the screws that secure the keyboard to the computer [1].
- Lift the front side and slide the keyboard to remove it away from the computer [2, 3].

To reassemble your device, follow these instructions in reverse order.