



# Dell Venue 11 Pro Battery Replacement

This guide will show you how to remove and replace the battery.

Written By: Tom Nguyen



## INTRODUCTION

This guide will explain the intricate process in removing the battery. It is also the first prerequisite guide to all available Dell Venue 11 pro replacement guides.

### TOOLS:

- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery



- Turn your device over to the backside. On the notch at the bottom portion of the tablet, use your fingers to lift up the back cover.

## Step 2



- Below the battery pack, there are two lock mechanisms. Push EACH lock to the LEFT until it makes a click noise. Lift the battery from the bottom up and remove.

To reassemble your device, follow these instructions in reverse order.