




Dell Venue 7 Speaker Replacement

This guide will show you how to replace the Dell Venue 7 internal speaker.

Written By: Stephen Rousseau

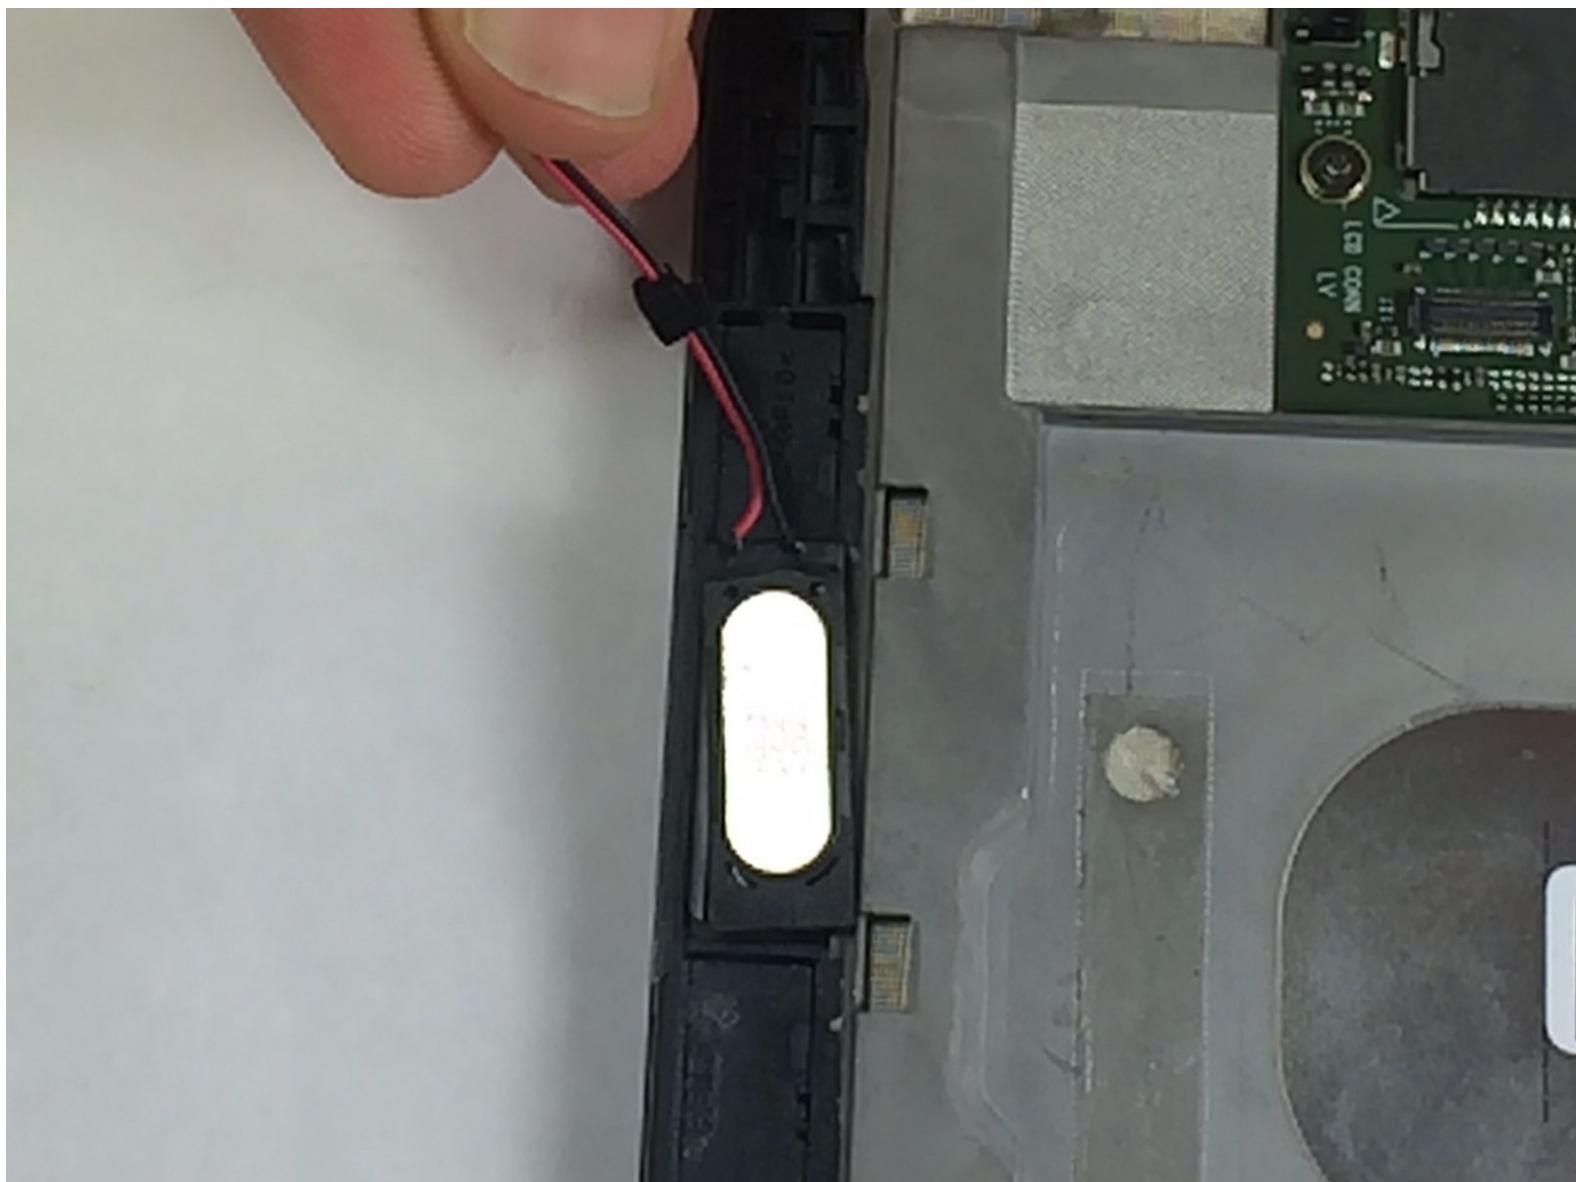


INTRODUCTION

If you want to replace the speaker you must first get a new one. Once you do, then you are ready to follow these easy steps.

TOOLS:

- Spudger (1)


Step 1 — Rear Case

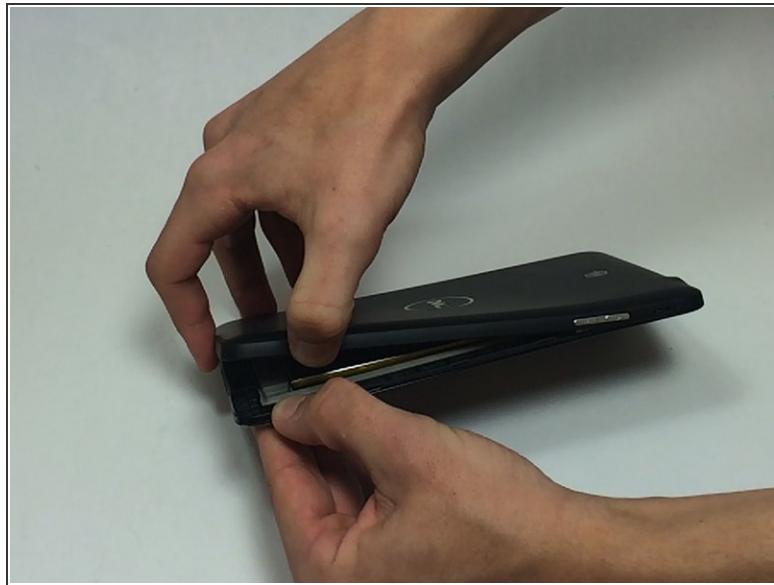

- Use a spudger or your fingers to pry off the back case.

⚠ If your case is badly damaged, use caution because the fragments may be sharp.

Step 2 — Battery

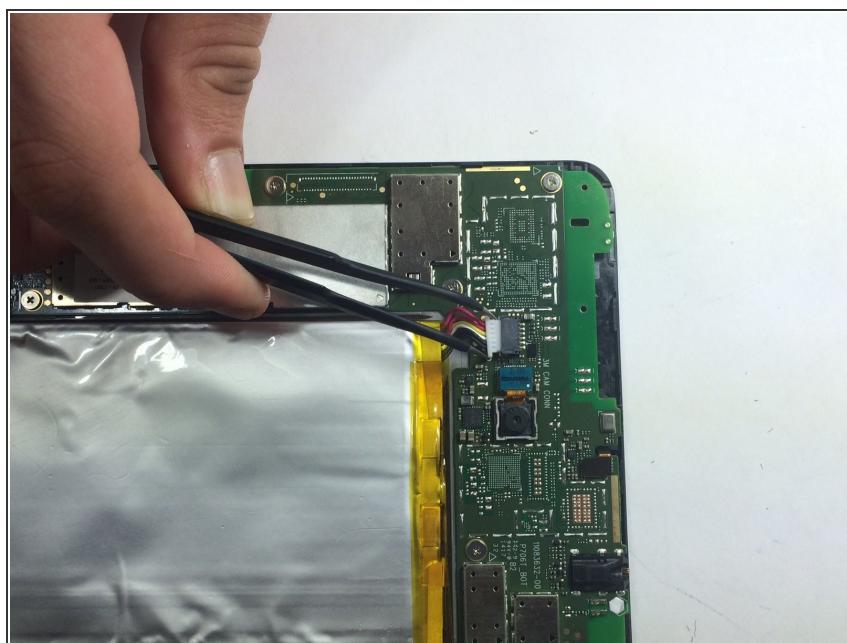

- Gently disconnect the battery from the motherboard using your fingers or a pair of tweezers.

Step 3



- Remove the battery by pulling it from the edges and carefully peeling it off of the base.

i There is adhesive keeping the battery in place, so don't be afraid to use a little extra force.



! Do not bend or warp the battery in any way as it can be a fire hazard.

Step 4 — Speaker




- Use a spudger to remove the ribbon cable that is around the speaker wire.

Step 5

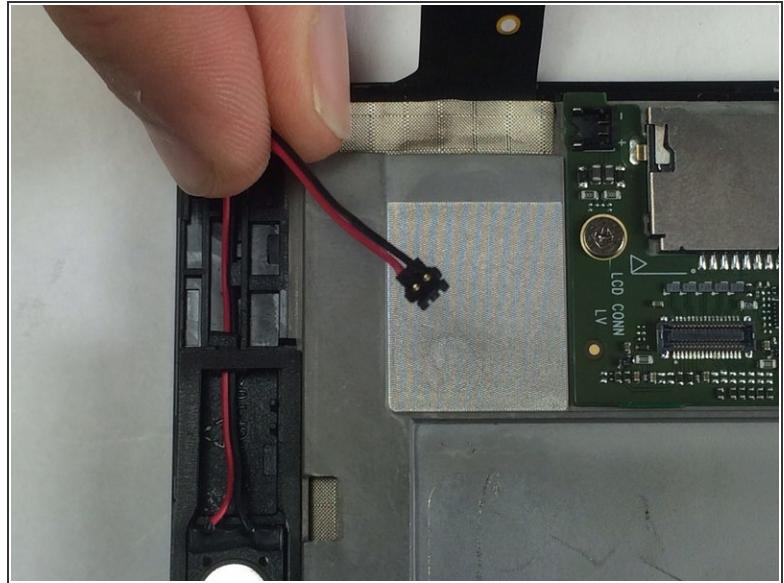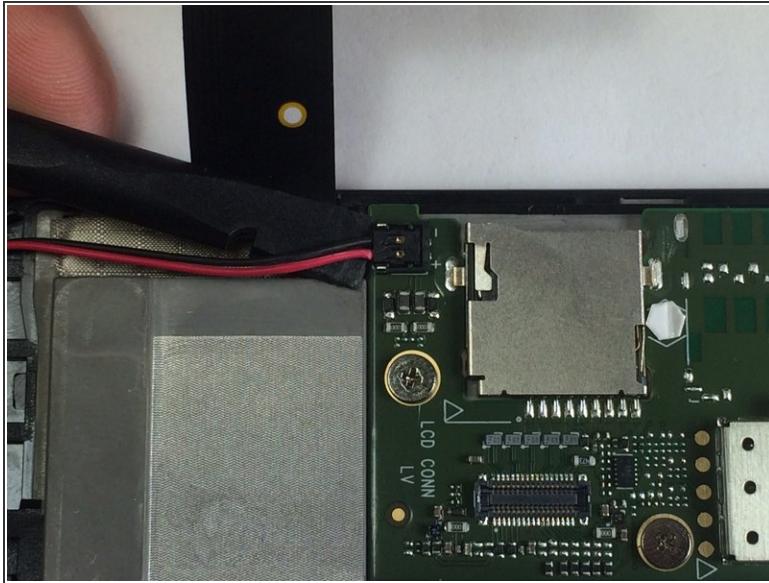


- Disconnect the speaker wire from the motherboard by prying the connector upwards with the spudger.

Step 6

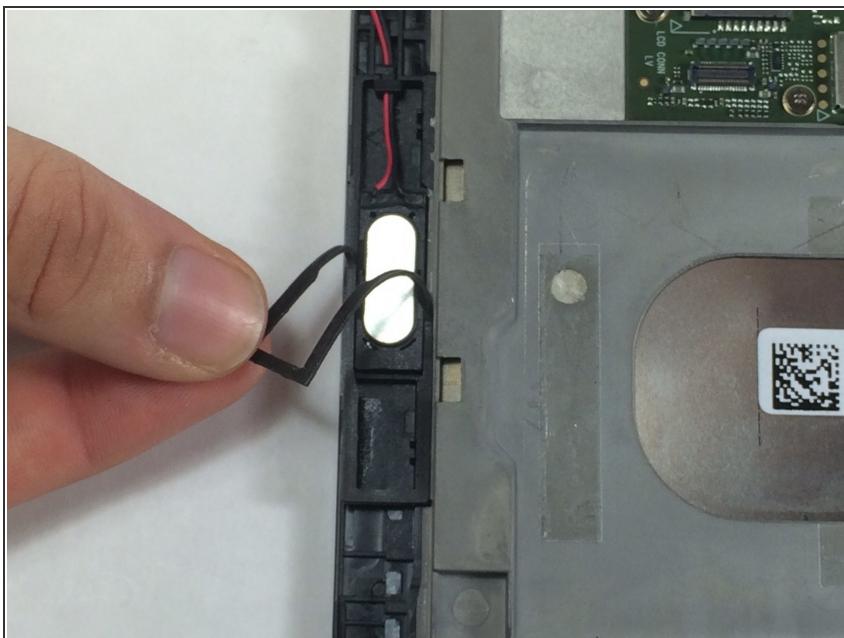

- Remove the plastic covering on the speaker.

Step 7

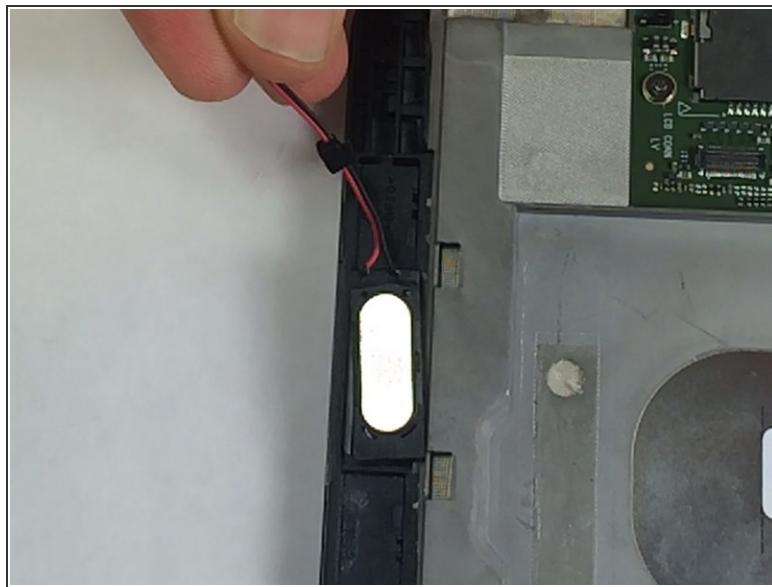

- Gently pull on the wire and remove the speaker.

To reassemble your device, follow these instructions in reverse order.