



Dell Venue 8 7840 Screen Replacement

Replacing the screen on your Dell Venue 8 7840.

Written By: Donnelle January



INTRODUCTION

Is your screen cracked or damaged? Replacing your screen might help solve these issues.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Screen



- ⚠ Make sure your device is turned off. Leaving it turned on may cause an electric shock.
- Face the device with the screen towards you.

Step 2



- With a plastic opening tool, pry open the bottom left corner of the screen.
- The screen is tightly attached to the tablet, so you may have to use a metal spudger to pry it open if the plastic spudger does not do the task.

Step 3



- Next, pry open the top left corner of the screen.

Step 4




- Then, pry open the top right corner of the screen.

Step 5



- Lastly, pry open the bottom right corner of the screen.


Step 6

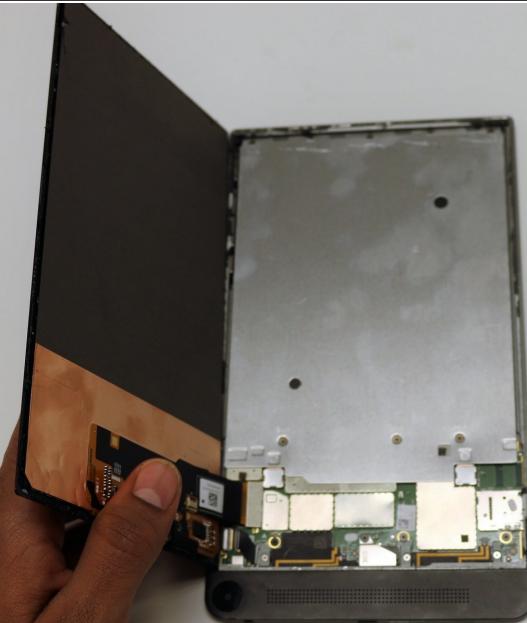

- Once you have pried open all the corners of the tablet, carefully open the screen from the right side of the tablet.


 Do not try and open the screen from the left side of the tablet, because the screen is attached on the left side of the tablet; doing this can damage the tablet.

Step 7

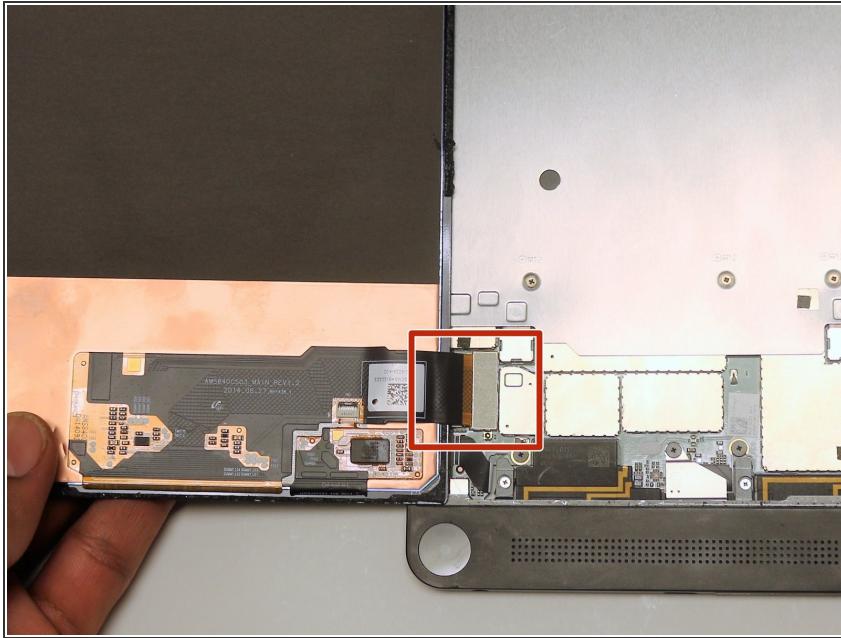

- Once the tablet is opened, locate the connector.

Step 8

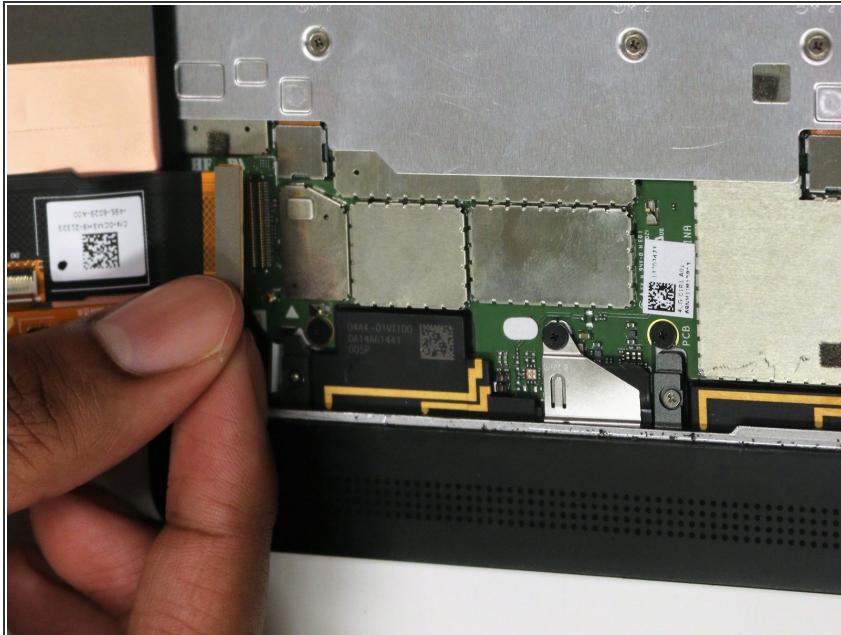

- Disconnect the connector from the tablet.

To reassemble your device, follow these instructions in reverse order.