




# Dell Vostro 1320 USB Port Replacement

Replace the USB Port if it is no longer reading USB drives.

Written By: Christie Lloyd

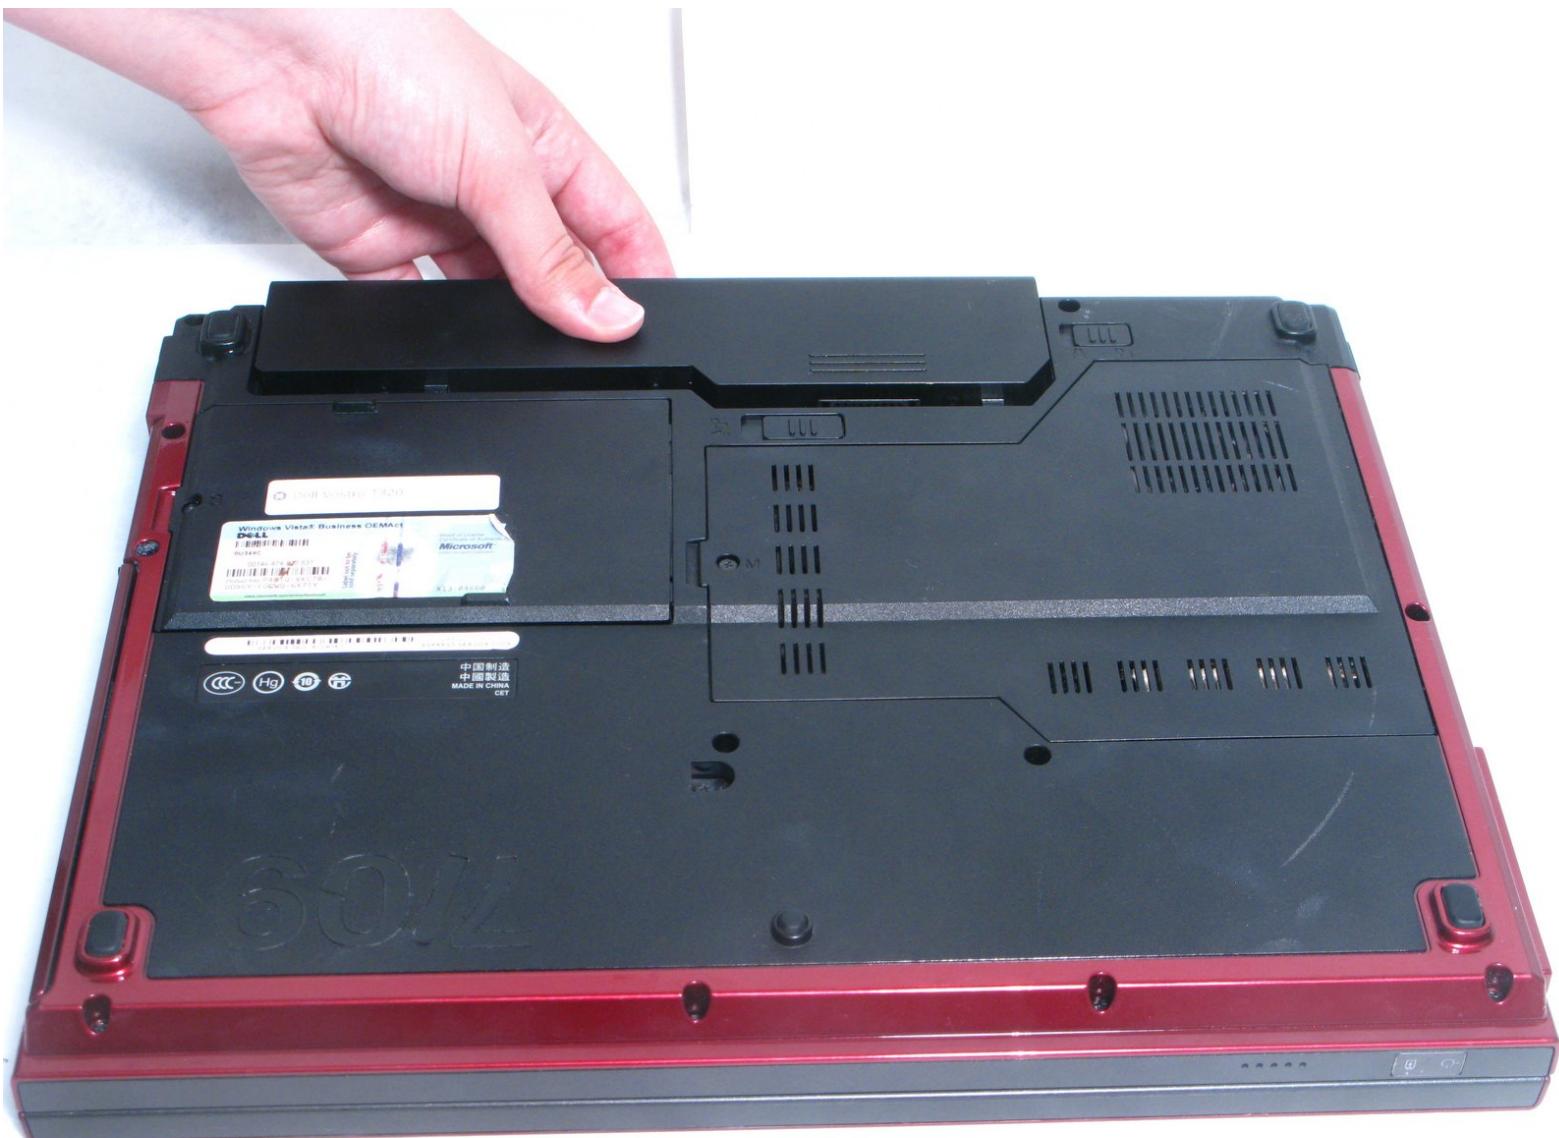

 **TOOLS:**

- [64 Bit Driver Kit \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — USB Port



- Remove the battery from the computer.

## Step 2



- Remove all visible screws from the bottom of the computer.

## Step 3



- Use a metal spudger to remover the covers of each section that you removed screws from.
- Once the cover is removed from the hard drive remove the hard drive by gently tugging it out.

## Step 4




- Use the replacement guide for the fan to remove the fan.
- [Dell Vostro 1320 Fan Replacement](#)

## Step 5




- You must first unscrew the screws holding the wire in place.
- Unhook the wire that the metal spudger is pointing at.

## Step 6

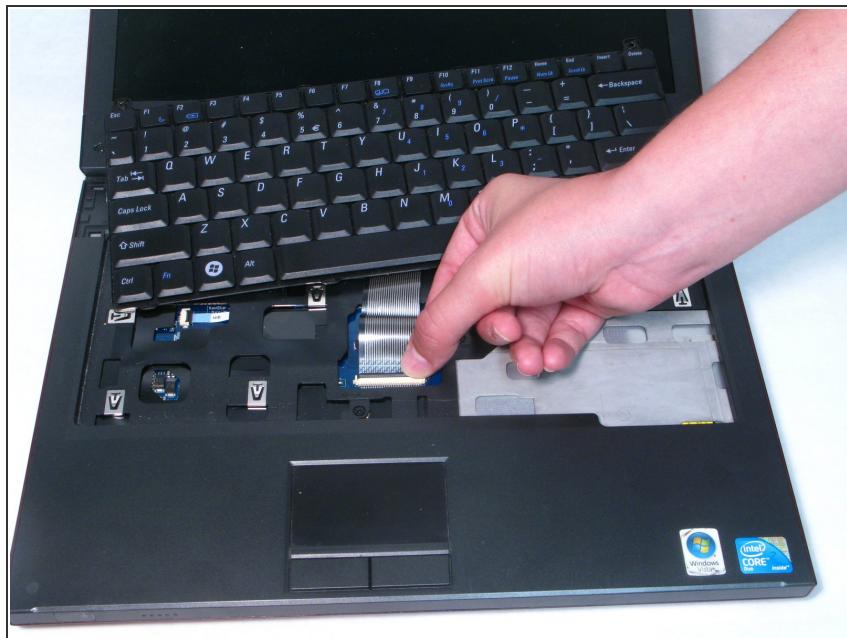

- Use the guide to remove the keyboard.
- [Dell Vostro 1320 Keyboard Replacement](#)

## Step 7

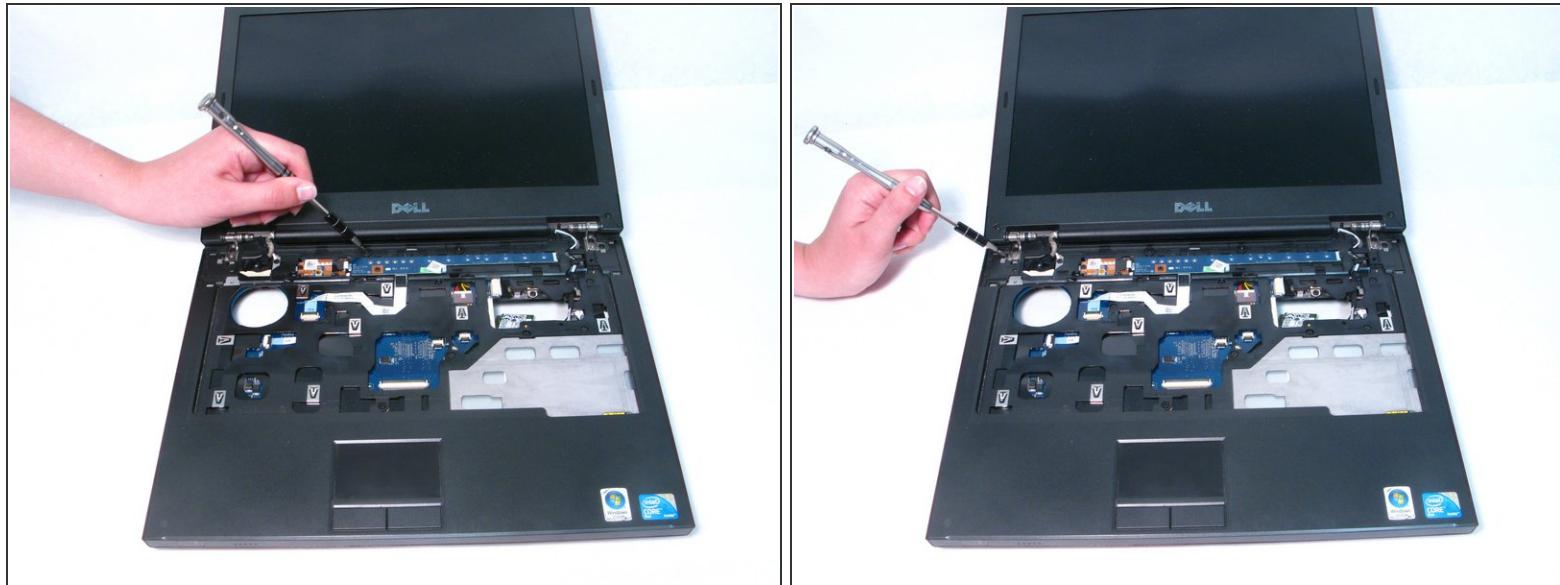



- Undo the screws holding the screen to the computer base.

## Step 8



- Unplug the wires connecting the screen to the base.
- The screen should come free and is able to be removed completely.

## Step 9

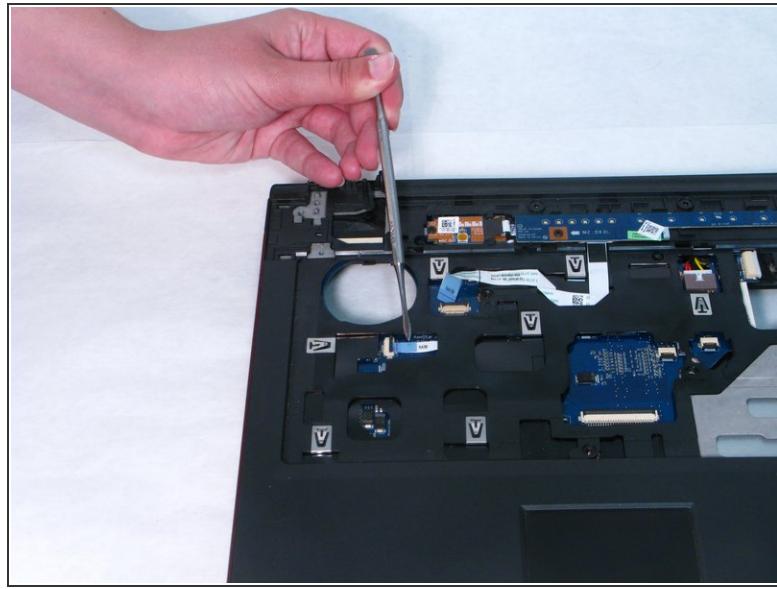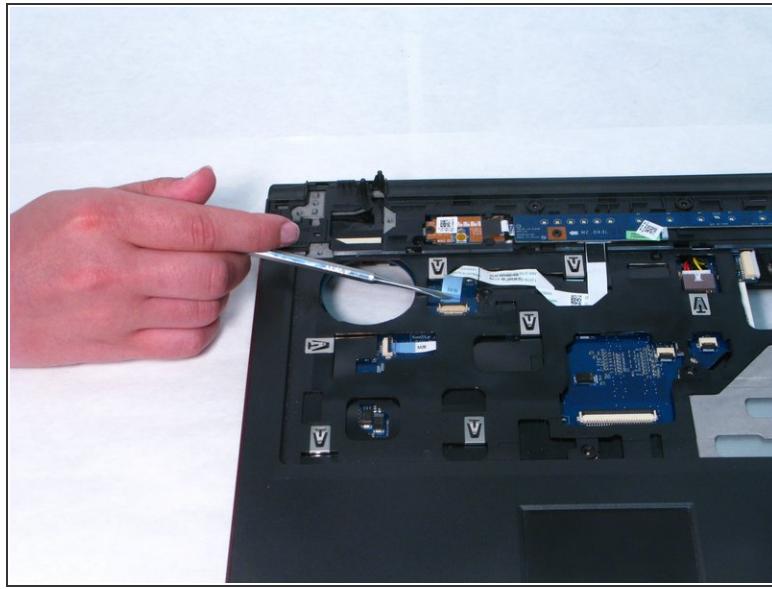

- Unplug the two blue labeled wires.

## Step 10



- Detach the black plastic cover by loosening it with a metal spudger.

## Step 11




- Unplug the wire that the metal spudger is pointing to.

## Step 12



- Unscrew the USB port.

## Step 13

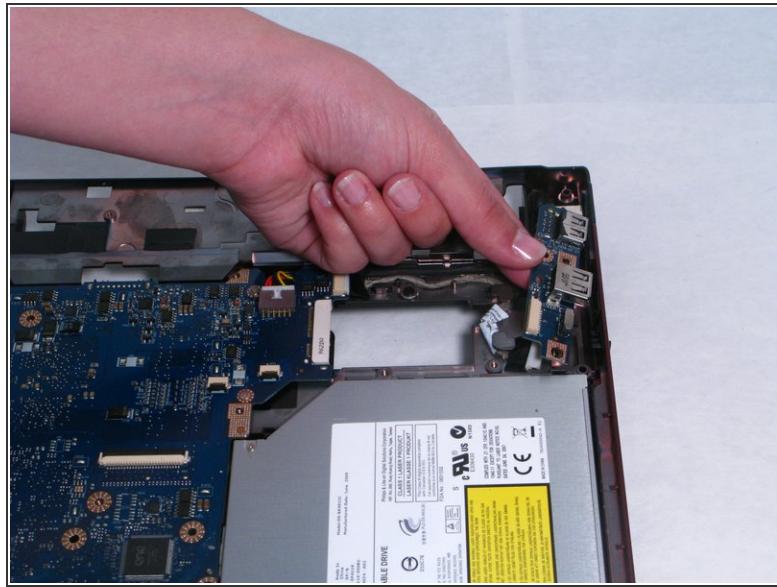

- Gently lift out the USB port.

To reassemble your device, follow these instructions in reverse order.