



# Dell Vostro 14 3468 KeyBoard Replacement


Written By: Johnathan Hammond



 **TOOLS:**


- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

## Step 1 — Battery

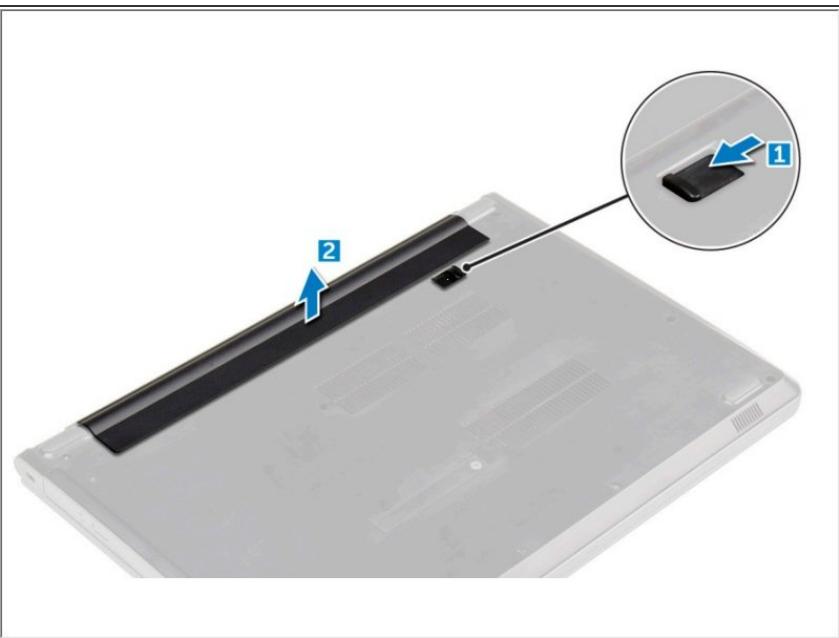


- Slide the release latch to unlock the battery [1].
- Remove the battery from the computer [2].

## Step 2 — Optical-Disk Drive

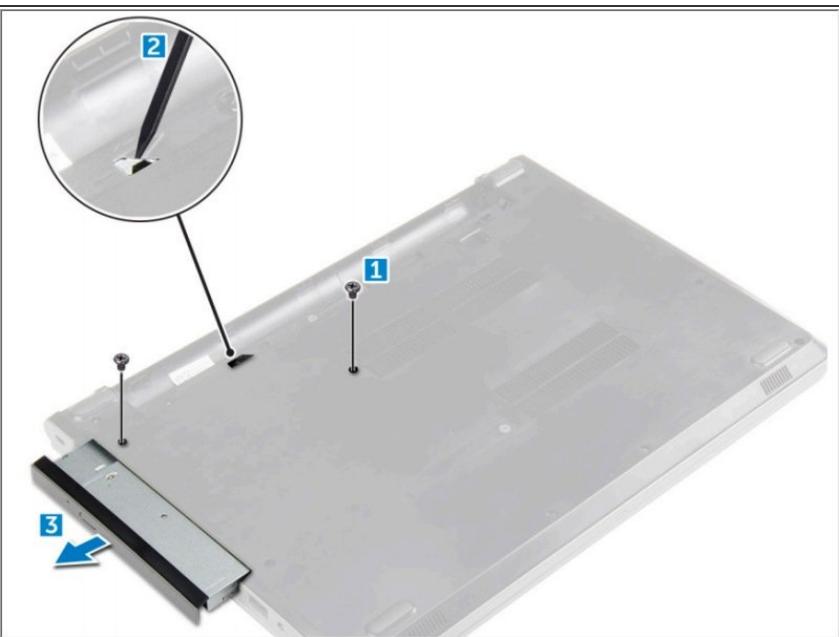

- Remove the screw that secures the optical drive to the computer [1].
- Using a plastic scribe, push the tab to release the optical drive [2].
- Slide the optical drive out of the computer [3].

## Step 3 — KeyBoard

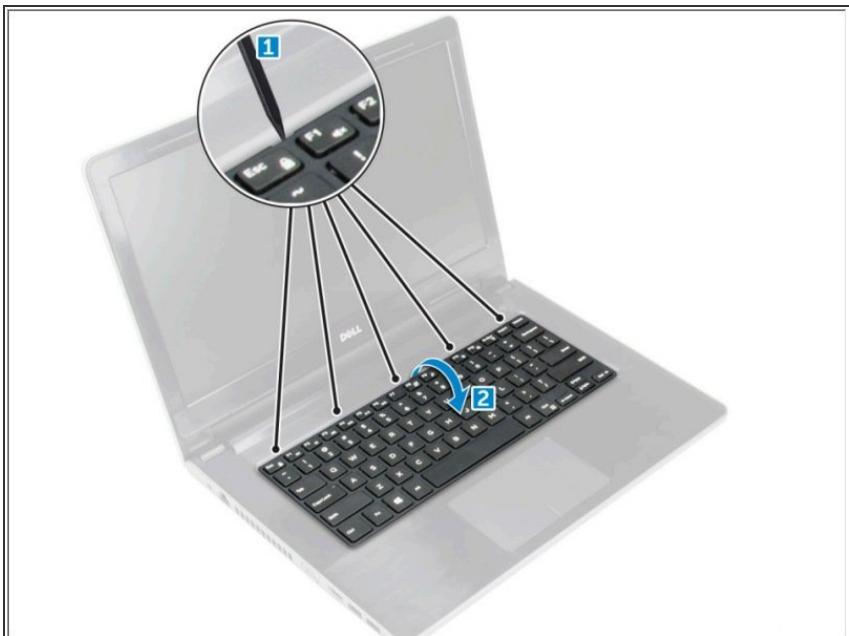

- Release the keyboard by prying on the keyboard release tabs using a plastic scribe [1].
- Slide and lift the keyboard to access the keyboard connector cable under the keyboard [2].

## Step 4



- Disconnect the keyboard cable from the system board.
- Lift the keyboard cable to remove it from the computer.

To reassemble your device, follow these instructions in reverse order.