




# Dell Vostro 14 3468 Optical-Disk Drive Replacement

Written By: Johnathan Hammond

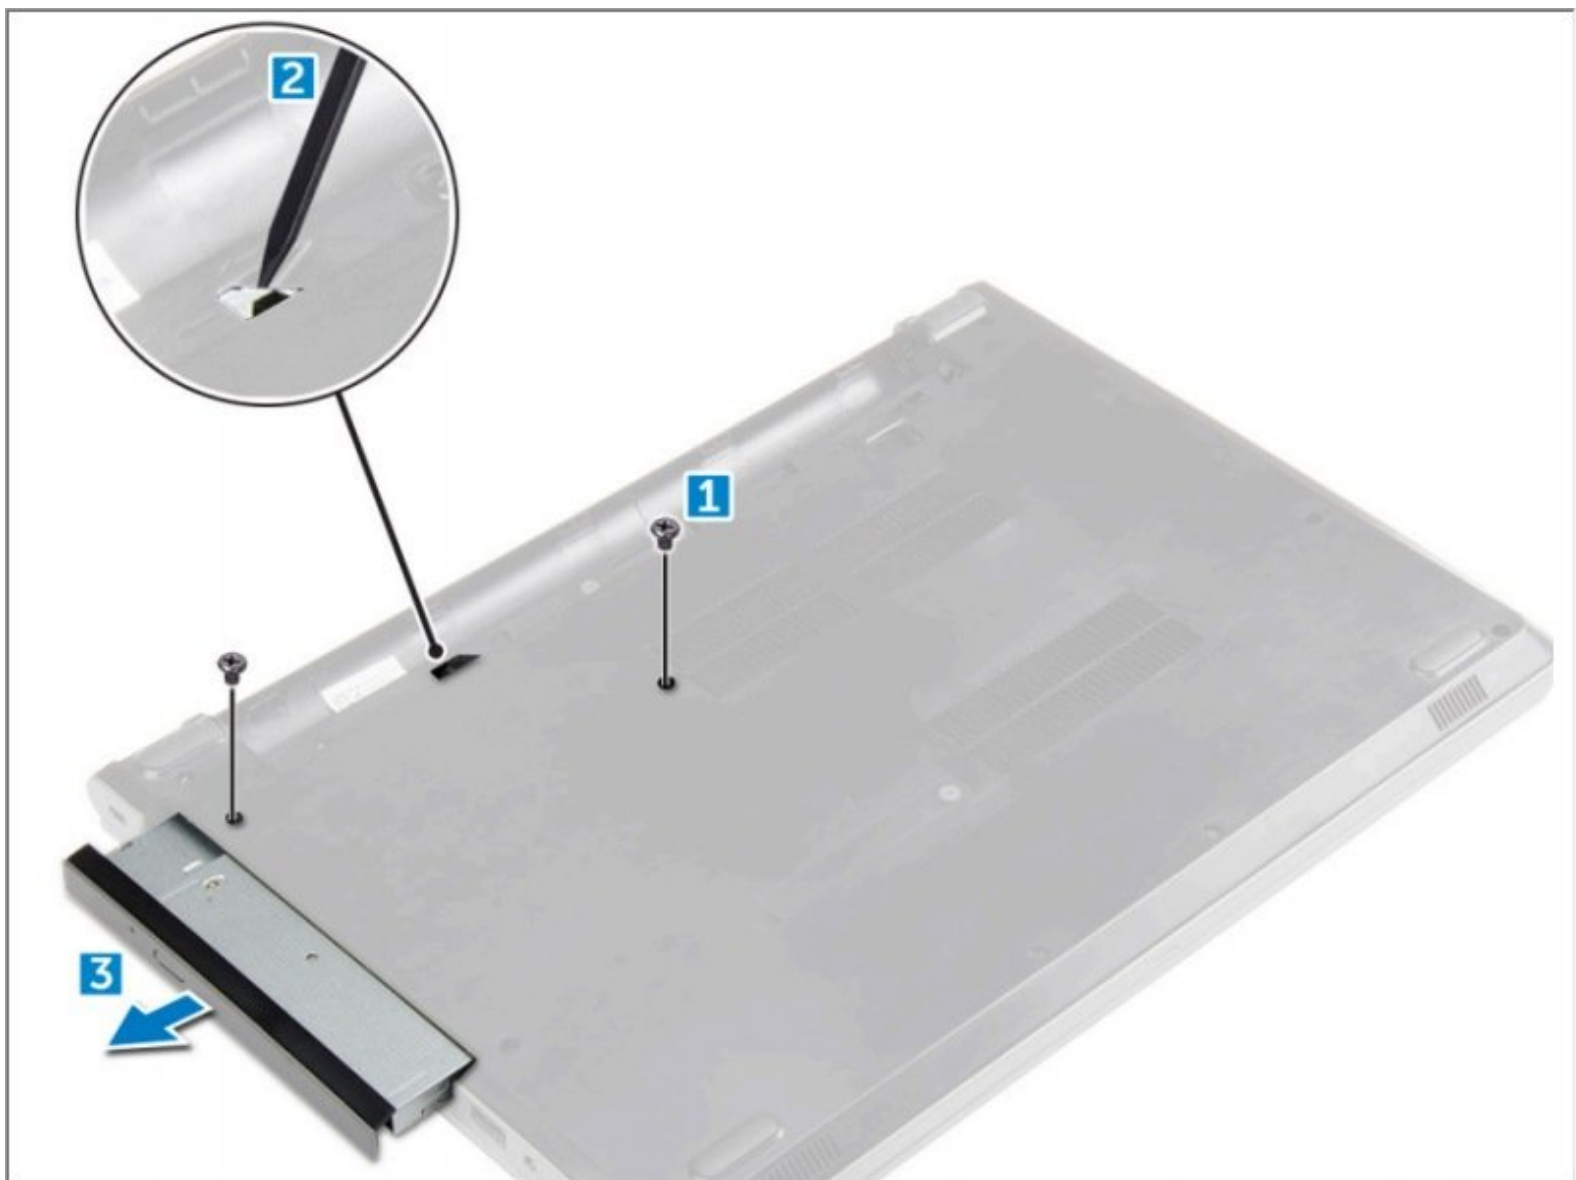




## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery

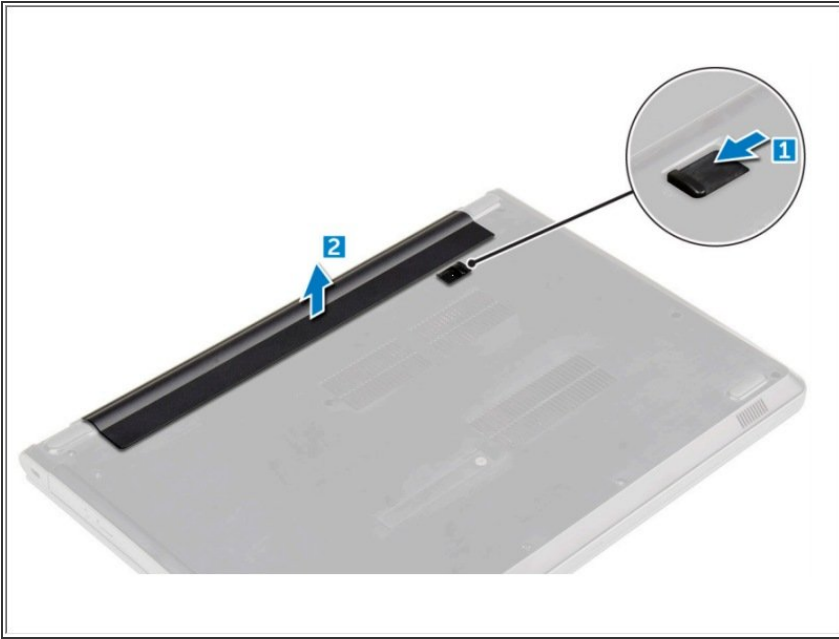

- Slide the release latch to unlock the battery [1].
- Remove the battery from the computer [2].

## Step 2 — Optical-Disk Drive

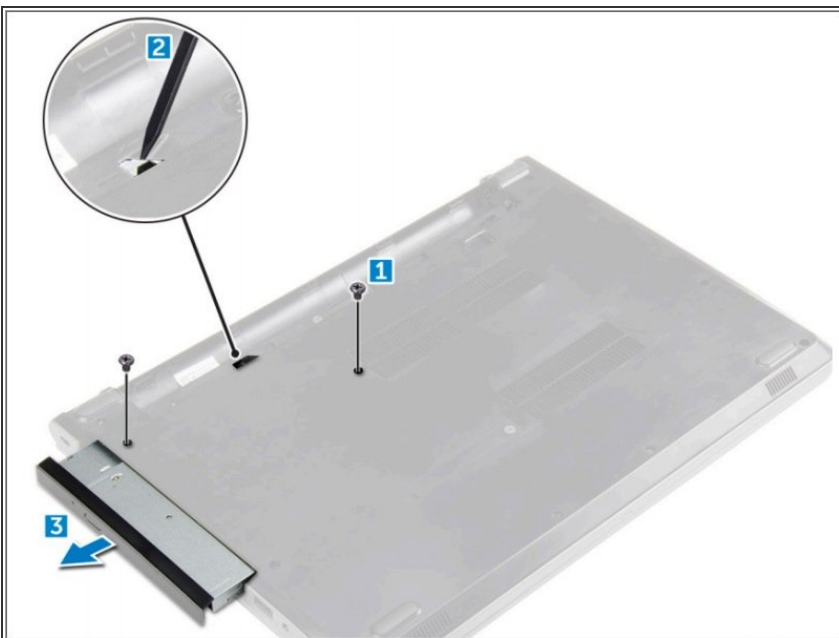

- Remove the screw that secures the optical drive to the computer [1].
- Using a plastic scribe, push the tab to release the optical drive [2].
- Slide the optical drive out of the computer [3].

To reassemble your device, follow these instructions in reverse order.