




# Dell Vostro 2520 Palm Rest Replacement

Written By: Johnathan Hammond

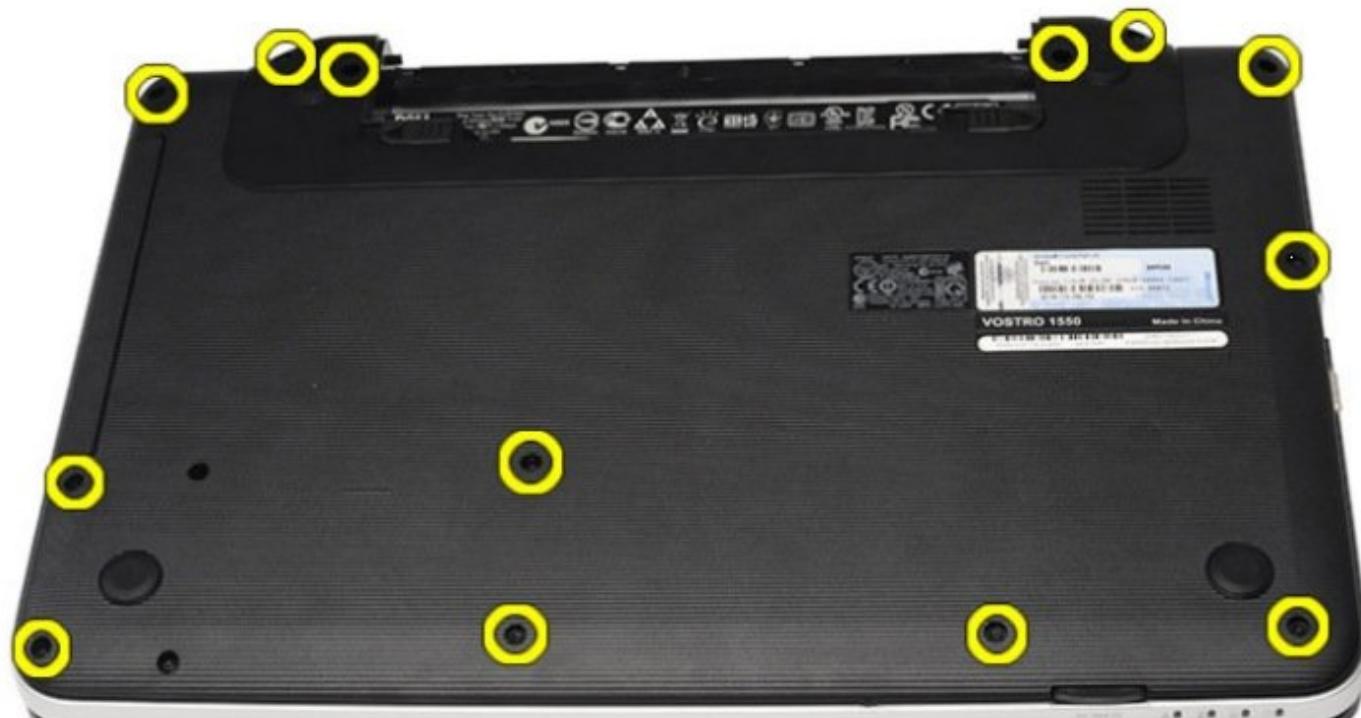

## INTRODUCTION

In this guide, we will show you how to remove and replace the Palm Rest.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Unlocking the Battery



- Slide the release latches to unlock the battery.

## Step 2 — Removing the Battery




- Slide the battery and remove it from the computer.

## Step 3 — Prying the Tabs



- Pry up to release the tabs securing the keyboard to the computer.

## Step 4 — Flip the Keyboard

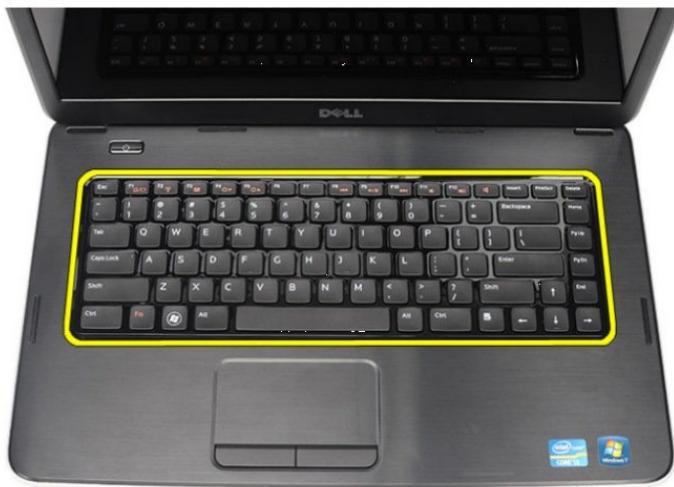

- Flip the keyboard and lay it on the palm-rest.

## Step 5 — Disconnect the Cable



- Disconnect the keyboard cable from the system board.

## Step 6 — Remove the Keyboard



- Remove the keyboard from the computer.

## Step 7 — Remove the Screws



- Remove the screws that secure the bottom base.

## Step 8 — Disconnecting the Cable



- Flip the computer and disconnect the power board cable and the touchpad cable.

## Step 9 — Remove the Screws



- Remove the screws that secure the palm-rest to the computer.

## Step 10 — Removing the Palm-Rest



- Starting from the left, pry up the palm-rest and remove it from the computer.