



Dell Vostro 3550 Fan Replacement

This guide will demonstrate how to replace the fan attached to the motherboard.

Written By: Dylan J. Souza



INTRODUCTION

This guide will walk through all the necessary steps in order to replace the fan for the Dell Vostro 3550. A common problem that would require the device owner to replace their fan is if a fan blade breaks due to a piece of debris that entered the fan mechanism. This can often be determined if the fan is making loud and unusual noises as the computer is running.

TOOLS:


- [Metal Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [Pro Tech Toolkit \(1\)](#)

Step 1 — Unlocking the Battery




- Slide the release latches to unlock the battery.

Step 2 — Sliding the Battery

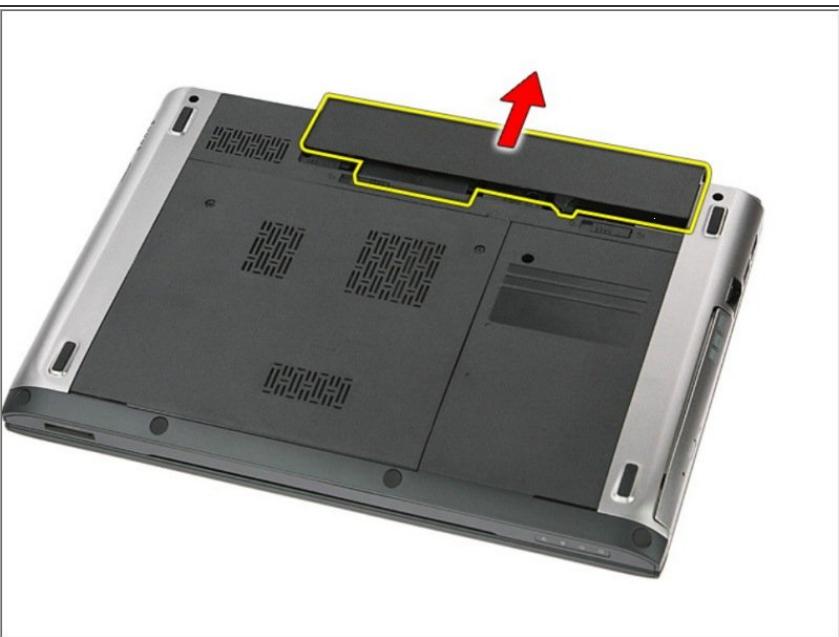


- Slide the battery and remove it from the computer.

Step 3 — Keyboard

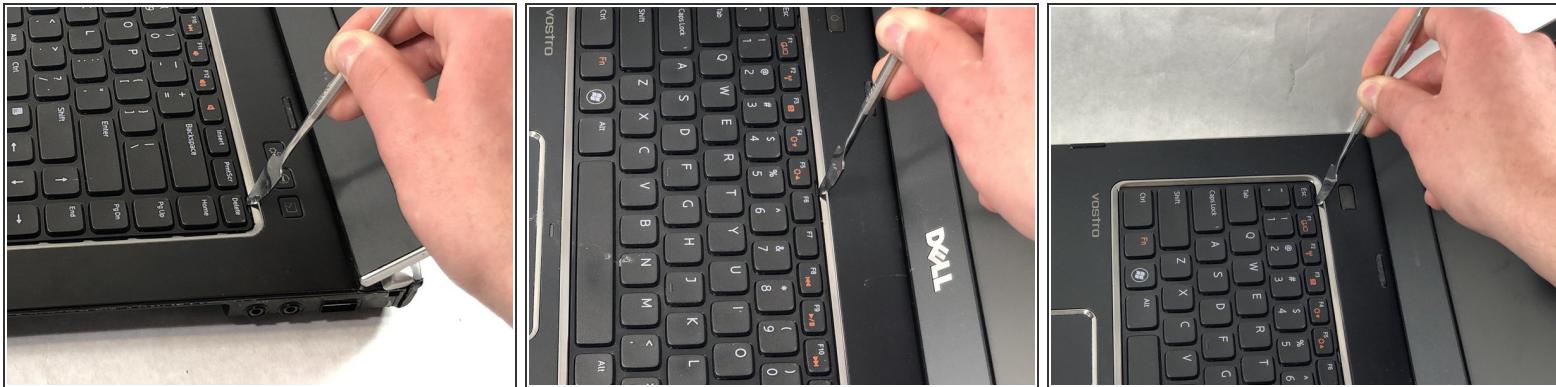


- Turn the laptop right side up. Open the display to reveal the keyboard.
- Use the metal spudger to pry the keyboard upward from the base. Make sure to pop each of the three clips keeping the keyboard in place.

Step 4

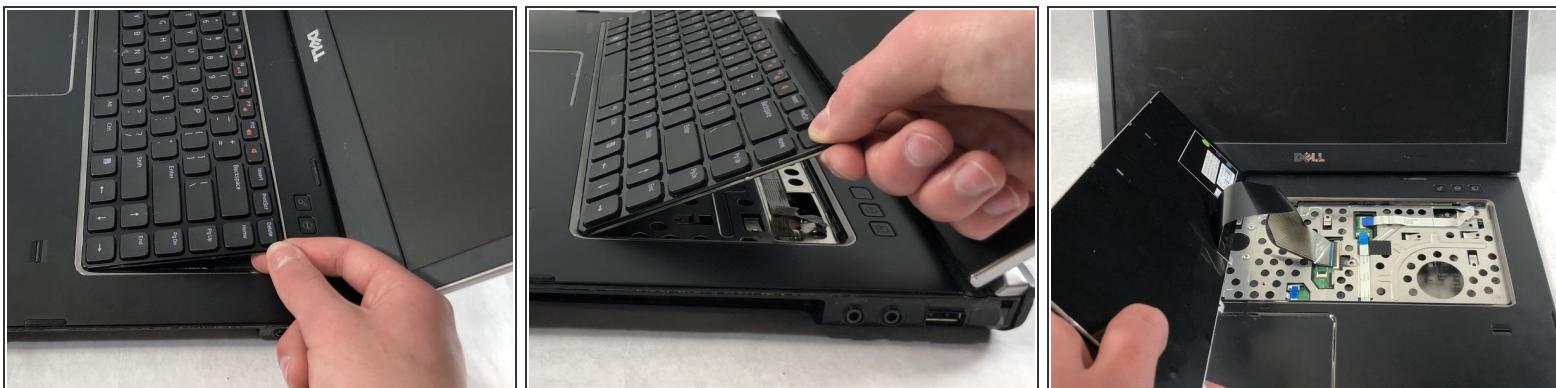

- Carefully lift the keyboard upward to reveal the keyboard ribbon cable.

Step 5

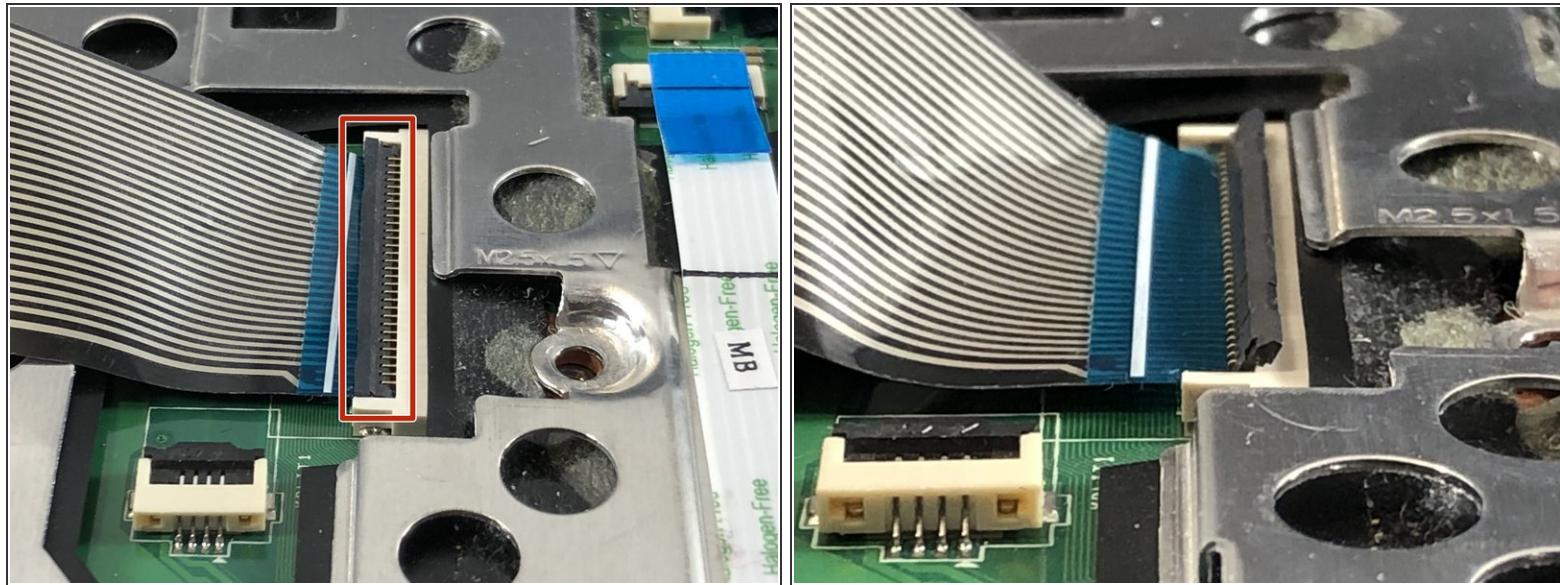

- Lift the black tab on the keyboard cable connector upwards to release the cable.

Step 6



- Pull the ribbon cable away from the connector.
- Remove the keyboard.

Step 7 — Remove the Screws



- Remove the three 7mm Phillips #0 screws that secure the access panel to the base of the computer.

Step 8 — Lifting the Access Panel




- Lift the access panel up at an angle and remove it from the computer.

Step 9 — Remove the Screws



- Remove the two 5mm Phillips #0 screws that secure the hard drive to the system.

Step 10 — Removing the Hard Drive

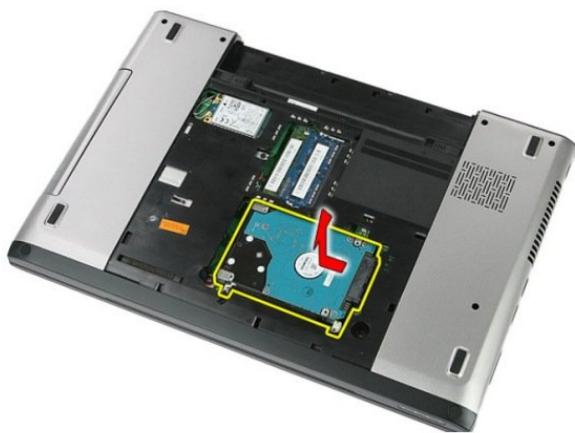



- Lift up the hard drive at an angle from the system and remove.

Step 11 — Remove the Screws



- Remove the four 5mm Phillips #0 screws that secure the hard drive bracket to the hard drive.

Step 12 — Motherboard

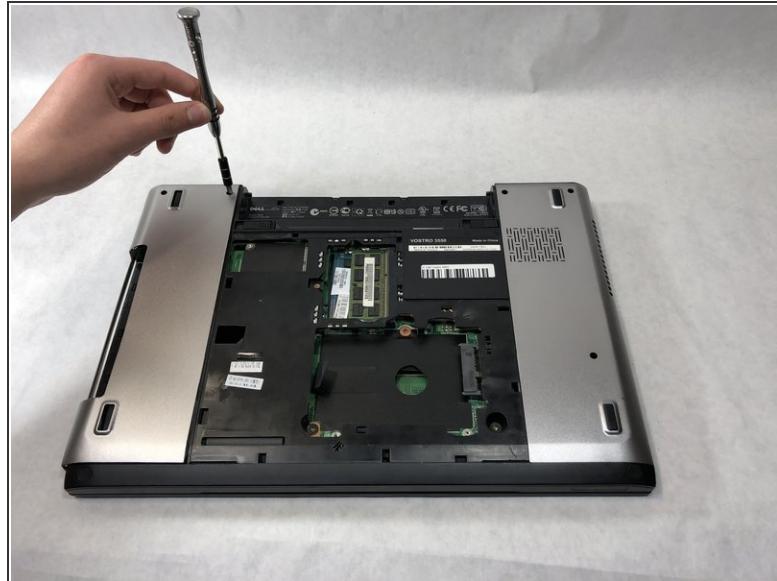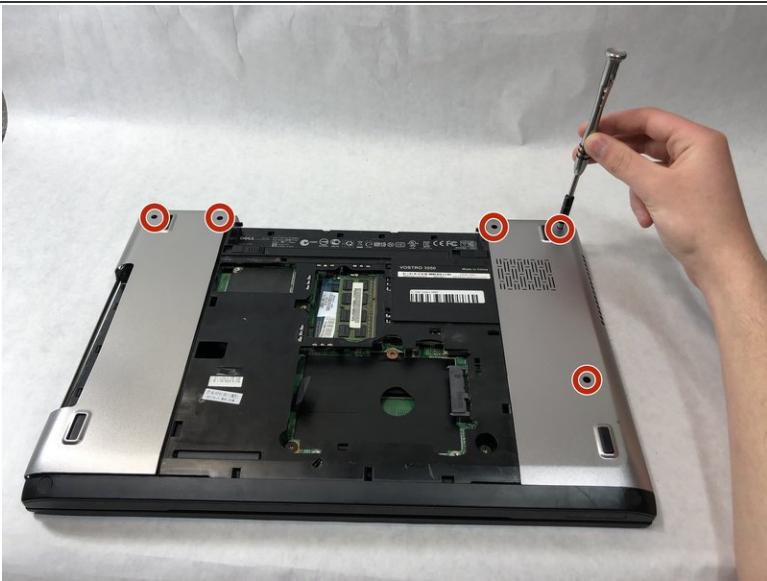

- Remove the five 7mm Phillips #0 screws fastening the aluminum side panels to the laptop.

Step 13



- Turn the computer over and open the screen.
- Remove the two 5mm Phillips #0 screws to the far right and far left of the motherboard casing.

Step 14



- Remove the small ribbon cable connected to the left side of the casing.
- Repeat this step for the three remaining ribbon cables on the casing.

Step 15




- Use the metal spudger to release the palmrest assembly from the rest of the laptop.
- Lift off the palmrest assembly to reveal the motherboard.

Step 16



- Remove the small cable connecting the motherboard to the rest of the computer.

Step 17

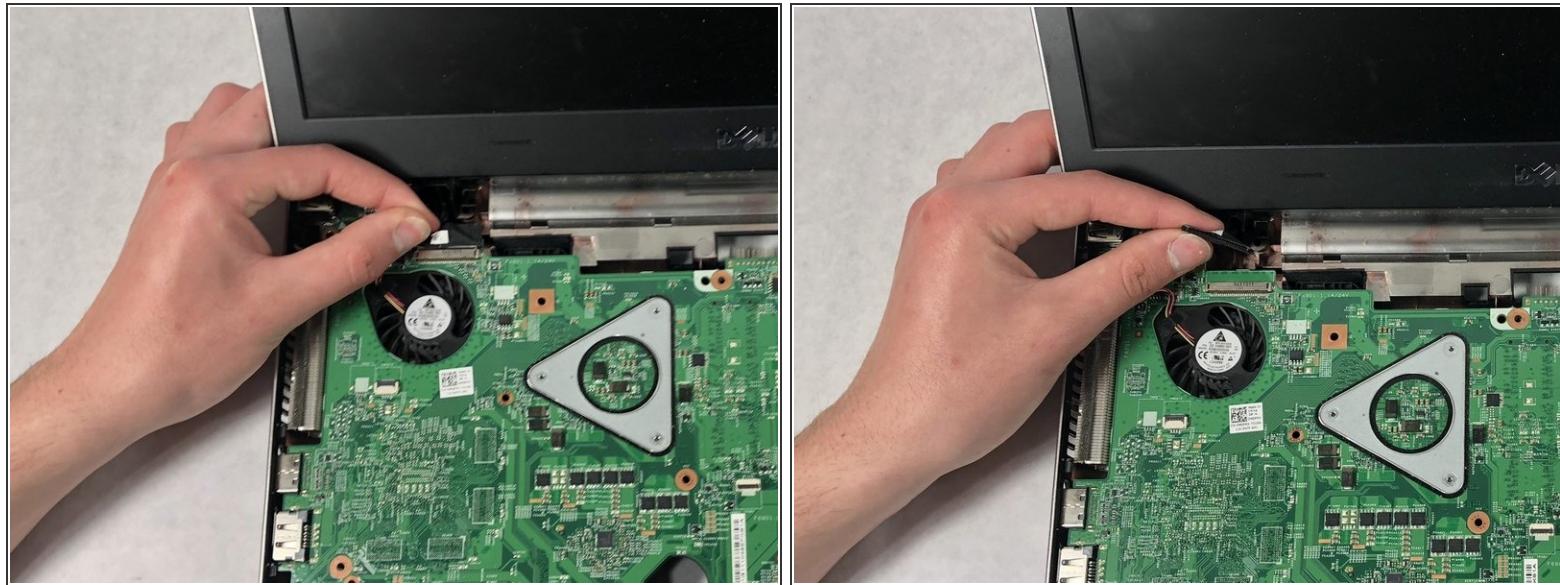


- Remove the ribbon cable at the far left that is connecting the motherboard to the screen.

Step 18





- Remove the seven 5mm Phillips #0 screws that are fastening the motherboard to the casing.
- Lift upwards on the motherboard to remove it from the laptop casing.

Step 19 — Fan

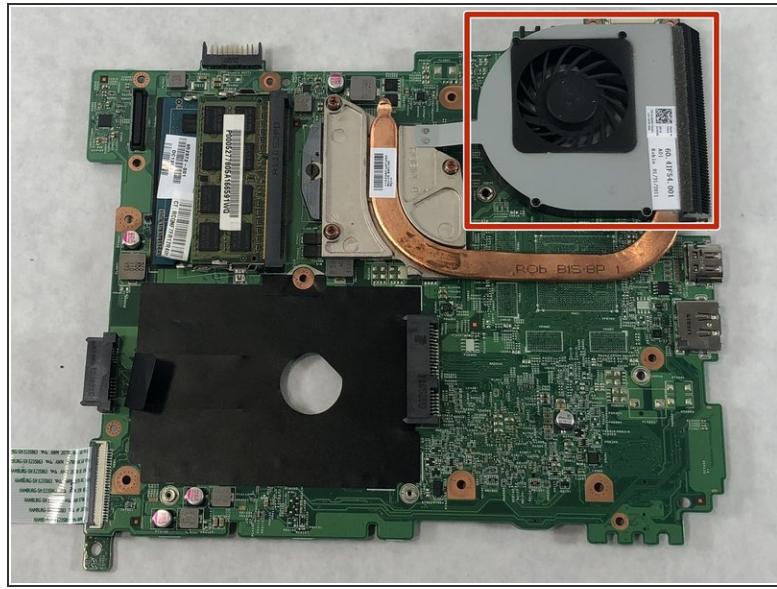

- Flip over the motherboard to access the fan assembly.

Step 20

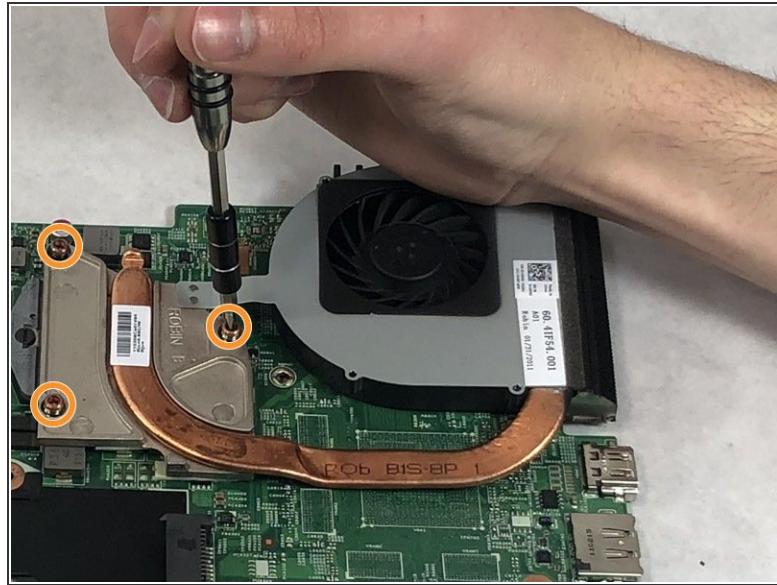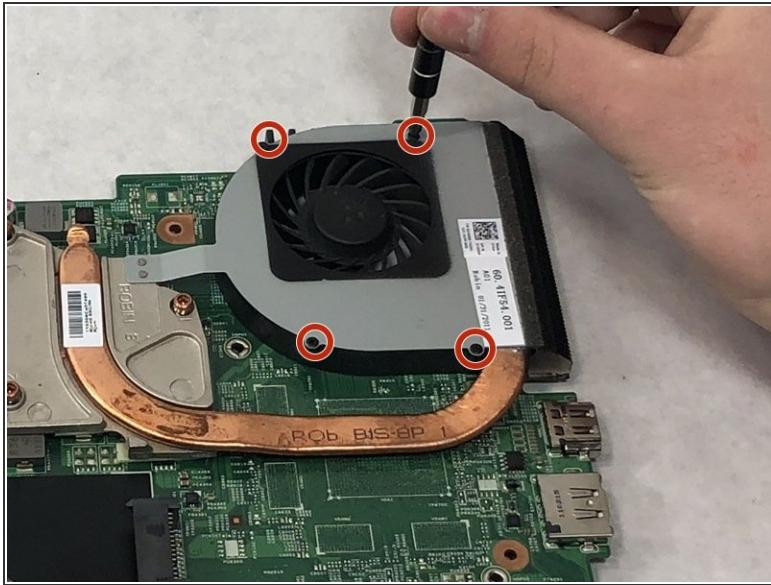


- Remove the four 5mm Phillips #0 screws that are holding the fan down onto the motherboard.
- Remove the three brass 8mm Phillips #0 screws fastening the heatsink to the motherboard.

Step 21




- Gently lift the fan assembly and heatsink away from the motherboard, and put it down onto a flat surface.

Step 22

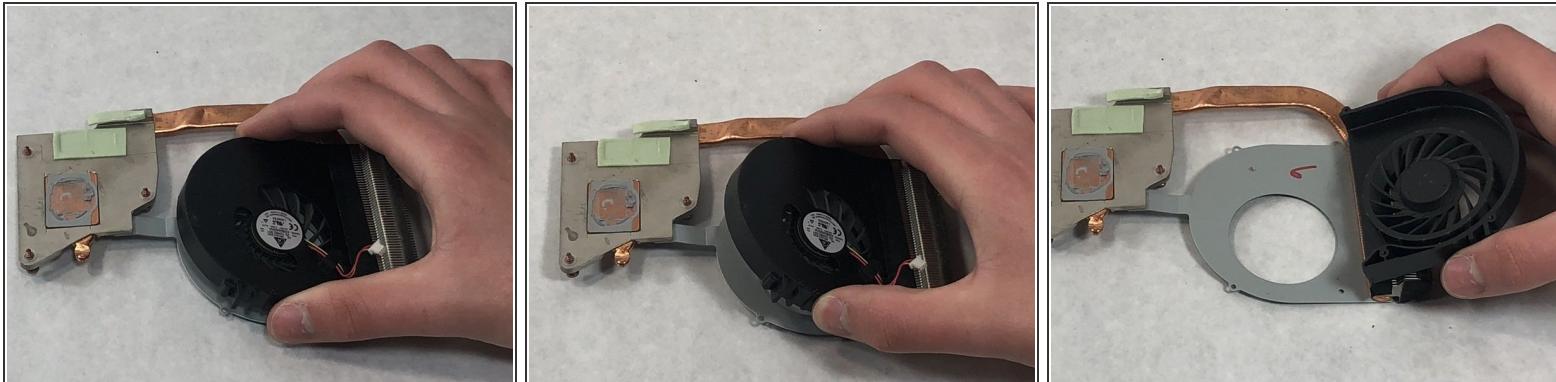

- Once placed down, flip the fan casing upside down to expose the bottom shell of the fan.
- Grab the shell of the fan and pull upwards.
- Rest the shell of the fan on its hinge to reveal the blades of the fan.

Step 23

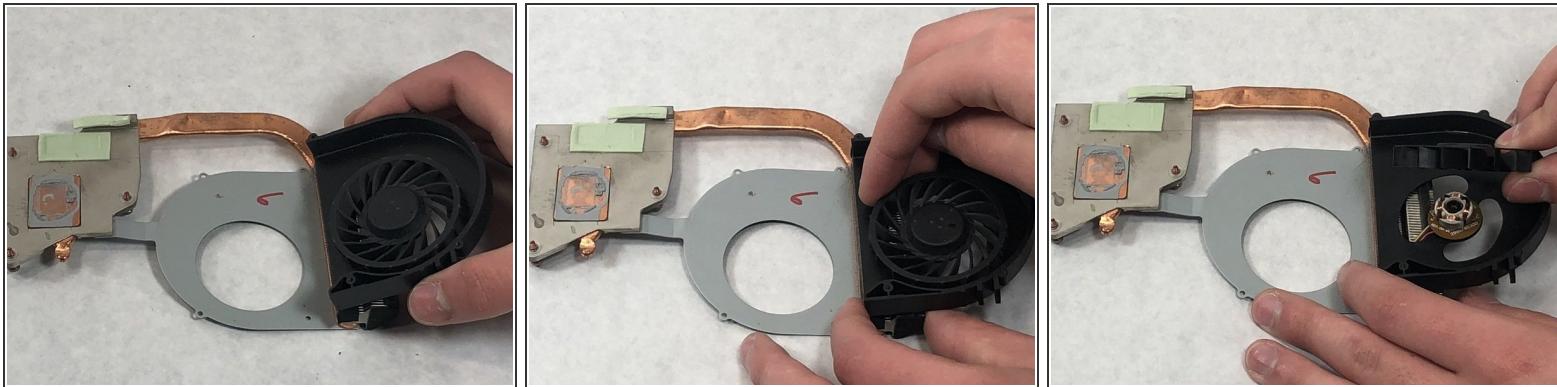

- Gently pull upwards on the fan to separate the fan from the motor.

Step 24



- Once the fan is removed, gently push the new one onto the motor.

To reassemble your device, follow these instructions in reverse order.