


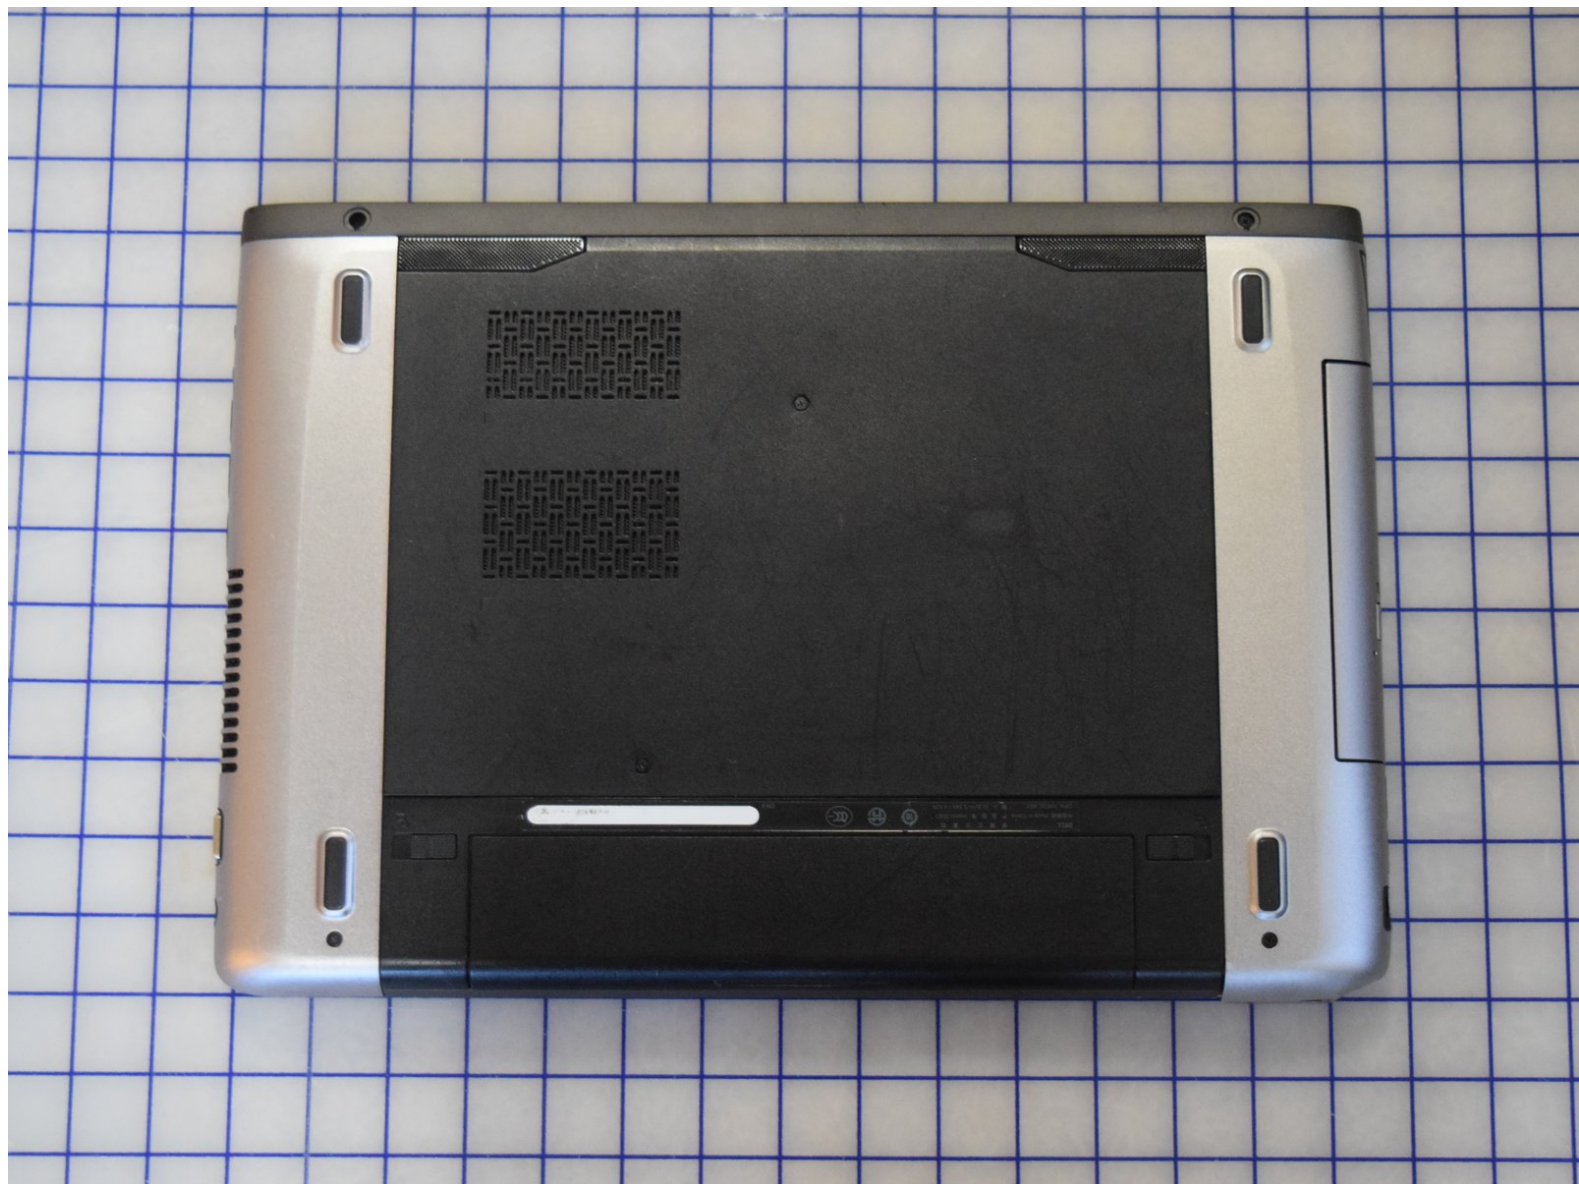

# Dell Vostro 3560 Back Panel Removal

This guide shows you how to remove the back panel of your laptop to access the hard drive, RAM, and CD-ROM.

Written By: Max Bareilles



---

## INTRODUCTION

This guide will show you how to remove the back panel of your Dell Vostro 3560 laptop to access the RAM, hard drive, and optical drive. Some of this guide was made with information from [this](#) video.

---



### TOOLS:



- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Identify your laptop



- Make sure you have the right laptop by checking the sticker.

## Step 2 — Remove Battery

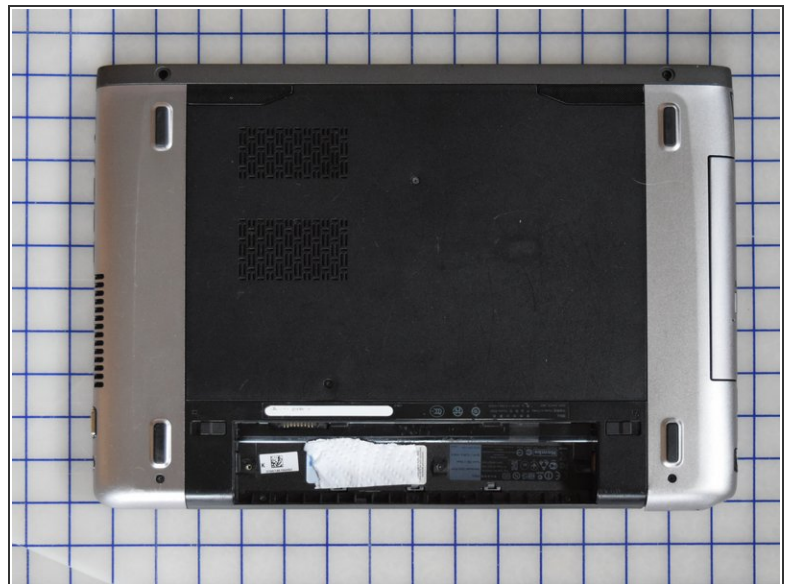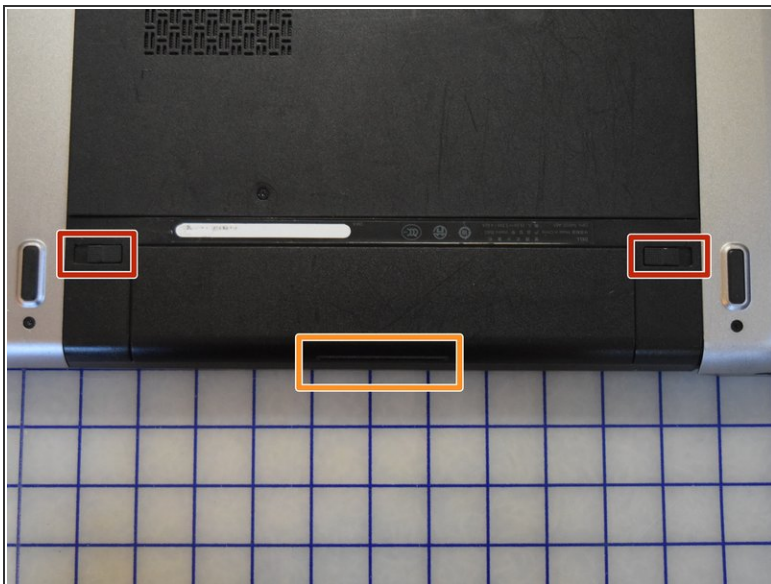

- Start with your PC shut off and upside down.
- Pull out tabs.
- Pull up on rail to remove battery.



### Step 3 — Remove Back Panel




- Remove the two screws:
  - One M2 Phillips screw (Fixed)
  - One 5-mm M2 Phillips screw

### Step 4



- Use a iFixit opening tool to remove the back panel.

## Step 5

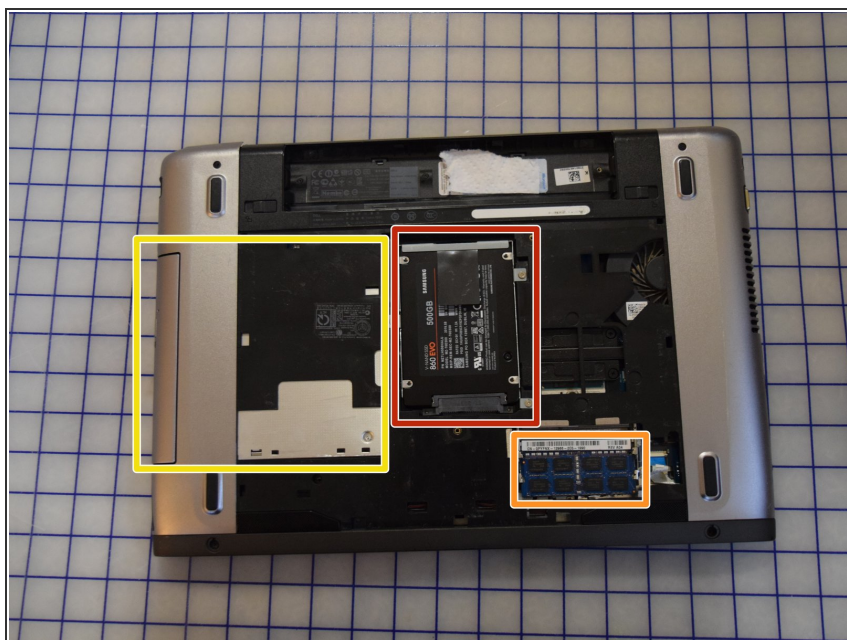

- From here you can access:
  - The hard drive
  - The RAM.
  - The CD Drive.

To reassemble your device, follow these instructions in reverse order.