




Dell Vostro 3560 RAM Replacement

Replace the RAM in Vostro 3560 laptop.

Written By: Max Bareilles

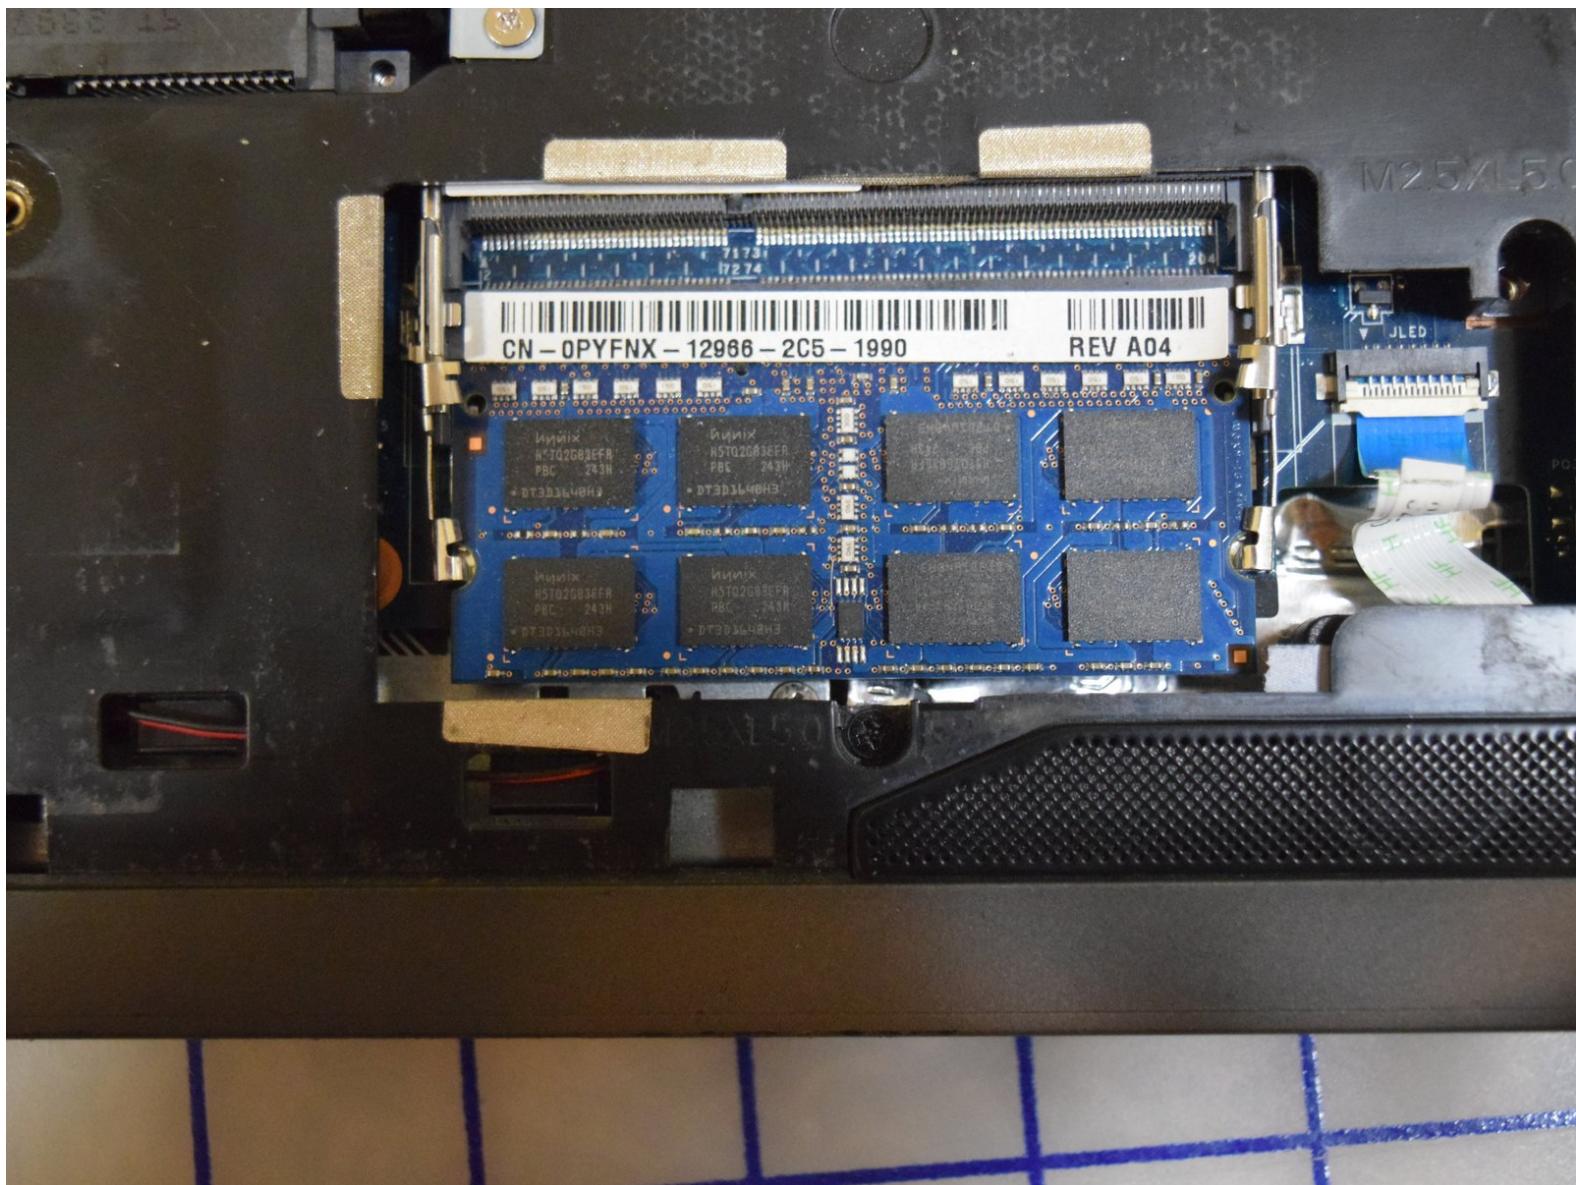

INTRODUCTION

This guide will show you how to replace the RAM in your Dell Vostro 3560 laptop. Some parts of this guide was made with info from [this](#) video.


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:



- [Generic 204 Pin SODIMM DDR3 RAM](#) (1)

Step 1 — Identify your laptop

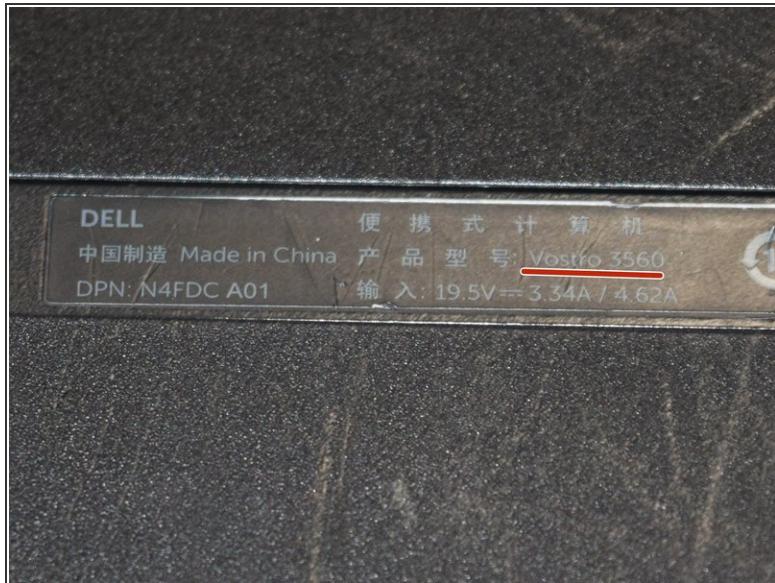

- Make sure you have the right laptop by checking the sticker.

Step 2 — Remove Battery

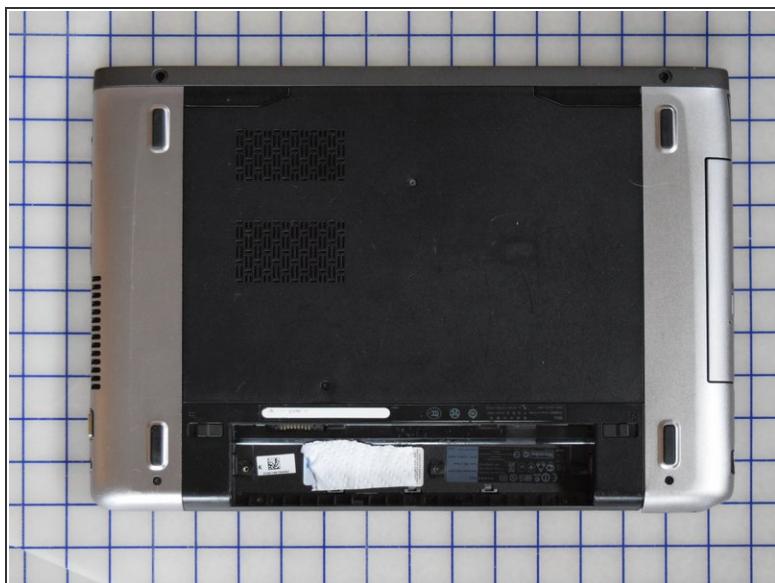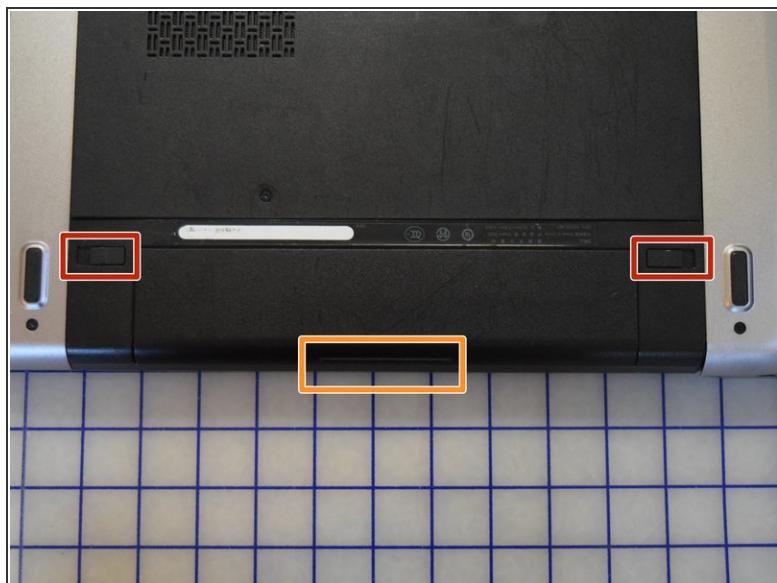

- Start with your PC shut off and upside down.
- Pull out tabs.
- Pull up on rail to remove battery.

Step 3 — Remove Back Panel




- Remove the two screws:
 - One M2 Phillips screw (Fixed)
 - One 5-mm M2 Phillips screw

Step 4




- Use a iFixit opening tool to remove the back panel.

Step 5

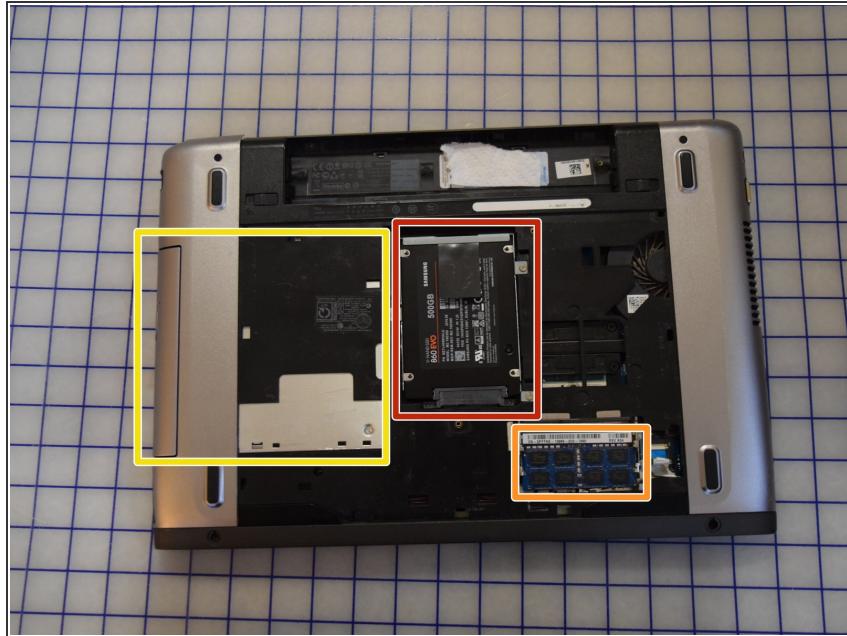

- From here you can access:
 - The hard drive
 - The RAM.
 - The CD Drive.

Step 6 — RAM Removal

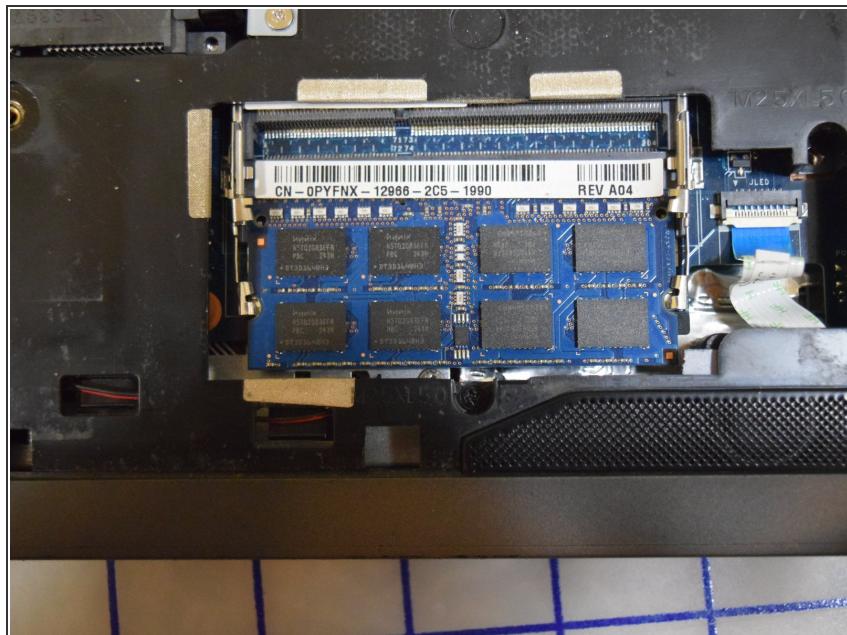

- We will focus on the RAM.

Step 7



- Pull out on the tabs to release RAM.
- Pull out the RAM.

(i) If you have two SoDIMMs installed, start with the top one and repeat the process for the lower one.

 When reinstalling ram, make sure it is fully inserted before fully locking it down.

To reassemble your device, follow these instructions in reverse order.